JVC

SERVICE MANUAL

COMPACT COMPONENT SYSTEM

MX-G700R

Area suffix

B ---------- U.K.
E ---- Continental Europe
EN ----- Northern Europe
EV ------- Eastern Europe

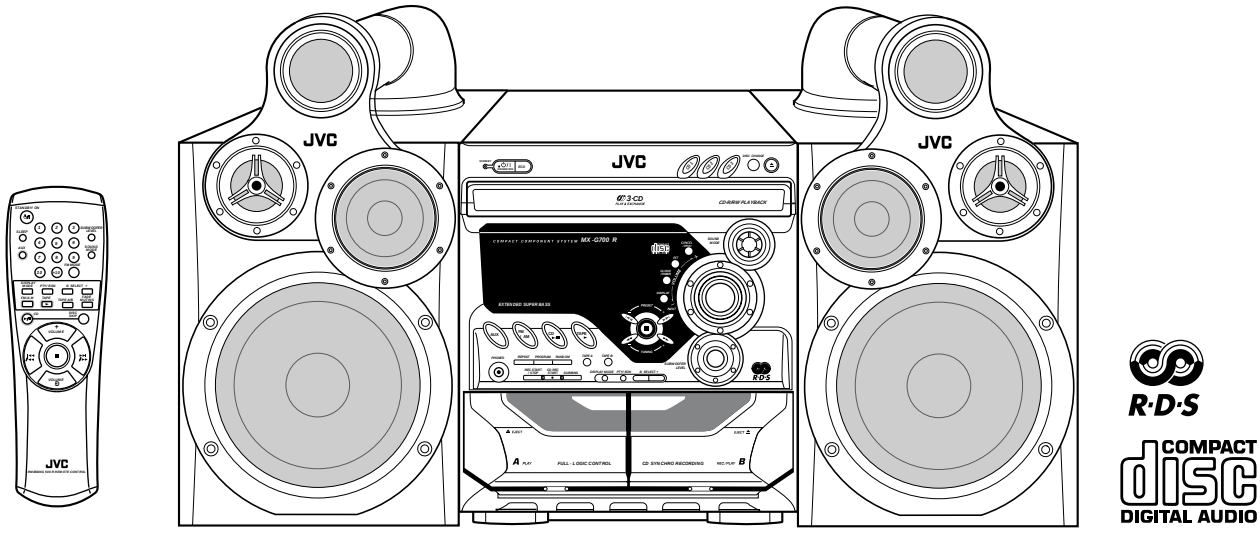

SP-MXGT700 CA-MXG700R SP-MXGT700

R·D·S

COMPACT disc DIGITAL AUDIO

Contents

Safety Precautions ---------- 1-2
Important for laser produbts ---------- 1-4
Preventing static electricity ---------- 1-5
Disassembly method ---------- 1-6
Wiring connection ---------- 1-19
Adjustment method ---------- 1-20
Flow of functional operation until TOC read ---------- 1-24
Maintenance of laser pickup ---------- 1-25
Replacement of laser pickup ---------- 1-25
Trouble shooting ---------- 1-26
Description of major ICs ---------- 1-29~42

COPYRIGHT © 2002 VICTOR COMPANY OF JAPAN, LTD.

No.21103
May. 2002

Safety Precautions

1. This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer`s warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (⚠) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage currnet check (Electrical shock hazard testing)
   After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.
   Do not use a line isolation transformer during this check.
   - Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).
   - Alternate check method
     Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500Ω 10W resistor paralleled by a 0.15μF AC-type capacitor between an exposed metal part and a known good earth ground. Measure the AC voltage across the resistor with the AC voltmeter.
     Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and meausre the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

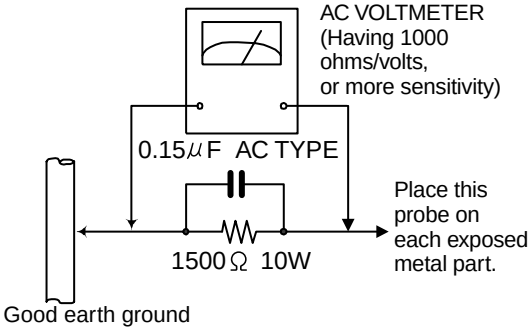

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

⚠ CAUTION

Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of preforming repair of this system.

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (▬), diode (▬) and ICP (●) or identified by the "⚠" mark nearby are critical for safety.

(This regulation does not correspond to J and C version.)

Safety precautions (U.K only)

1. This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits.
2. Any unauthorised design alterations or additions will void the manufacturer's guarantee ; furthermore the manufacturer cannot accept responsibility for personal injury or property damage resulting therefrom.
3. Essential safety critical components are identified by (⚠) on the Parts List and by shading on the schematics, and must never be replaced by parts other than those listed in the manual. Please note however that many electrical and mechanical parts in the product have special safety related characteristics. These characteristics are often not evident from visual inspection. Parts other than specified by the manufacturer may not have the same safety characteristics as the recommended replacement parts shown in the Parts List of the Service Manual and may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

Warning

1. Service should be performed by qualified personnel only.
2. This equipment has been designed and manufactured to meet international safety standards.
3. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
4. Repairs must be made in accordance with the relevant safety standards.
5. It is essential that safety critical components are replaced by approved parts.
6. If mains voltage selector is provided, check setting for local voltage.

⚠ ***CAUTION*** **Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of preforming repair of this system.**

Important for laser products

1.CLASS 1 LASER PRODUCT

2.DANGER : Invisible laser radiation when open and inter lock failed or defeated. Avoid direct exposure to beam.

3.CAUTION : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.

4.CAUTION : The compact disc player uses invisible laserradiation and is equipped with safety switches whichprevent emission of radiation when the drawer is open and the safety interlocks have failed or are de feated. It is dangerous to defeat the safety switches.

5.CAUTION : If safety switches malfunction, the laser is able to function.

6.CAUTION : Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

⚠ ***CAUTION*** **Please use enough caution not to see the beam directly or touch it in case of an adjustment or operation check.**

REPRODUCTION AND POSITION OF LABELS

CLASS 1
LASER PRODUCT

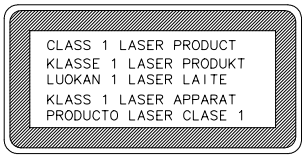

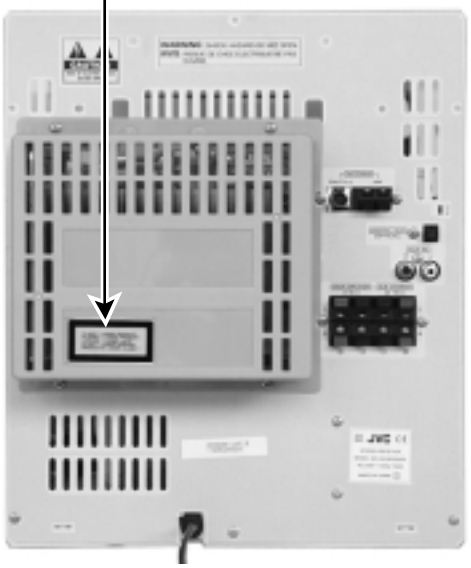

WARNING LABEL

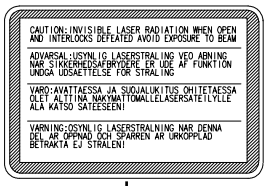
CAUTION:INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED AVOID EXPOSURE TO BEAM
ADVARSAL:USYNLIG LASERSTRALING VED ABNING NAR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGA UDSAETTELSE FOR STRALING
VARO:AVATTAESSA JA SUOJALUKITUS OHITETAESSA OLET ALTIINA NAKYMATTOMALLELASERSATEILYLLE ALA KATSO SATEESEEN!
VARNING:OSYNLIG LASERSTRALNING NAR DENNA DEL AR OPPNAD OCH SPARREN AR URKOPPLAD BETRAKTA EJ STRALEN!

Preventing static electricity

1. Grounding to prevent damage by static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

2. About the earth processing for the destruction prevention by static electricity

In the equipment which uses optical pick-up (laser diode), optical pick-up is destroyed by the static electricity of the work environment.
Be careful to use proper grounding in the area where repairs are being performed.

2-1 Ground the workbench

Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

2-2 Ground yourself

Use an anti-static wrist strap to release any static electricity built up in your body.

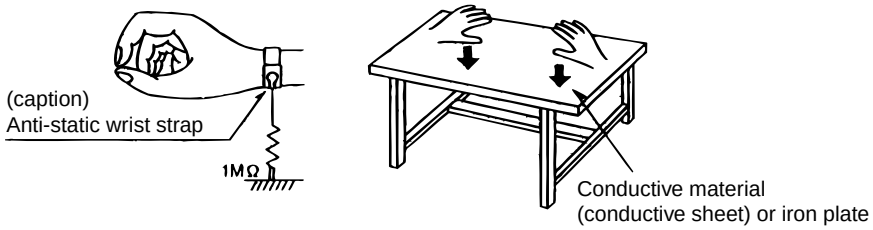

3. Handling the optical pickup

1. In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition. (Refer to the text.)

2. Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.

4. Handling the traverse unit (optical pickup)

1. Do not subject the traverse unit (optical pickup) to strong shocks, as it is a sensitive, complex unit.

2. Cut off the shorted part of the flexible cable using nippers, etc. after replacing the optical pickup. For specific details, refer to the replacement procedure in the text. Remove the anti-static pin when replacing the traverse unit. Be careful not to take too long a time when attaching it to the connector.

3. Handle the flexible cable carefully as it may break when subjected to strong force.

4. It is not possible to adjust the semi-fixed resistor that adjusts the laser power. Do not turn it

Attention when CD mechanism assembly is decomposed

***Please refer to "Disassembly method" in the text for pick-up and how to detach the CD mechanism assembly.**

1. Remove the CD changer unit.
2. Remove the CD changer mechanism.
3. Solder is put up before the card wire is removed from the pickup unit connector on the CD mechanism assembly.
   (When the card wire is removed without putting up solder, the CD pick-up assembly might destroy.)
4. Please remove solder after connecting the card wire with the pickup unit connector when you install picking up in the substrate.

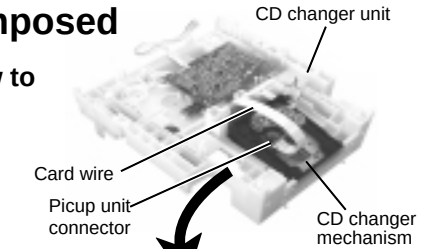

Fig.1

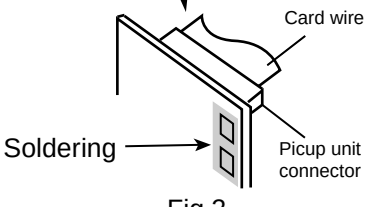

Fig.2

Disassembly method

■Removing the metal cover (See Fig.1)

1. Remove the three screws **A** attaching the metal cover on the back of the body.

2. Remove the six screws **B** attaching the metal cover on the both sides of the body.

3. Remove the metal cover from the body by lifting the rear part of the cover.

ONE POINT

■How to eject the CD tray (see fig.2)

Although it will end if the OPEN/CLOSE button is pushed when a power supply can be taken, when that is not right, CD tray will be opened manually.
Turn the loading pulley gear at the bottom of the CD changer unit as shown in Fig.2 and draw the CD tray toward the front.

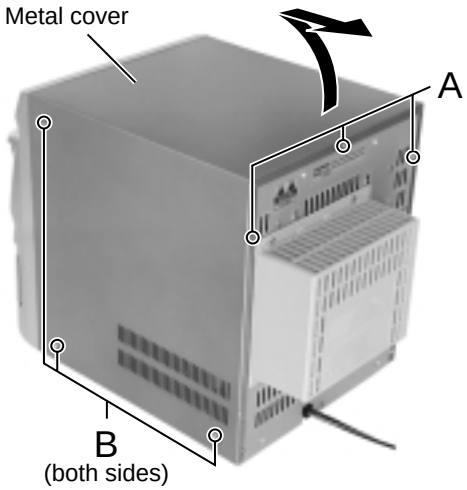

Fig.1

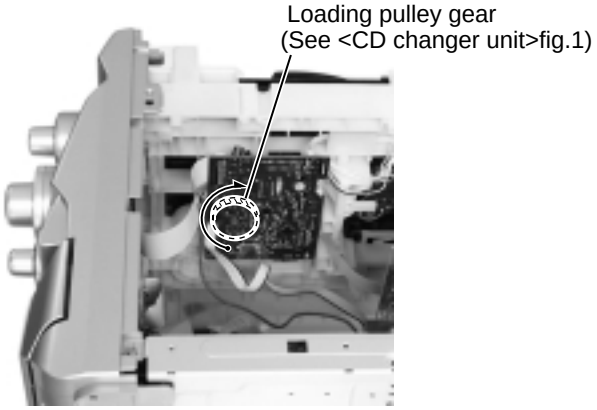

Fig.2

■Removing the CD tray fitting (See Fig. 3)

・Prior to performing the following procedure, eject the CD tray.

1. After drawing the lower part of the CD tray fitting toward the front, remove the five claws. Then, while moving the CD tray fitting upward, remove it.

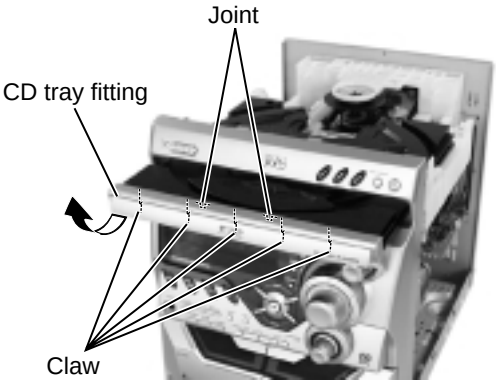

Fig.3

■Removing the CD changer unit (See Fig.4 to 7)

・Prior to performing the following procedure, remove the metal cover and CD tray fitting.

1. Remove the card wire attached to CD changer unit on the adhesion tape.

2. Disconnect the card wire from the connector CW105 on the CD board.

3. Disconnect the harness from the connector RCW6 on the main board and CW107 on the CD board.

4. Remove the two screws **C** attaching the CD changer unit to the rear panel.

5. Remove the two screws **D** attaching the CD changer unit to the both sides of front panel assembly.

6. Draw the CD changer unit upward from behind while pulling the rear panel outward.

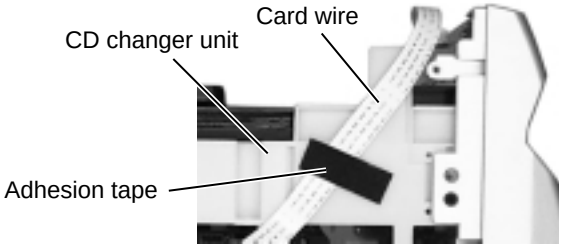

Fig.4

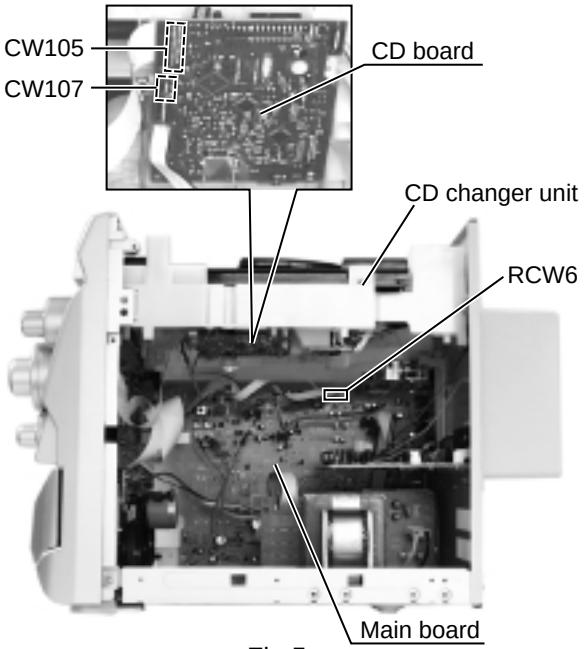

Fig.5

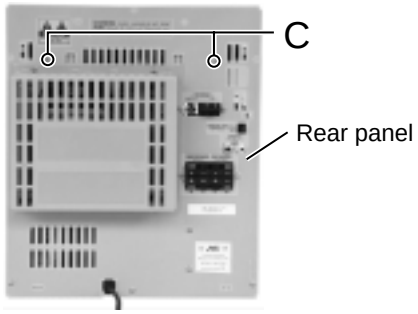

Fig.6

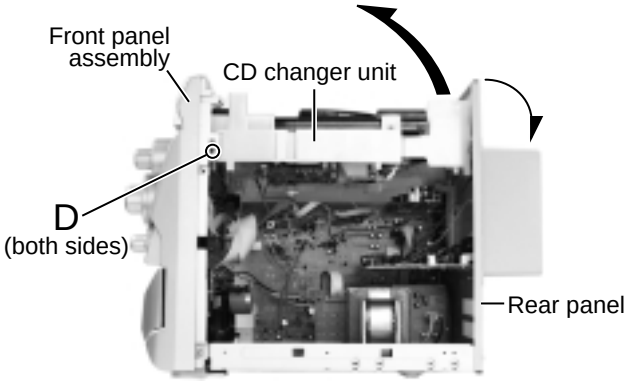

Fig.7

■Removing the front panel assembly (See Fig.8 to 10)

・ Prior to performing the following procedure, remove the metal cover and CD changer unit.

1. Disconnect the card wire from the connector FCW3 on the main board.
2. Disconnect the harness from the connector JCW1, JCW2 and HCW3 on the main board.
3. Remove the screw **E** attaching the earth terminal extending from the cassette mechanism assembly.
4. Remove the two screws **F** attaching the front panel assembly to the both sides of body.
5. Remove the screw **G** attaching the main board to the front panel assembly.
6. Remove the screw **H** attaching the front panel assembly to the bottom of body.
7. Release the two joints1 and two joints2, and detach the front panel assembly toward the front.

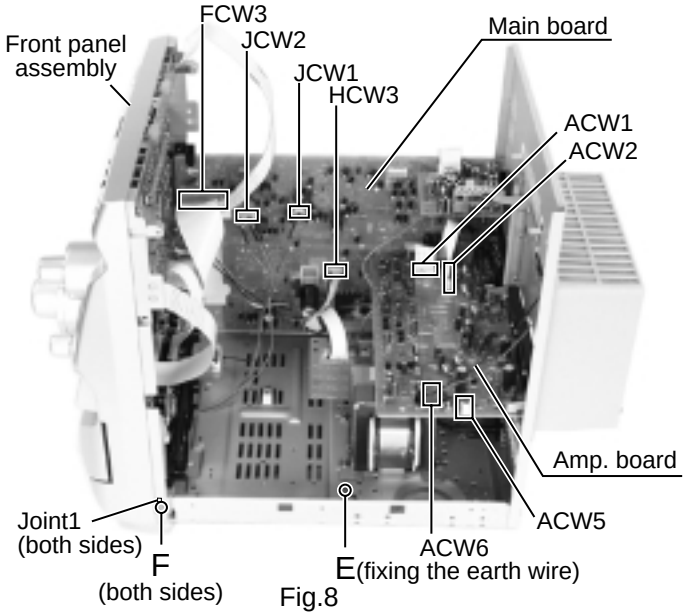

Fig.8

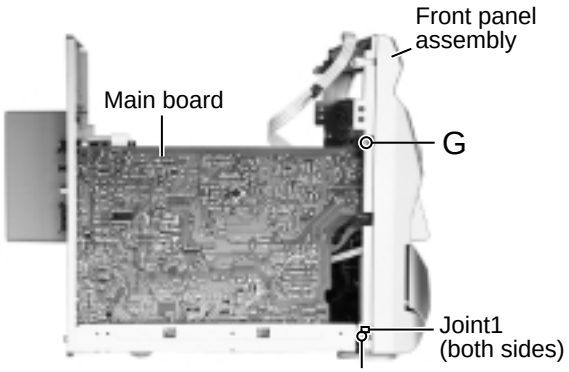

Fig.9

■Removing the heat sink & amp. board (See Fig.8, 11 and 12)

・Prior to performing the following procedure, remove the metal cover and CD changer unit.

1. Disconnect the card wire from the connector ACW1 and the harness from the connector ACW2, ACW5 and ACW6 on the amp. board.
2. Remove the four screws **I** attaching the heat sink cover to the rear panel. Remove the heat sink cover.
3. Remove the four screws **J** attaching the heat sink and two screws **K** attaching the speaker terminal to the rear panel.
4. After moving the heat sink upward, remove the claws. Then pull out the heat sink & amp. board inward.

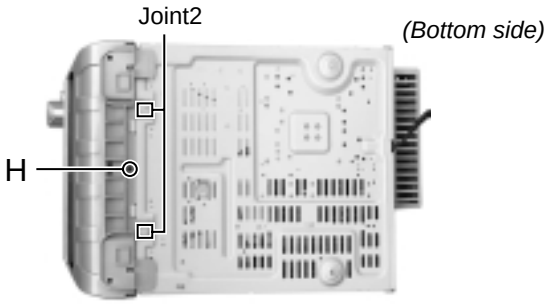

Fig.10

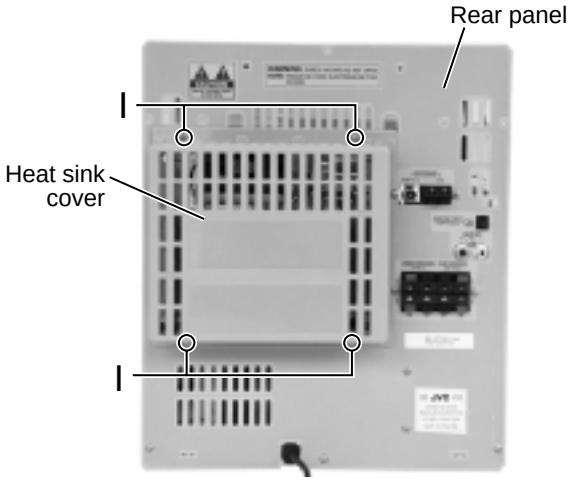

Fig.11

■Removing the fan motor (See Fig.8 and 12)

・Prior to performing the following procedure, remove the metal cover and heat sink cover.

1. Disconnect the harness from the connector ACW5 on the amp. board.
2. Remove the two screws **L** attaching the fan motor to the rear panel.

■Removing the tuner board (See Fig.12 and 13)

・Prior to performing the following procedure, remove the metal cover.

1. Disconnect the card wire from the connector CON01 on the tuner board.
2. Remove the two screws **M** attaching the tuner board to the rear panel.

■Removing the ECO board (See Fig.12 and 13)

・Prior to performing the following procedure, remove the metal cover, CD changer unit and heat sink & amp. board.

1. Disconnect the power cord from the connector PJ2 on the ECO board.
2. Disconnect the harness from the connector PJ3 and RCW5 on the ECO baord.
3. Remove the two screws **N** attaching the ECO board to the rear panel.

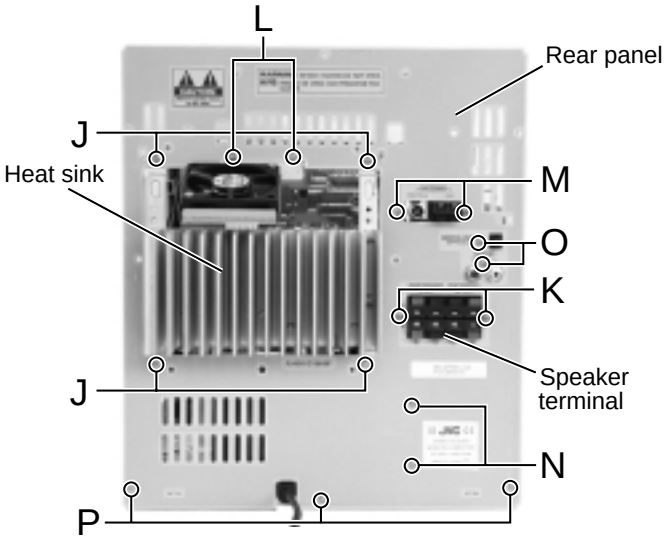

Fig.12

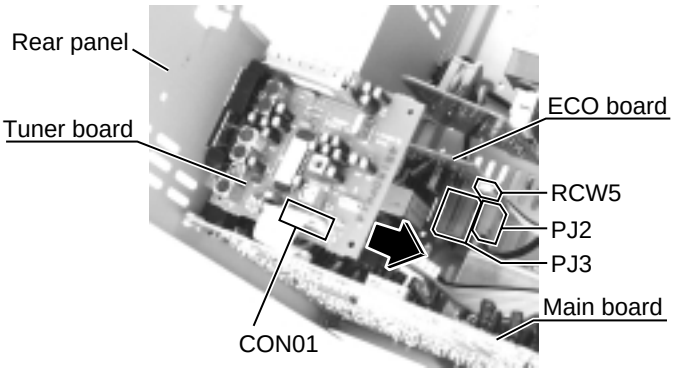

Fig.13

■Removing the rear panel (See Fig.12)

・Prior to performing the following procedure, remove the metal cover, CD changer unit, heat sink & amp. board and tuner board.

1. Remove the two screws **O** and three screws **P** attaching the rear panel.

■Removing the main board (See Fig. 14)

・Prior to performing the following procedure, remove the metal cover, CD changer unit and rear panel.

1. Disconnect the card wire from the connector FCW3 and the harness from the connector JCW1, JCW2 and HCW3 on the main board.

2. Disconnect the harness from the connector PCW1 on the fuse board.

3. Remove the screw **G** attaching the main board holder to the front panel assembly. (See Fig.9)

4. Remove the two screws **Q** attaching the heat sink to the bottom chassis.

■Removing the power cord (See Fig. 14)

・Prior to performing the following procedure, remove the metal cover, CD changer unit and rear panel.

1. Disconnect the power cord from the connector PJ2 on the ECO board (see fig.13) and pull up the power cord stopper upward.

■Removing the power ICs (See Fig.15 and 16)

・Prior to performing the following procedure, remove the metal cover, CD changer unit and heat sink & amp. board.

1. Remove the four screws **R** attaching the power ICs to the heat sink.

2. Unsolder the power ICs solder point.

■Removing the power transformer (See Fig .17)

・Prior to performing the following procedure, remove the metal cover, CD changer unit and heat sink & amp. board.

1. Disconnect the harness from the connector RCW1 on the trans. board.

2. Disconnect the harness from the connector PCW1 on the fuse board.

3. Remove the four screws **S** attaching the power transformer to the bottom chassis.

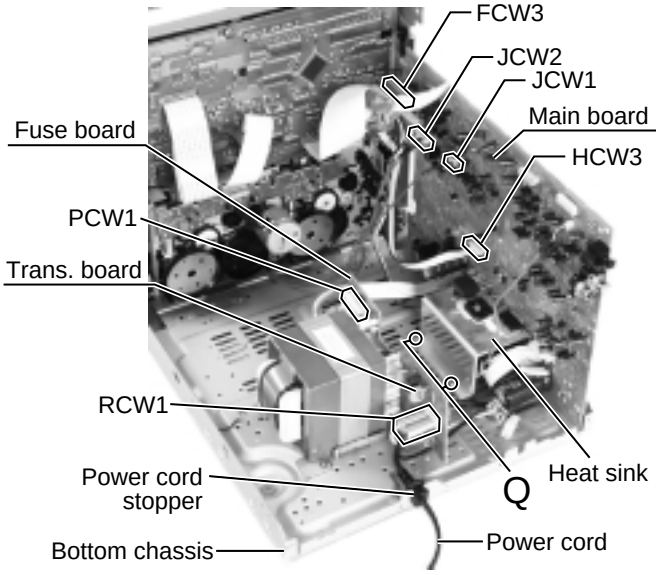

Fig.14

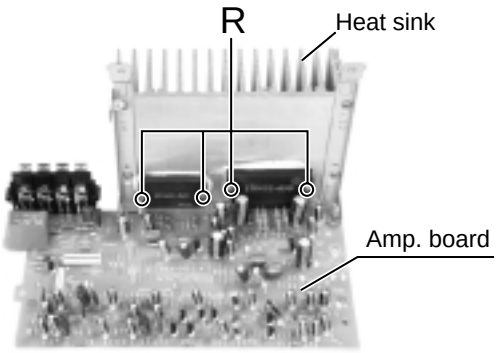

Fig.15

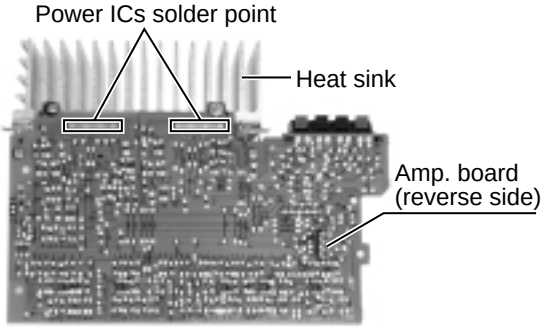

Fig.16

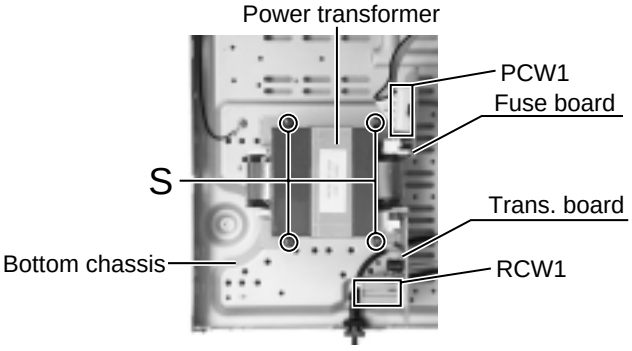

Fig.17

<Front panel assembly>

・Prior to performing the following procedure, remove the metal cover, the CD changer unit and the front panel assembly.

■Removing the CD switch board (See Fig.1)

1. Disconnect the card wire from the connector UCW1 on the CD switch board.
2. Remove the five screws **A** attaching the CD switch board.

■Removing the front board (See Fig.1)

1. Disconnect the card wire from the connector UCW3, UCW4, UCW5 and UCW6 on the front board.
2. Remove the six screws **B** attaching the front board.
3. Disconnect the card wire from the connector UCW2 on the front board.

■Removing the headphone jack board (See Fig.3)

・Prior to performing the following procedure remove the front board.

1. You can pull out the headphone jack board.

■Removing the front key board (See Fig.2 and 3)

・Prior to performing the following procedure, remove the front board.

1. Pull out the sound mode knob, volume knob and subwoofer level knob from front side.
2. Remove the twelve screws **C** attaching the front key board.
3. Remove the front board releasing the two tabs.
4. Disconnect the card wire from the connector UCW7 on the front key baord, if needed.

■Removing the cassette mechanism assembly (See Fig.3)

1. Disconnect the card wire from the connector on the mecha. board.
2. Remove the six screws **D** attaching the cassette mechanism assembly.

Front panel assembly (inner side)

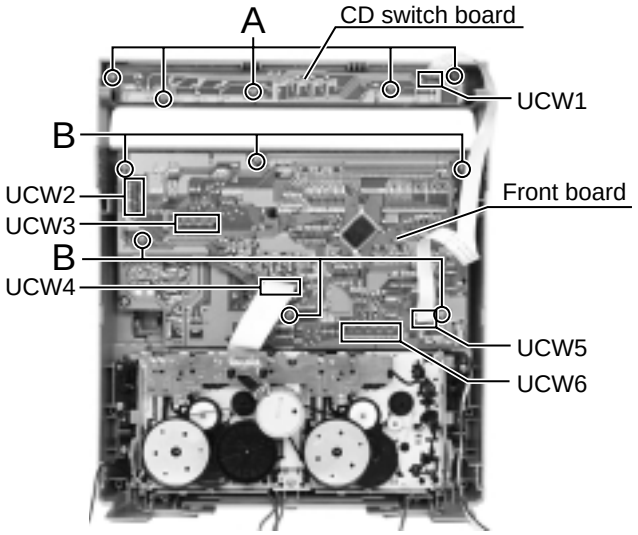

Fig.1

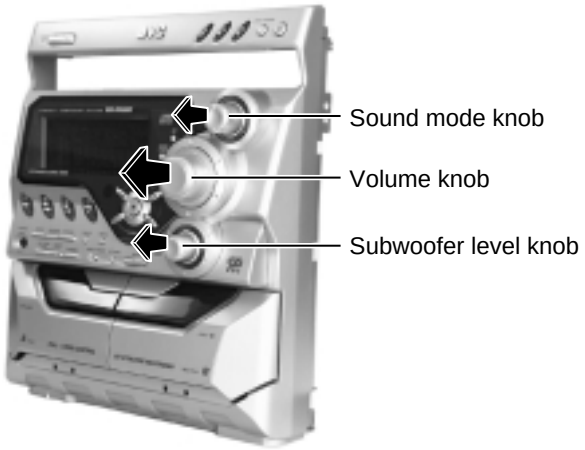

Fig.2

Front panel assembly (inner side)

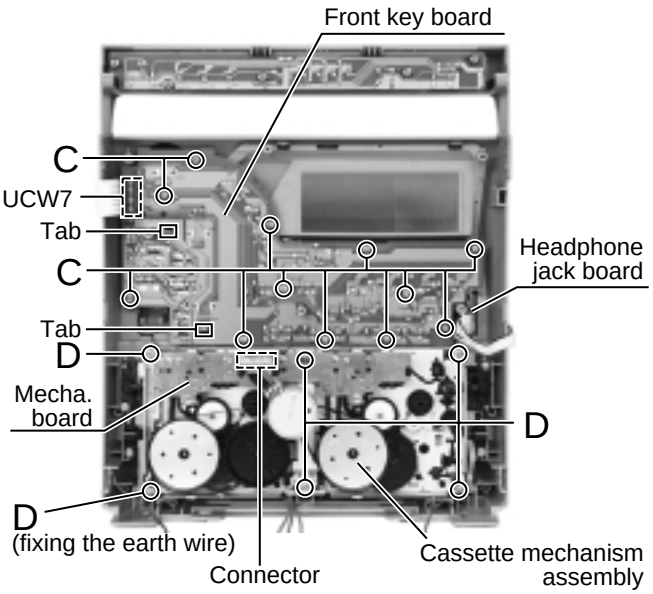

Fig.3

<CD changer unit>

・Prior to performing the following procedure, remove the CD changer unit.

■Removing the CD tray (See Fig.1 to 3)

1. Turn the black loading pulley gear on the under side of the CD changer unit in the direction of the arrow and draw the CD tray toward the front until it stops.

2. Disconnect the card wire from connector CW103 on the CD board.

3. Push down the two tray stoppers marked **a** and pull out the CD tray.

CD changer uint (reverse side)

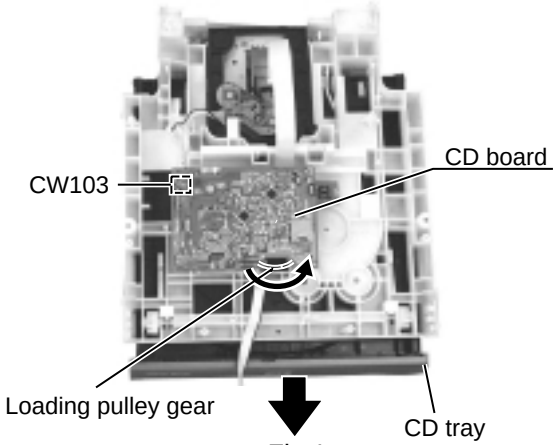

Fig.1

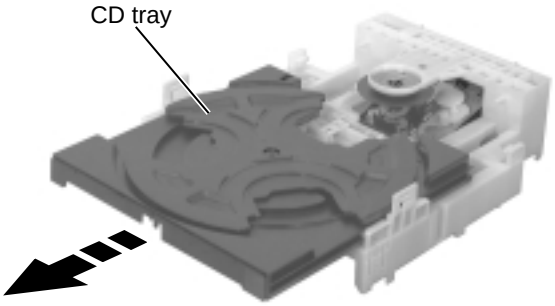

Fig.2

■Reinstall the CD tray (See Fig.4 and 5)

1. Align the gear-cam with the gear-tray as shown fig.4, then mount the CD tray.

2. When assembling the CD tray, take extreme care not engage with gear - synchro.

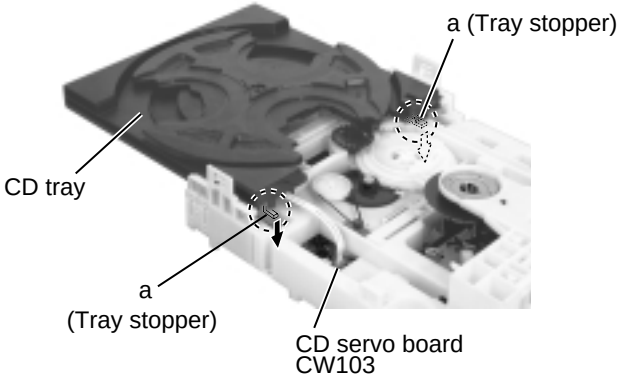

Fig.3

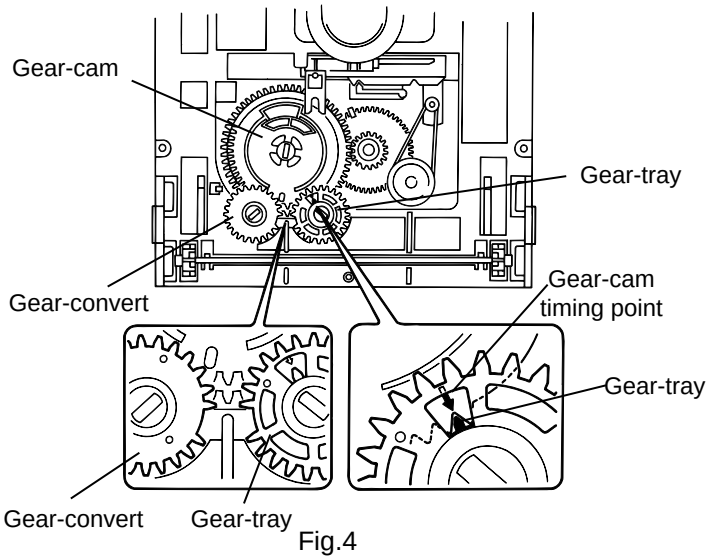

Fig.4

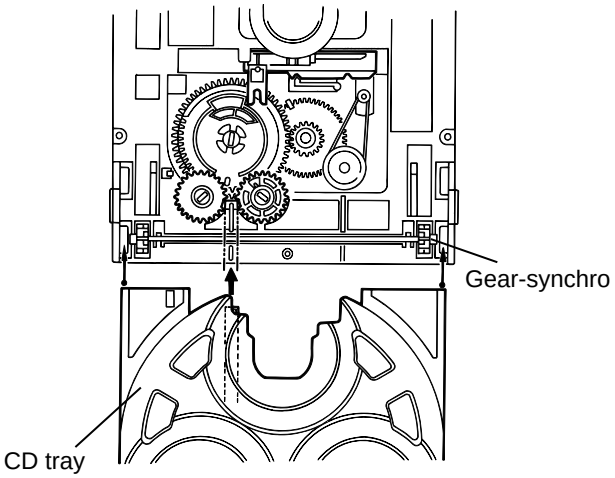

Fig.5

■Removing the sensor board / the turn table motor assembly (See Fig.6 to 8)

・ Prior to performing the following procedure, remove the CD tray.

1. Remove the screw **A** attaching the sensor board and release the two tabs **b** attaching the sensor board on the under side of the CD tray.

2. Disconnect the harness from connector CW1 on the sensor board and release the harness from the two hooks **c**. Remove the sensor board.

3. Remove the screw **B** attaching the turn table. Detach the turn table from the tray.

4. Pull outward the tab marked **d** attaching the turn table motor assembly on the upper side of the tray and detach the turn table motor assembly from the tray.

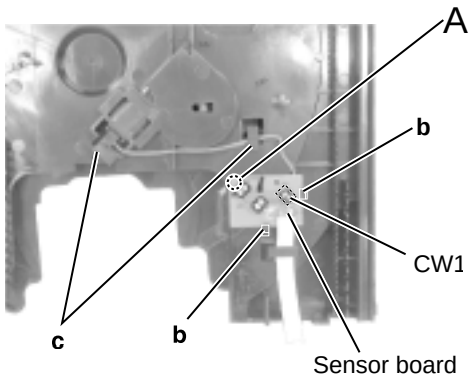

Fig.6

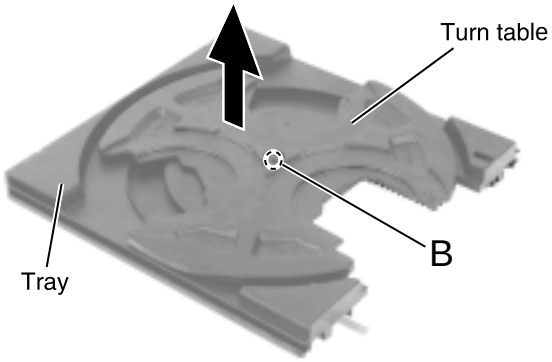

Fig.7

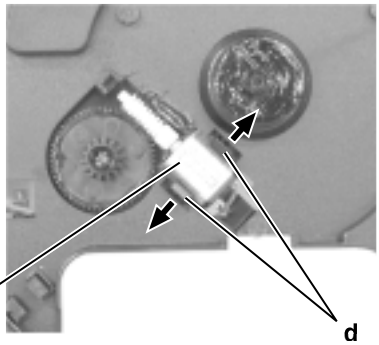

Fig.8

■Removing the belt, the CD board and the switch board (See Fig.9 and 10)

・Prior to performing the following procedure, remove the CD tray.

1. Detach the belt from the pulley on the upper side of the CD changer unit (Do not stain the belt with grease).

2. Disconnect the card wire from the pickup unit connector on the under side of the CD changer unit.

   Attention : Solder is put up before the card wire is removed from the pick-up unit connector on the CD mechanism assembly.
   (When the card wire is removed without putting up solder, the CD pick-up unit assembly might destroy.)

3. Disconnect the motor wire harness from connector on the CD board.

4. Remove the screw **C** attaching the switch board and release the two tabs **e** attaching the switch board outward and detach the switch board.

5. Remove the two screws **D** attaching the CD board. First release the two tabs **f** and two tabs **g** attaching the motor, then release the CD board.

※If the tabs **f** and **g** are hard to release, it is recommendable to unsolder the two soldered parts on the motor terminal of the CD board.

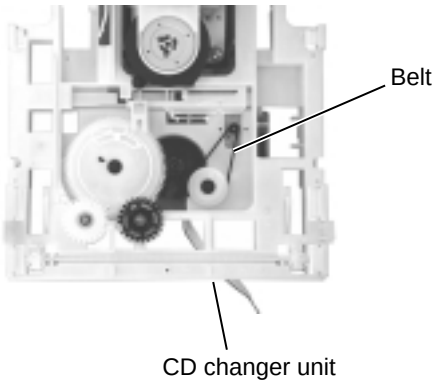

Fig.9

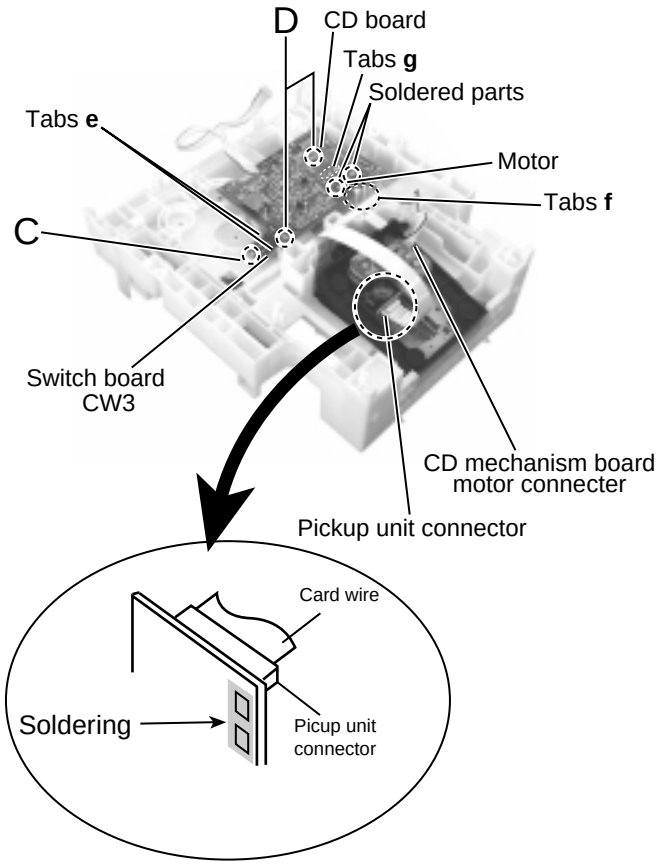

Fig.10

■ Removing the CD mechanism holder assembly (mechanism included) (See Fig.11 to 14)

1. Disconnect the harness from connector on the CD mechanism board in the CD mechanism assembly on the under side of the CD changer unit. Disconnect the card wire from the pickup unit connector.

   Attention : Solder is put up before the card wire is removed from the pick-up unit connector on the CD mechanism assembly. (Refer to Fig.10)
   (When the card wire is removed without putting up solder, the CD pick-up unit assembly might destroy.)

2. Remove the screw **E** attaching the shaft on the right side of the CD mechanism holder assembly. Pull outward the stopper fixing the shaft on the left side and remove the CD mechanism holder assembly from behind in the direction of the arrow **y**.

3. Turn the CD mechanism holder assembly half around the lift up slide shaft **h** of the CD mechanism holder assembly until the turn table is reversed, and pull out the CD mechanism holder assembly.

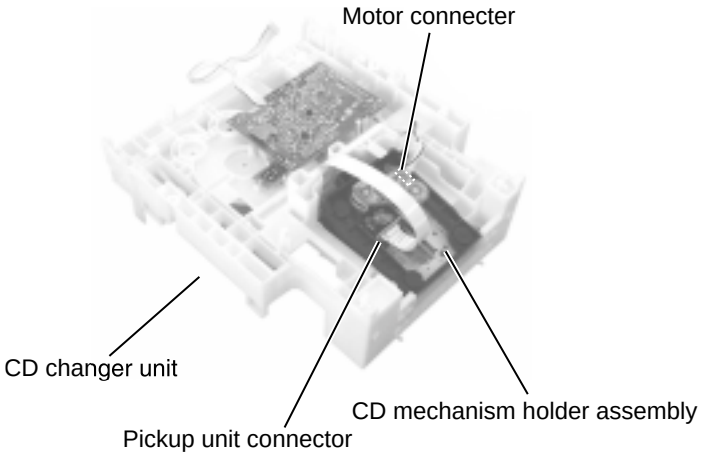

Fig.11

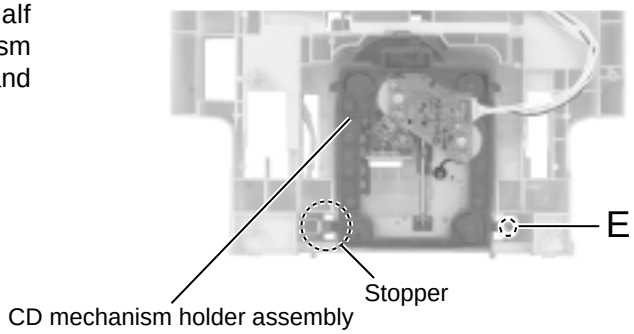

Fig.12

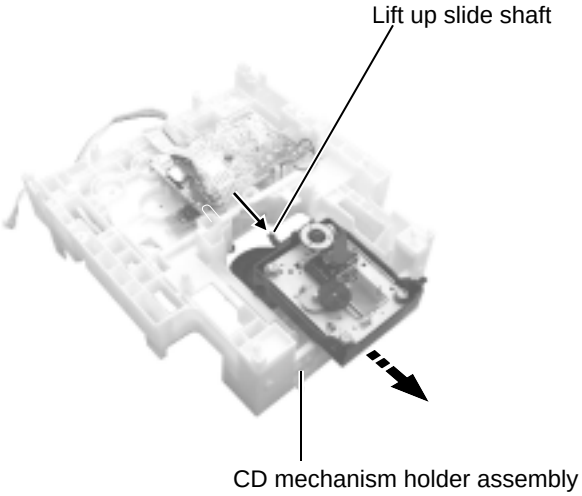

Fig.14

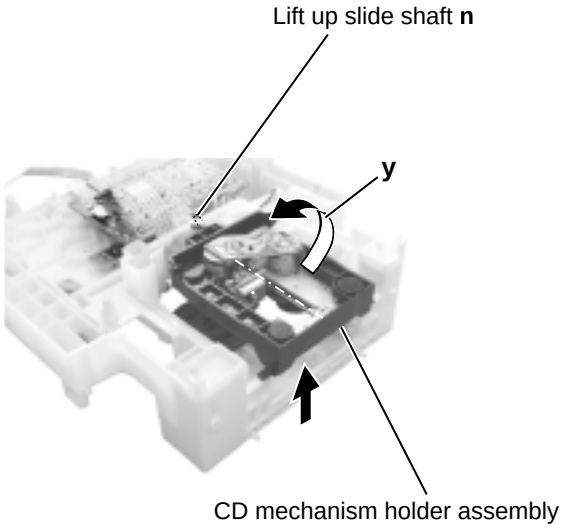

Fig.13

CD mechanism section>

emoving the CD mechanism holder from the CD hager unit.
Refer to "Removing the CD mechanism holder ssembly")

■ emoving the pickup unit (ee Fig.1)

1. Removing the cut washer on the feed gear sleeve and pull out the feed gear.
2. Remove the two screws fixing the pickup shaft.
3. Removing the pickup unit.

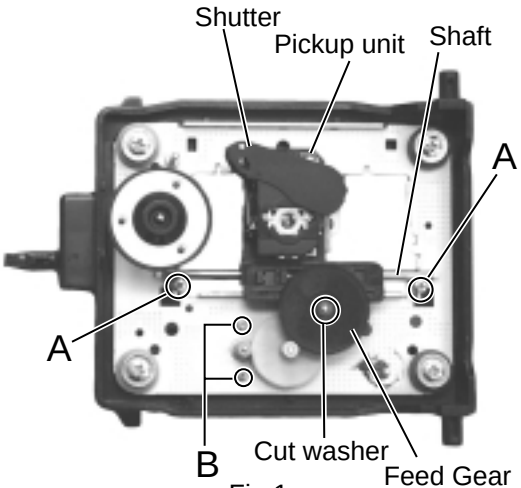

Fig.1

■ emoving the motor board See Fig.2)

1. Unsolder the motor terminal on the motor board.
2. Remove the moter board.

■ emoving the feed motor (ee Fig.1)

Remove the two motor fixing screws at and removing the feed motor.

■ emoving the spindle motor

he spindle motor cannot be removed as a single nit.
hen removing the spindle motor, change the chasis nd turntable together as aunit.

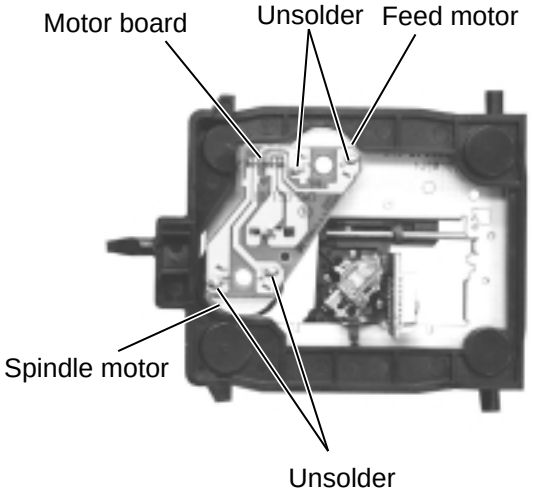

Fig.2

<Cassette mechanism section>

- Removing the record/playback mechanism.

■ Removing the R/P head.

1. Remove the screw **A** on the right side of the R/P head.(Fig.1, Fig.2)
2. Remove the screw **B** on the left side of the R/P head.(Fig.1, Fig.2)

■ Remove the erase head.

Remove the screw **C** fixing the erase head.(Fig.1)

■ Removing the pinch roller.

1. Pull out the pinch roller by opening the pinch roller stopper outward to unlock .(Fig.3)
2. When reassembling the pinch roller, refer to fig. 4 to hook up the spring.

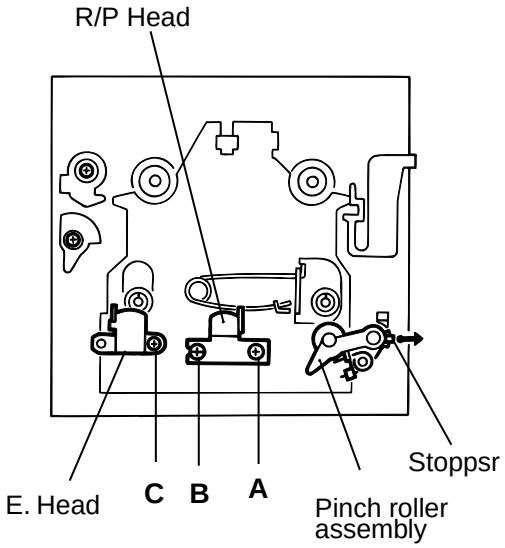

Fig.1

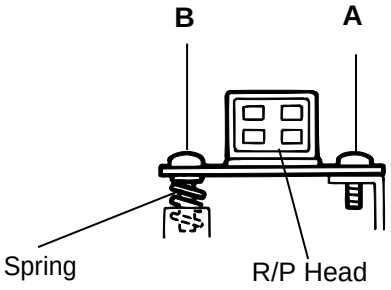

Fig.2

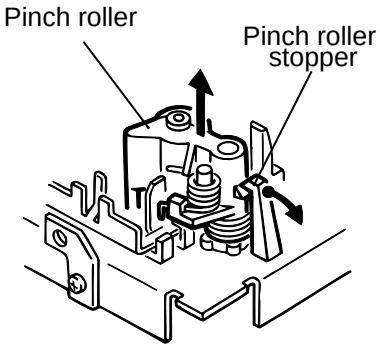

Fig.3

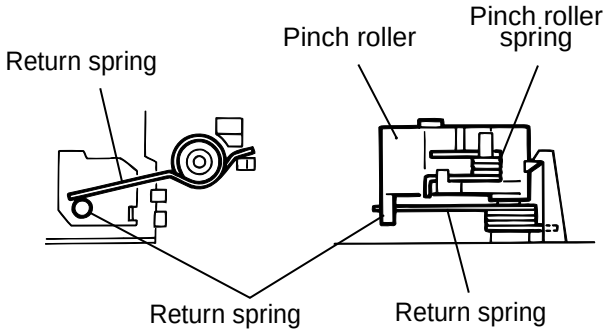

Fig.4

■ Removing the motor.

1. Remove the two screws **D** fixing the motor. Be careful to grease's splash when the drive belt comes off.(Fig.5, Fig.6)
2. Unsolder the motor terminal.(Fig.5)

■ Removing the mechanism board.

1. Unsolder the four parts **a** on the solenoid coil terminal.(Fig.5)
2. Remove the two screws **E** fixing the board.(Fig.5)
3. Unhook the three parts **b** from the board.(Fig.5)
4. Remove the mechanism board.(Fig.5)

■ Removing the flywheel.

Remove the cut-washers at **c** and **d** from the capstan shaft, then remove the flywheel. When reassembling the flywheel, be sure to use new washers as they cannot be reused.(Fig.8, Fig.9)

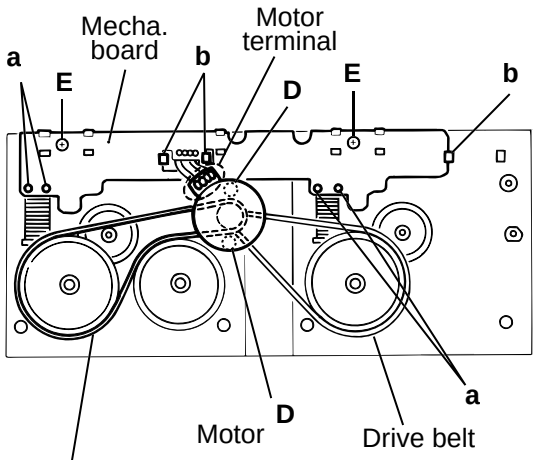

Fig.5

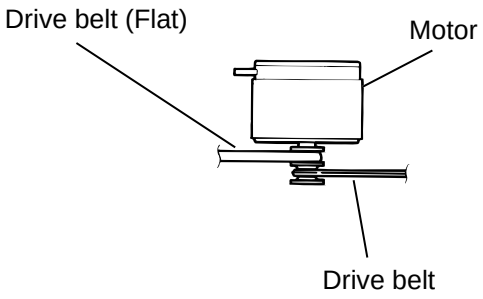

Fig.6

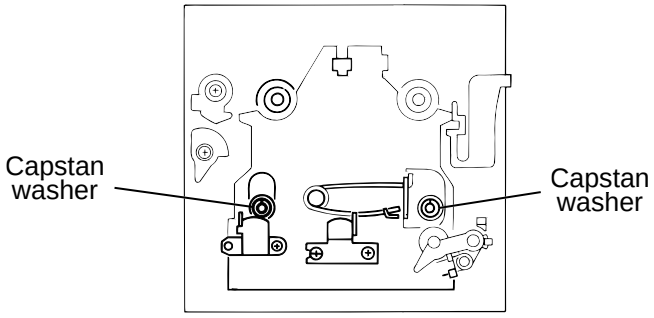

Fig.7

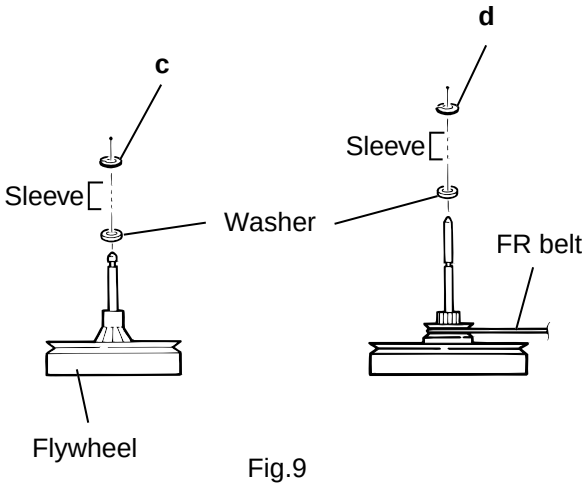

Fig.9

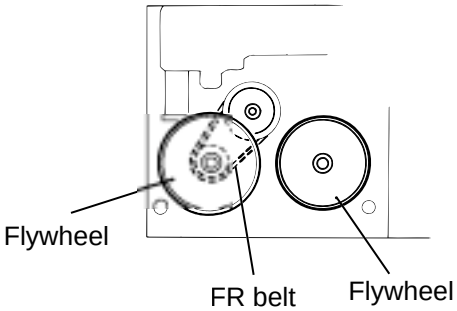

Fig.8

< Speaker section >

● It is exchange in a unit.
Please do not decompose.

■ Removing the net assembly (See Fig. 1)

1. Remove the four bosses attaching the net assembly and remove the net assembly.

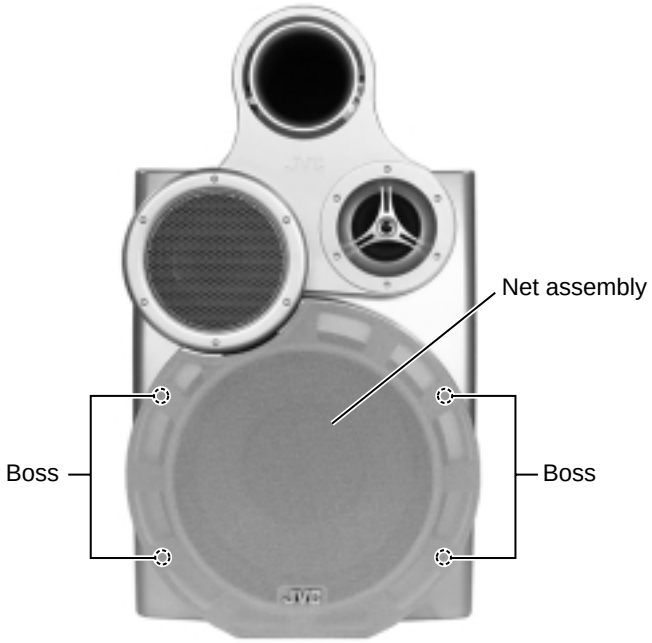

Fig.1

Wiring connection

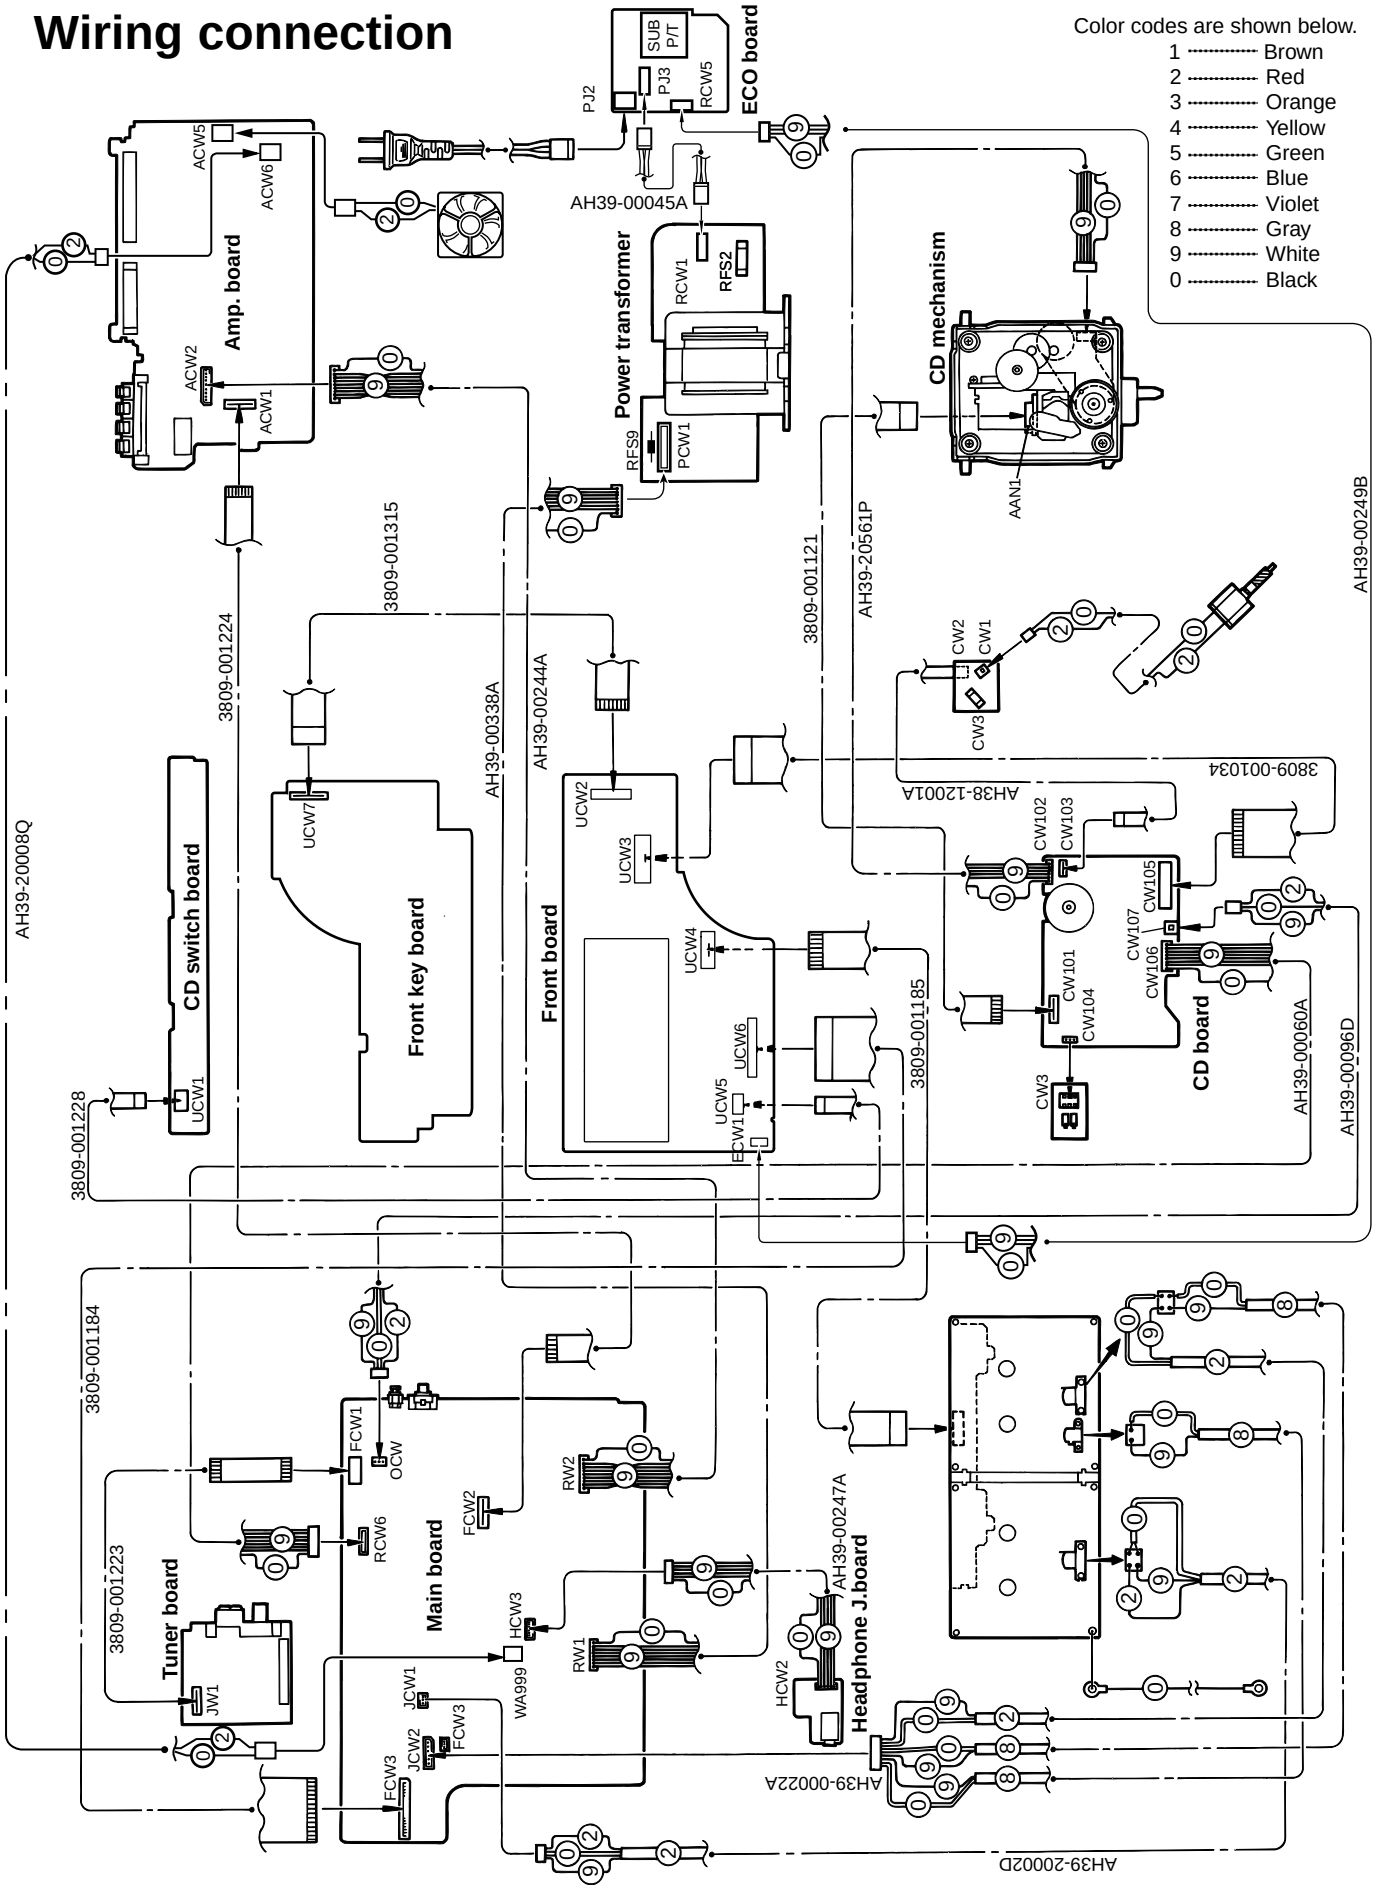

Adjustment method

1. Tuner

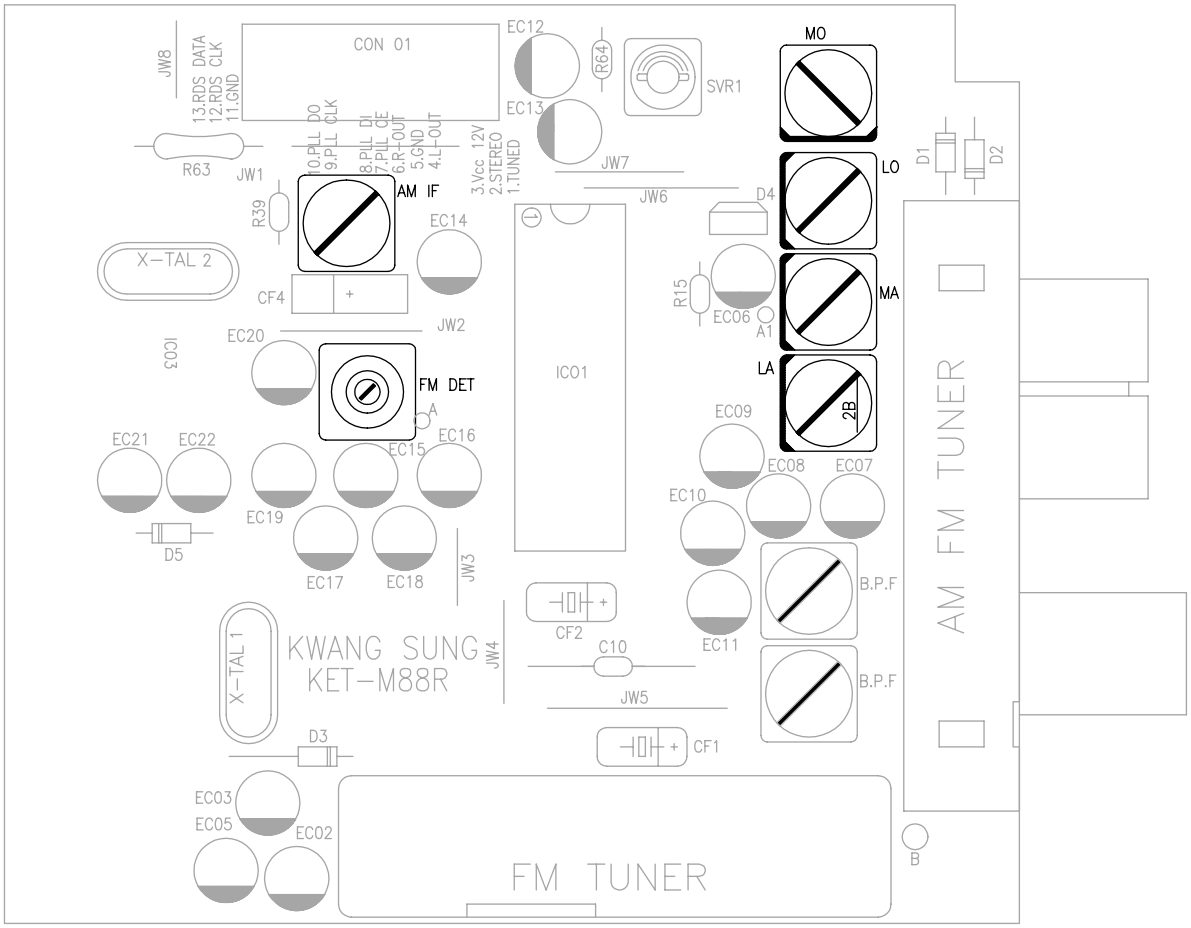

* Adjustment Location of Tuner PCB

ITEAM	AM(MW) OSC Adjustment	AM(MW) RF Adjustment	LW OSC Adjustment	LW RF Adjustment
Received FREQ.	522~1629 KHz	594 KHz	144~288 KHz	150 KHz
Adjustment point	MO	MA	LO	LA
Output	1~7.0V	Maximum Output(Fig.1)	2~7.0V	Maximum Output(Fig.1)

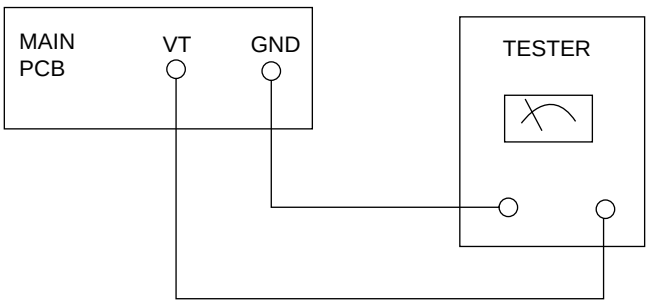

Fig.1 OSC Voltage

FM THD Adjustment	
SSG FREQ.	98 MHz
Adjustment point (FM DET)	FM DETECTOR COIL
Output	60 dB
Minumum Distortion (0.4% below) (Fig.2)	

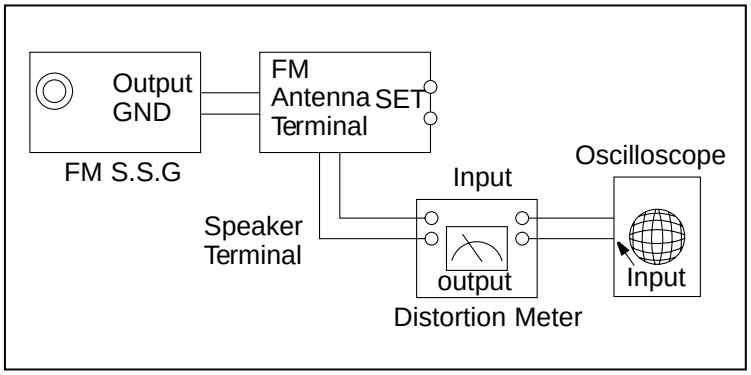

Fig.2 IF CENTER and THD Adjustment

FM Search Level Adjustment	
SSG FREQ.	98 MHz
Adjustment point (SVR1)	BEACON SENSITIVITY SEMI-VR(20KΩ)
Output	28 dB(± 2dB)
Adjust SVR1 so that "TUNED" of FLT is lighted (Fig.3)	

*Adjust FM S.S.G level to 28dB

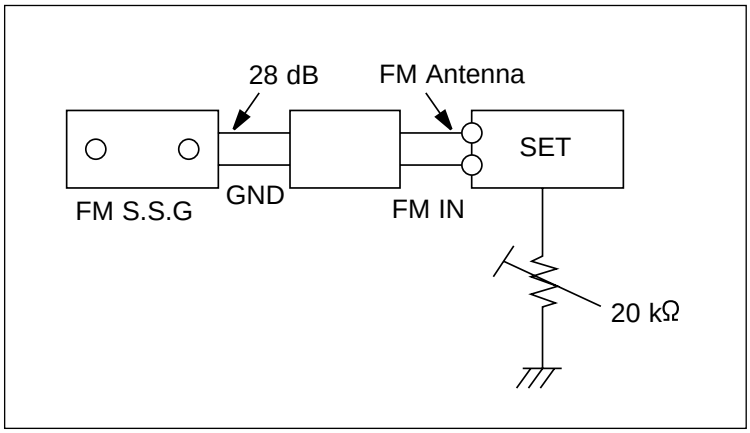

Fig.3 FM Auto Search Level Adjustment

AM(MW) I.F Adjustment	
SSG FREQ.	450 kHz
Frequency	522 kHz
Adjustment point	AM IF
Maximum output (Fig.4)	

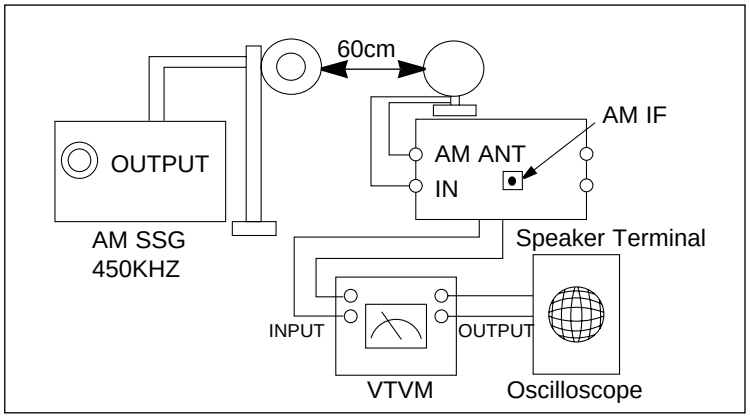

Fig.4 AM I.F Adjustment

2. Cassette Deck

■ To adjust tape speed

Notes

1) Measuring tape:
   i) VT-712/MTT-111(or equivalent)
   (Tapes recorded with 3kHz)
   ii) AC-225/MTT-5512(or equivalent)

2) Connect the cassette deck to the frequency counter as in fig.1.

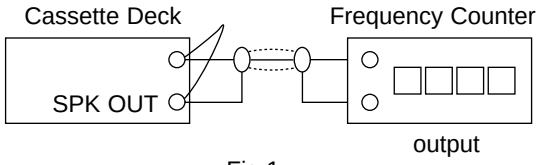

Fig.1

Step	Item	Pre-Setup Condition	Pre-Setup	To Adjust	Standard	Remark
1	NOR SPEED Control	OUT (connected to the frequencycounter)	1) Deck 1:VT-712 2) Press PLAY SW button 3) Deck 2:Same as above	Turn VSR1 to left and right (FRONT PCB)	3KHz	±1% range

■ To adjust plabyback level/REC

Notes

1) Before the actual adjustment, clean the play/recording head.

2) Measuring tape :
   i) VT-703/MTT-114N(or equivalent 10kHz AZIMUTH control)
   ii) AC-225/MTT-5512(or equivalent)

3) The cassette deck is connections as shown in fig.2.

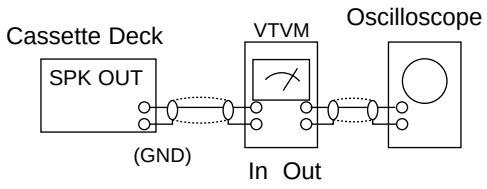

Fig.2

1. Adjust Deck 1 Play Level

Step	Item	Pre-Setup Condition	Pre-Setup	To Adjust	Standard	Remark
1	AZIMUTH	SPK OUT (VTVM is connected to the scope)	After putting VT-703 into Deck 1 - Press FWD PLAY button.	Turn the control screw to as shownin Fig.3.	Max output and same phase (both channels)	After adjustment secure it with REGION LOCK.

2. Adjust Deck 2 Play Level/REC BIAS

Step	Item	Pre-Setup Condition	Pre-Setup	To Adjust	Standard	Remark
1	AZIMUTH	SPK OUT (VTVM is connected to the scope)	After putting VT-703 into Deck 2 1)Press FWD PLAY button.	Turn the control screw to as shown in Fig.3.	Max output and same phase (both channels)	After adjustment secure it with REGION LOCK.
2	Recording Bias Voltage	Fig.4	After putting AC-225 into Deck 2 1)Press REC PLAY button. 2)MAIN PCB JCW3, connectted to VTVM	Turn JSR2L, JSR2R to the right and left	7mV(±0.5mV)	

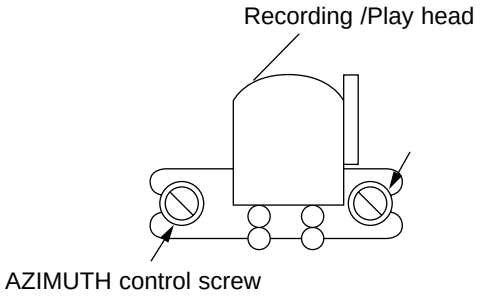

Fig.3

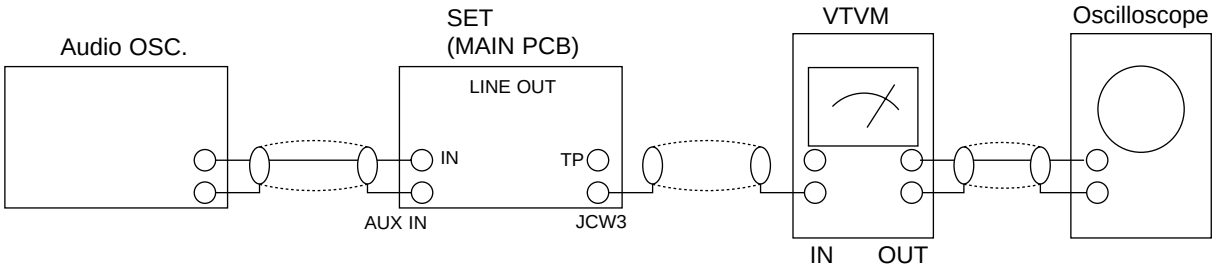

Fig.4

Flow of functional operation until TOC read

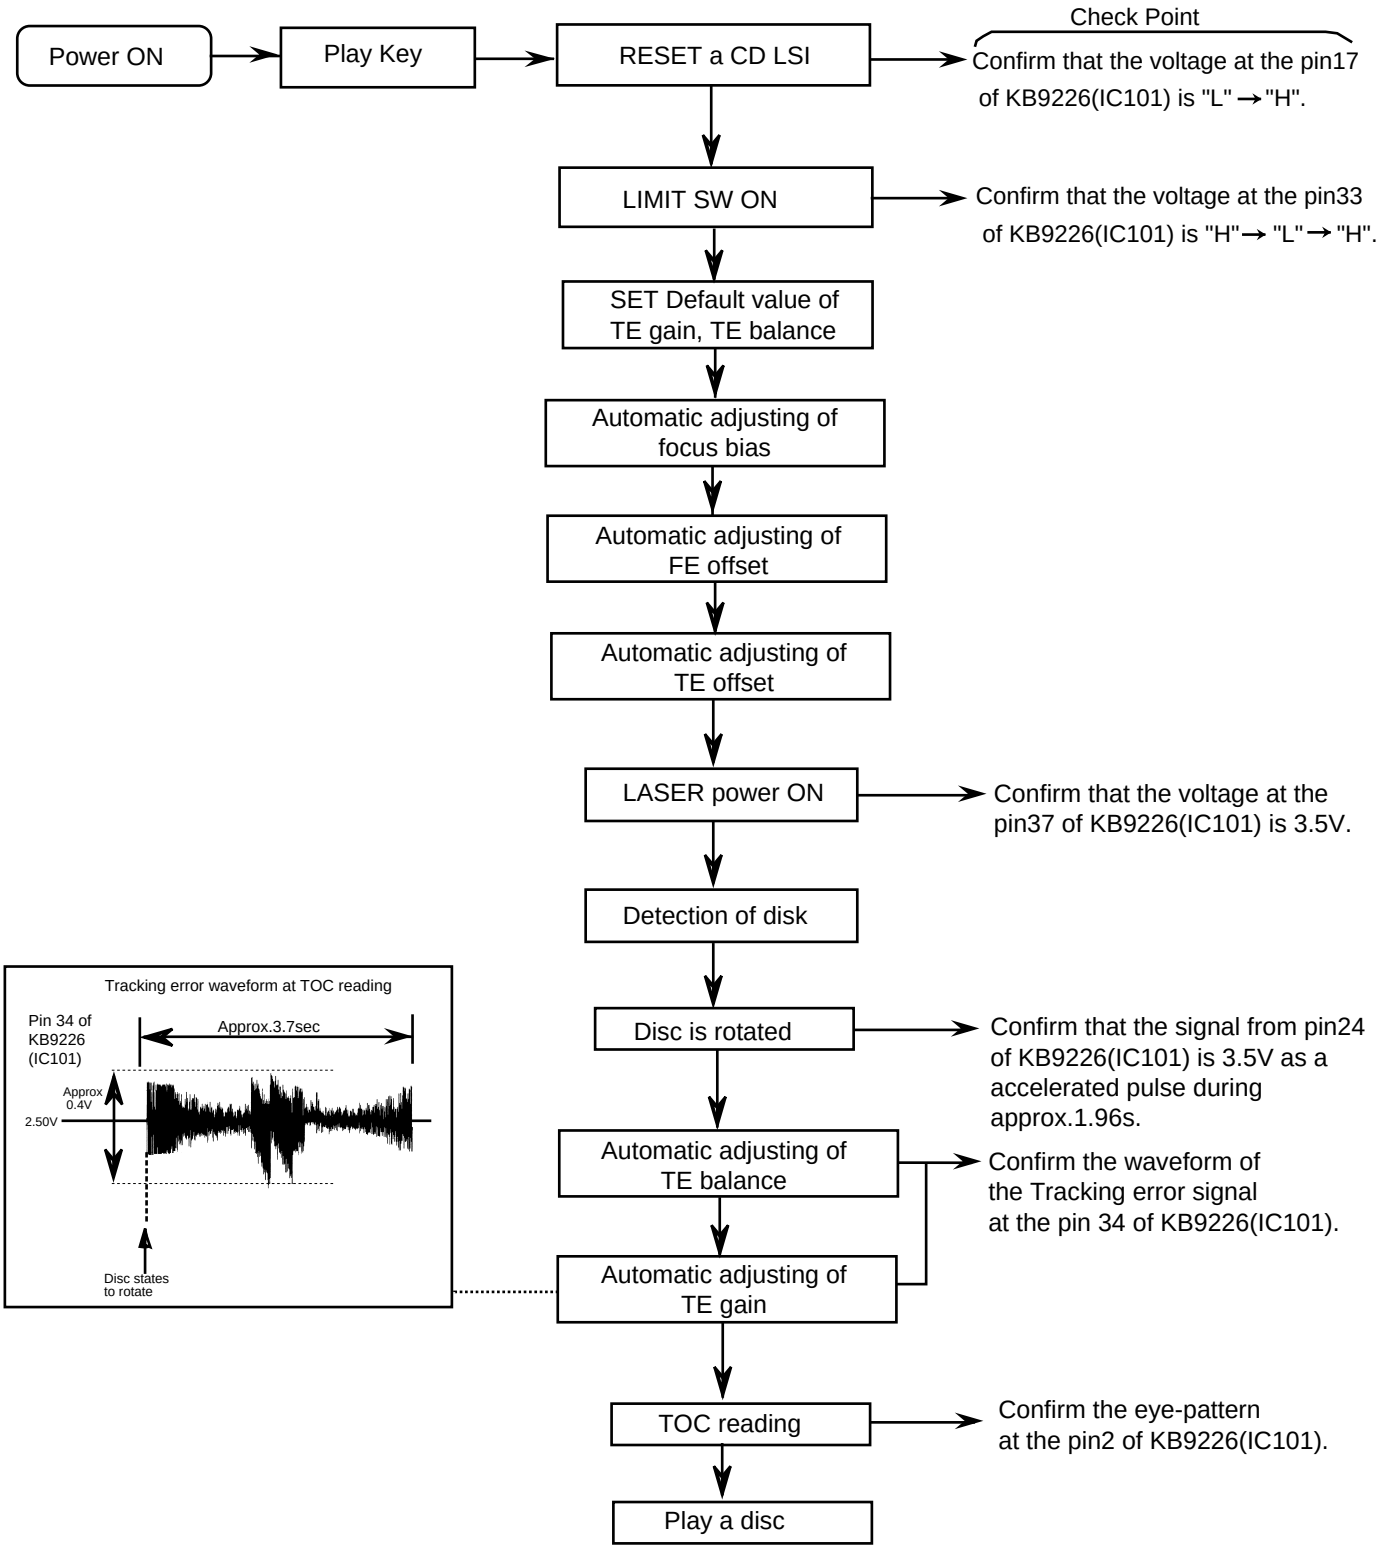
Power ON
Play Key
RESET a CD LSI
Check Point
Confirm that the voltage at the pin17 of KB9226(IC101) is "L" → "H".
LIMIT SW ON
Confirm that the voltage at the pin33 of KB9226(IC101) is "H" → "L" → "H".
SET Default value of TE gain, TE balance
Automatic adjusting of focus bias
Automatic adjusting of FE offset
Automatic adjusting of TE offset
LASER power ON
Confirm that the voltage at the pin37 of KB9226(IC101) is 3.5V.
Detection of disk
Tracking error waveform at TOC reading
Pin 34 of KB9226 (IC101)
Approx.3.7sec
Approx 0.4V
2.50V
Disc states to rotate
Disc is rotated
Confirm that the signal from pin24 of KB9226(IC101) is 3.5V as a accelerated pulse during approx.1.96s.
Automatic adjusting of TE balance
Confirm the waveform of the Tracking error signal at the pin 34 of KB9226(IC101).
Automatic adjusting of TE gain
TOC reading
Confirm the eye-pattern at the pin2 of KB9226(IC101).
Play a disc

Maintenance of laser pickup

(1) Cleaning the pick up lens

Before you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.

(2) Life of the laser diode

When the life of the laser diode has expired, the following symptoms will appear.

1. The level of RF output (EFM output : amplitude of eye pattern) will below.

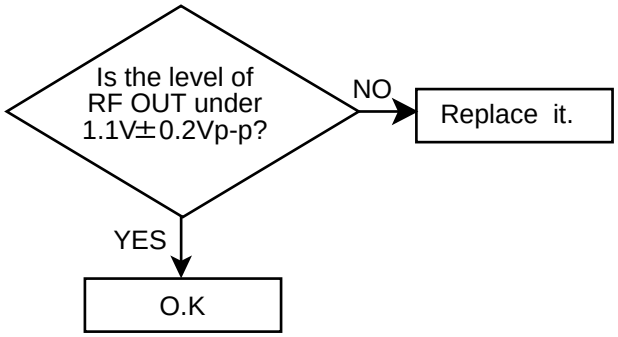

(3) Semi-fixed resistor on the APC PC board

The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.

If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.

If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.

Replacement of laser pickup

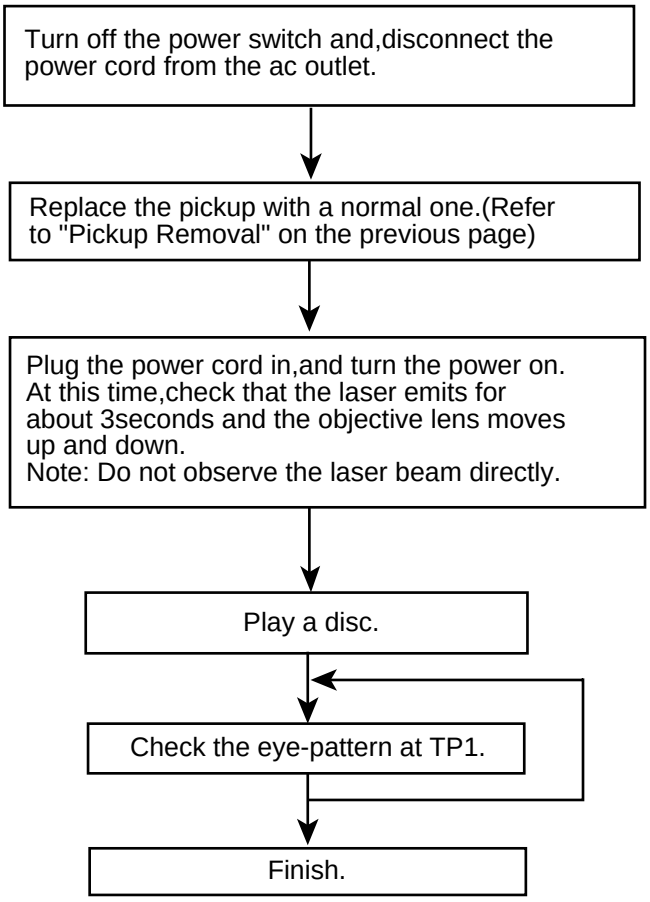
Turn off the power switch and,disconnect the power cord from the ac outlet.
Replace the pickup with a normal one.(Refer to "Pickup Removal" on the previous page)
Plug the power cord in,and turn the power on. At this time,check that the laser emits for about 3seconds and the objective lens moves up and down.
Note: Do not observe the laser beam directly.
Play a disc.
Check the eye-pattern at TP1.
Finish.

Troubleshooting

1. Amplifier

Power malfunction

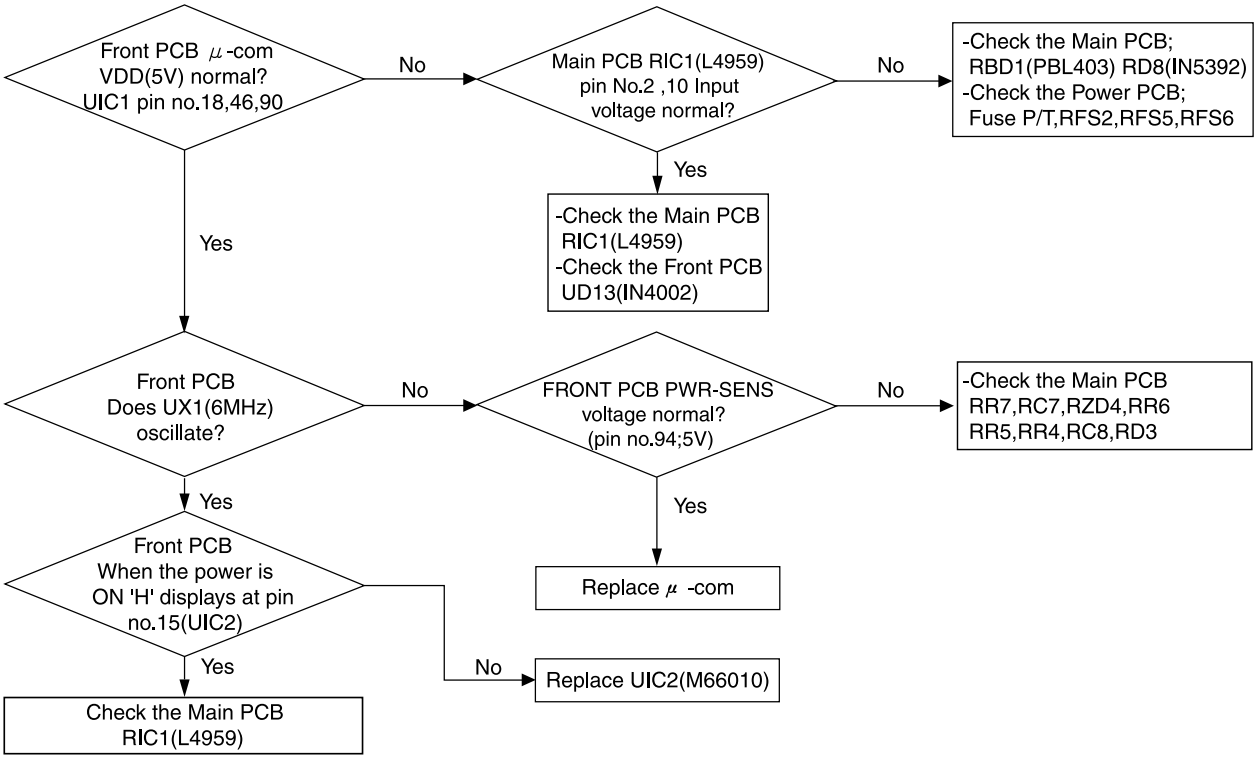

No output

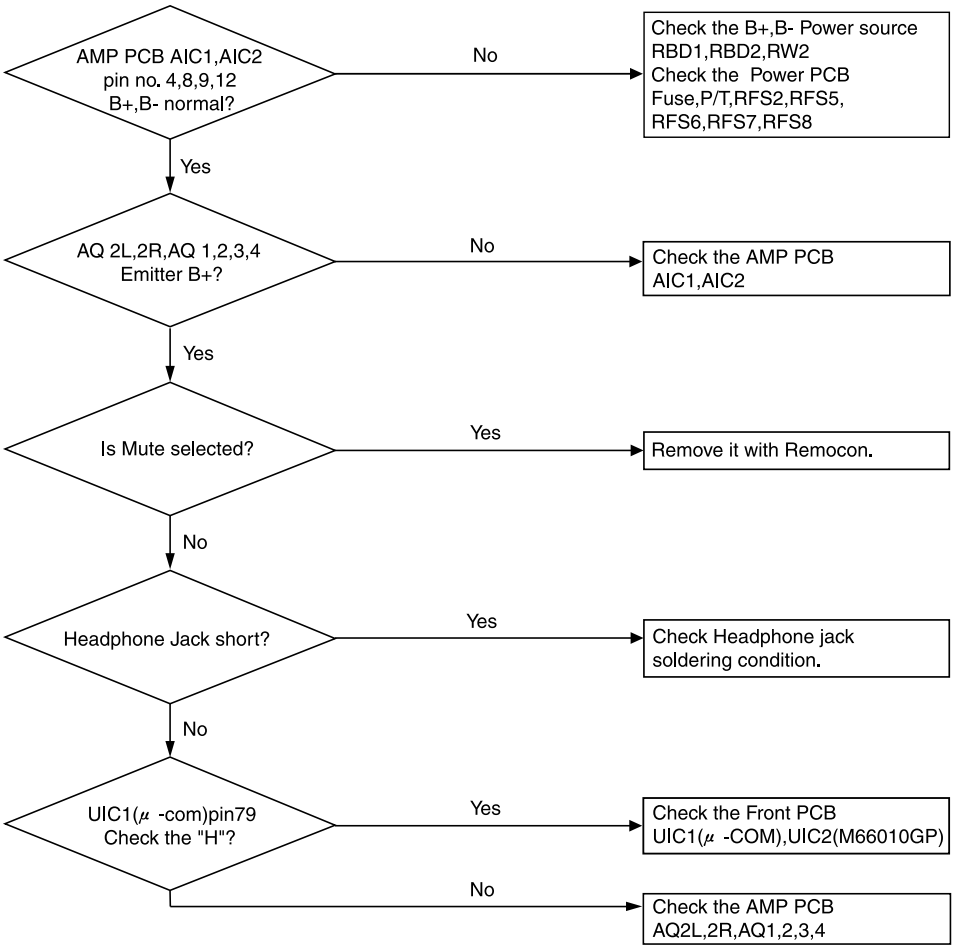

2.Tuner malfunction (FM/AM)

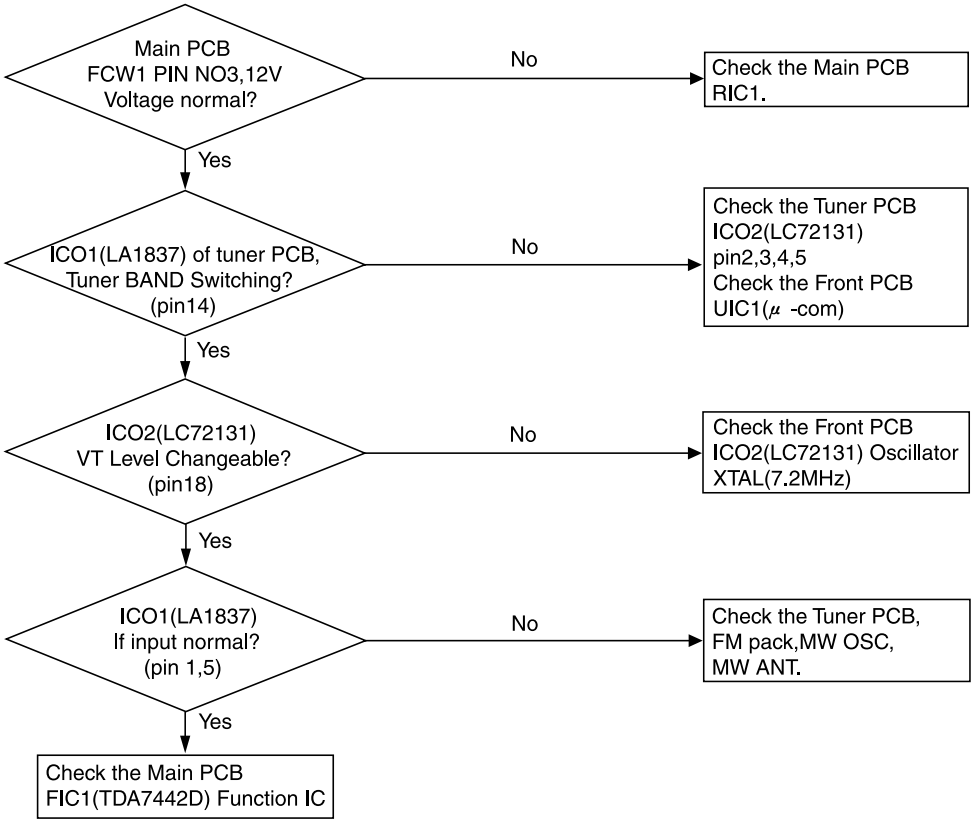

3.Tape

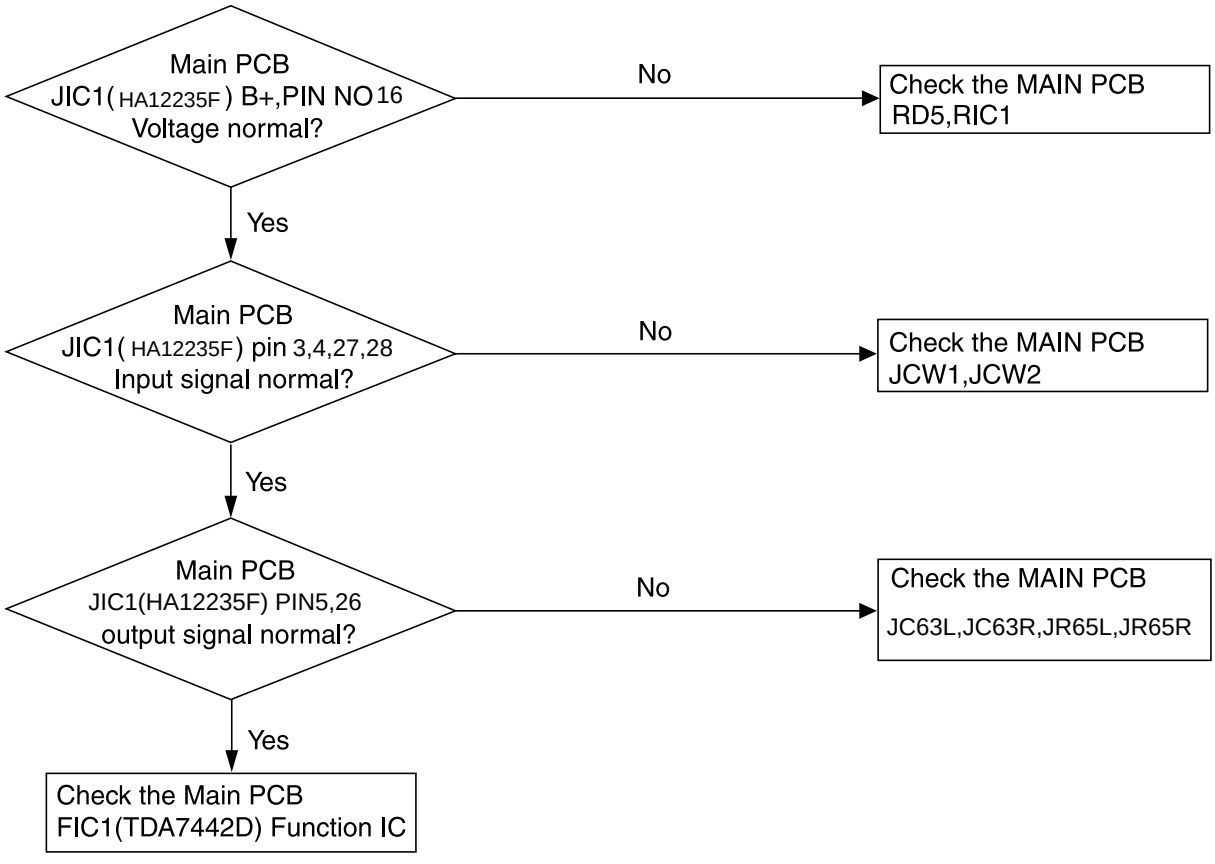

4.CD

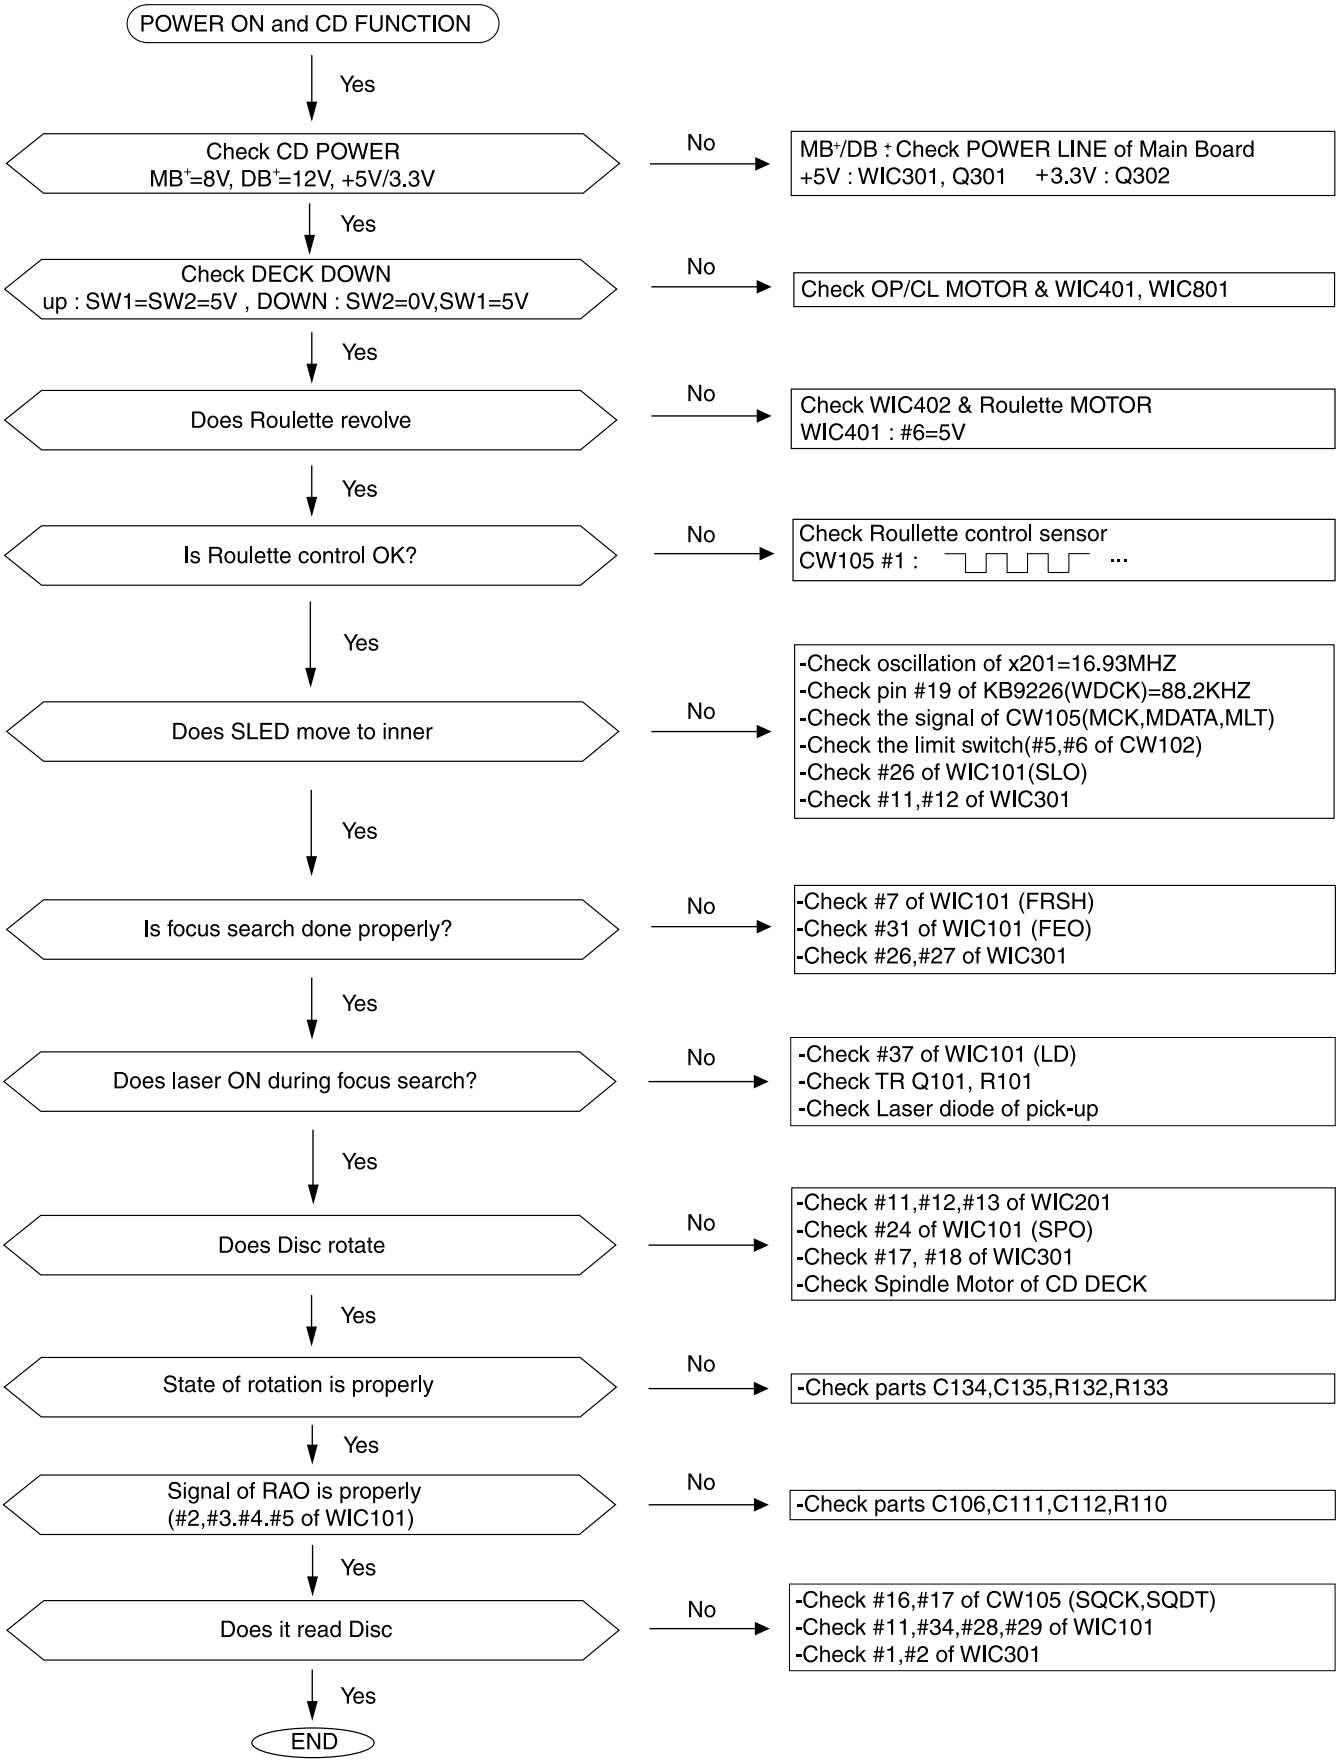
POWER ON and CD FUNCTION
Yes
Check CD POWER
MB+=8V, DB+=12V, +5V/3.3V
No
MB+/DB+ Check POWER LINE of Main Board
+5V : WIC301, Q301 +3.3V : Q302
Yes
Check DECK DOWN
up : SW1=SW2=5V , DOWN : SW2=0V,SW1=5V
No
Check OP/CL MOTOR & WIC401, WIC801
Yes
Does Roulette revolve
No
Check WIC402 & Roulette MOTOR
WIC401 : #6=5V
Yes
Is Roulette control OK?
No
Check Roullette control sensor
CW105 #1 :
Yes
Does SLED move to inner
No
-Check oscillation of x201=16.93MHZ
-Check pin #19 of KB9226(WDCK)=88.2KHZ
-Check the signal of CW105(MCK,MDATA,MLT)
-Check the limit switch(#5,#6 of CW102)
-Check #26 of WIC101(SLO)
-Check #11,#12 of WIC301
Yes
Is focus search done properly?
No
-Check #7 of WIC101 (FRSH)
-Check #31 of WIC101 (FEO)
-Check #26,#27 of WIC301
Yes
Does laser ON during focus search?
No
-Check #37 of WIC101 (LD)
-Check TR Q101, R101
-Check Laser diode of pick-up
Yes
Does Disc rotate
No
-Check #11,#12,#13 of WIC201
-Check #24 of WIC101 (SPO)
-Check #17, #18 of WIC301
-Check Spindle Motor of CD DECK
Yes
State of rotation is properly
No
-Check parts C134,C135,R132,R133
Yes
Signal of RAO is properly
(#2,#3.#4.#5 of WIC101)
No
-Check parts C106,C111,C112,R110
Yes
Does it read Disc
No
-Check #16,#17 of CW105 (SQCK,SQDT)
-Check #11,#34,#28,#29 of WIC101
-Check #1,#2 of WIC301
Yes
END

Description of major ICs

■ KA3082 (IC401, IC402) : DC motor driver

1.Pin layout

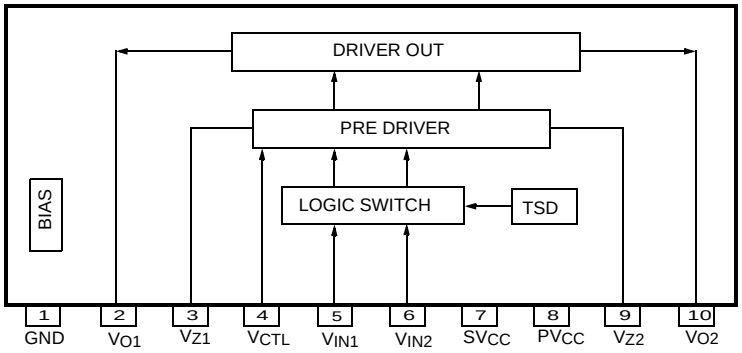

2.Pin function

Pin No.	Symbol	I/O	Function
1	GND	-	Ground
2	VO1	O	Output 1
3	VZ1	-	Phase compensation
4	VCTL	I	Motor speed control
5	VIN1	I	Input 1
6	VIN2	I	Input 2
7	SVCC	-	Supply voltage (Signal)
8	PVCC	-	Supply voltage (Power)
9	VZ2	-	Phase compensation
10	VO2	O	Output 2

■ 74HCU04 (OIC1) : Optical

1.Pin layout

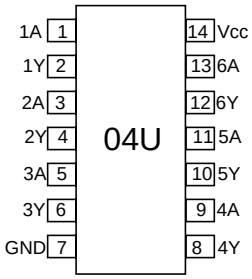

■ STK402-070 (AIC1) : Power amp.

1. Terminal layout

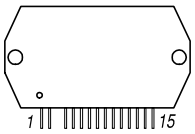

2. Block diagram

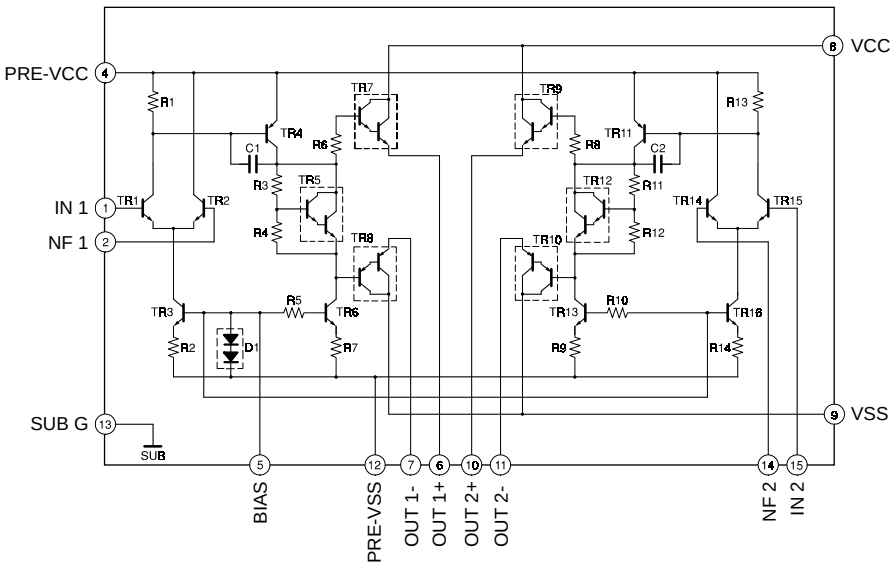

■ 5L9290 (IC201) : Digital signal processor for CDP

1. Pin layout

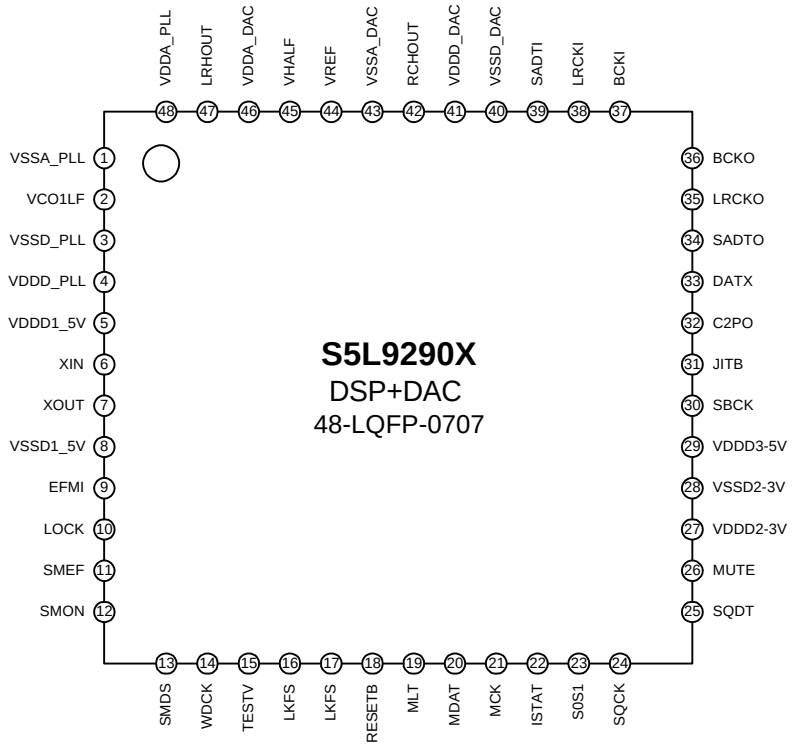

2. Block diagram

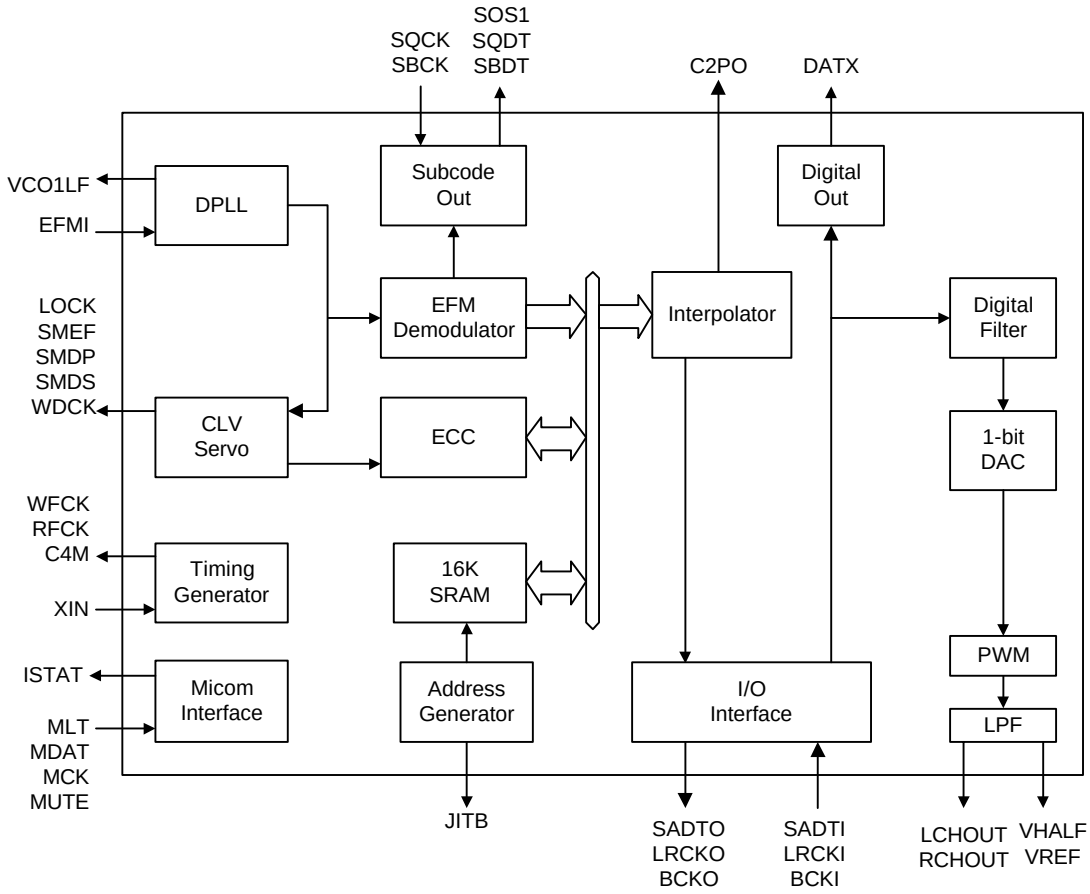

3. Pin function

NO.	Symbol	I/O	Function
1	VSSA_PLL	-	Analog Ground for DPLL
2	VCO1LF	O	Pump out for VCO1
3	VSSD_PLL	-	Digital Ground Separated Bulk Bias for DPLL
4	VDDD_PLL	-	Digital Power Separated Bulk Bias for DPLL (3V Power)
5	VDDD1-5V	-	Digital Power (5V Power, I/O PAD)
6	XIN	I	X'tal oscillator input (16.9344MHz)
7	XOUT	O	X'tal oscillator output
8	VSSD1	-	Digital Ground (I/O PAD)
9	EFMI	I	EFM signal input
10	LOCK	O	CLV Servo locking status output
11	SMEF	O	LPF time constant control of the spindle servo error signal
12	SMDP	O	Phase control output for Spindle Motor drive
13	SMDS	O	Speed control output for Spindle Motor drive
14	WDCK	O	Word clock output (Normal Speed : 88.2KHz, Double Speed : 176.4KHz)
15	TESTV	I	Various Data/Clock Input
16	LKFS	O	The Lock status output of frame sync
17	C4M	O	4.2336MHz clock output
18	RESETB	I	System Reset at 'L'
19	MLT	I	Latch signal input from Micom
20	MDAT	I	Serial data input from Micom
21	MCK	I	Serial data receiving clock input from Micom
22	ISTAT	O	The internal status output to Micom
23	S0S1	O	Subcode sync signal(S0+S1) output
24	SQCK	I	Subcode-Q data transfering bit clock input
25	SQDT	O	Subcode-Q data serial output
26	MUTE	I	System mute at 'H'
27	VDDD2-3V	-	Digital Power (3V Power, Internal Logic)
28	VSSD2	-	Digital Ground (Internal Logic)
28	VDDD3-5V	-	Digital Power (5V Power, I/O PAD)
30	SBCK	I	Subcode data transfering bit clock
31	JITB	O	Internal SRAM jitter margin status output
32	C2PO	O	C2 pointer output
33	DATX	O	Digital audio data output
34	SADTO	O	Serial audio data output (48 slot, MSB first)
35	LRCKO	O	Channel clock output
36	BCKO	O	Bit clock output
37	BCKI	I	Bit clock input
38	LRCKI	I	Channel clock input
39	SADTI	I	Serial audio data input (48 slot, MSB first)
40	VSSD_DAC	-	Digital Ground for DAC
41	VDDD_DAC	-	Digital Power for DAC (3V Power)
42	RCHOUT	O	Right-Channel audio output through DAC
43	VSSA_DAC	-	Analog Ground for DAC
44	VREF	O	Referance Voltage output for bypass
45	VHALF	O	Referance Voltage output for bypass
46	VDDA_DAC	-	Analog Power for DAC (3V Power)
47	LCHOUT	O	Left-Channel audio output through DAC
48	VDDA_PLL	-	Analog Power for PLL (3V Power)

■KB9226 (IC101) : RF amp. & servo signal processor

1. Pin layout

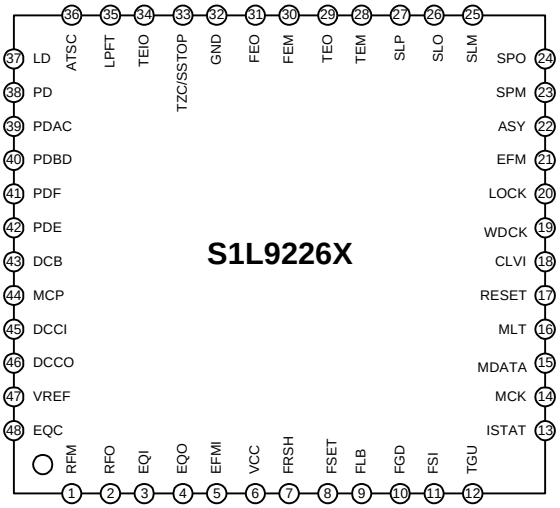

2. Block diagram

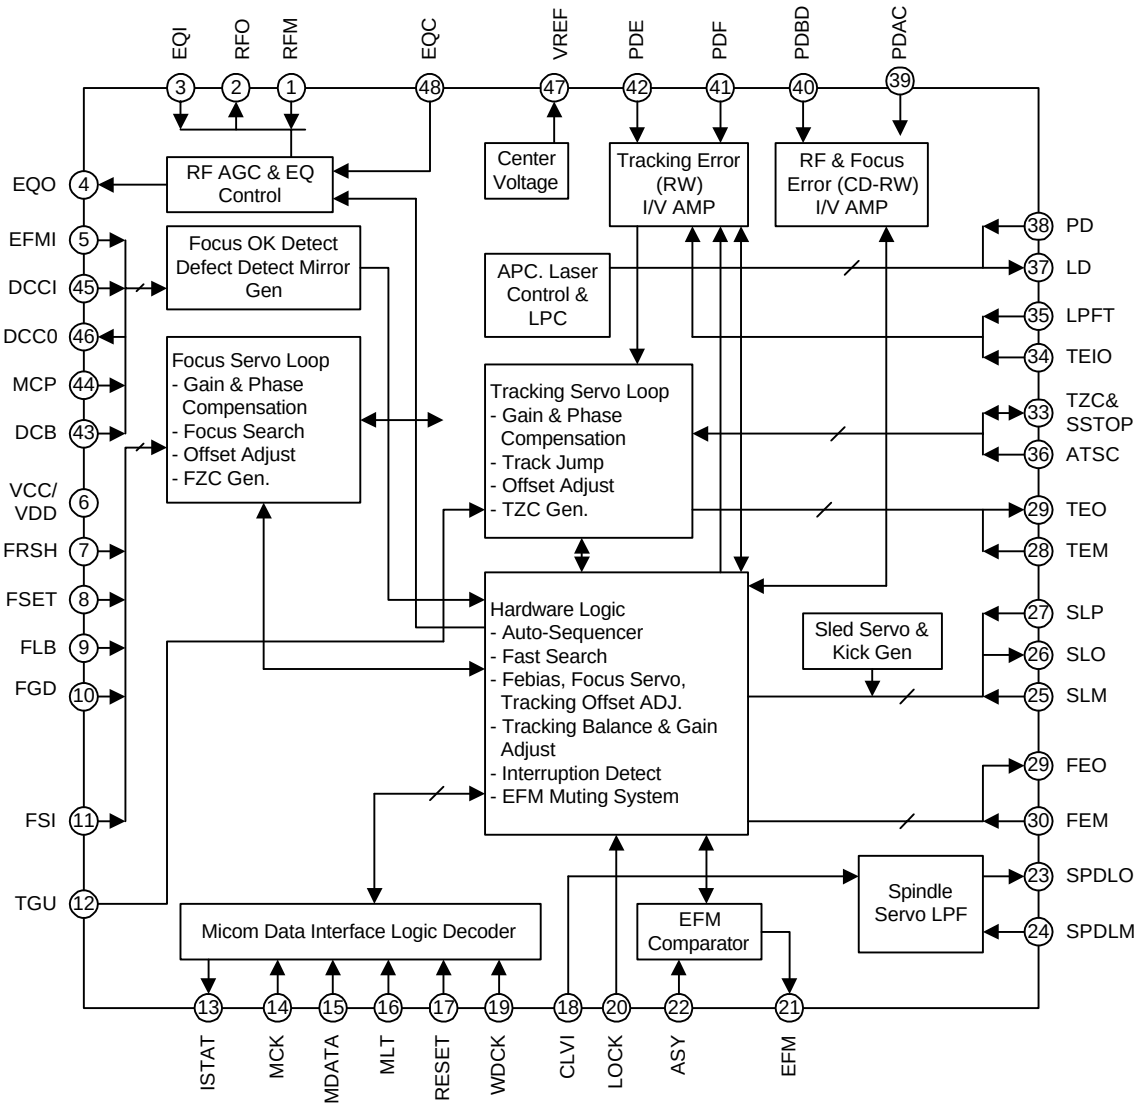

3. Pin function

Pin No.	Symbol	I/O	Function
1	RFM	I	RF summing amp. inverting input
2	RFO	O	RF summing amp. output
3	EQI	I	RFO DC eliminating input(use by MIRROR, FOK ,AGC & EQ terminal)
4	EQO	O	RF equalizer output
5	EFMI	I	EFM slice input. (input impedance 47K)
6	VCC	P	Main power supply
7	FRSH	I	Capcitor connection to focus search
8	FSET	I	Filter bias for focus,tracking,spindle
9	FLB	I	Capacitor connection to make focus loop rising band
10	FGD	I	Terminal to change the hign frequency gain of focus loop
11	FSI	I	Focus servo input
12	TGU	I	Connect the component to change the high frequency of tracking Loop
13	ISTAT	O	Internal status output
14	MCK	I	Micom clock
15	MDATA	I	Data input
16	MLT	I	Data latch input
17	RESET	I	Reset input
18	CLVI	I	Input the spindle control output from DSP
19	WDCK	I	88.2KHz input terminal from DSP
20	LOCK	I	Sled run away inhibit pin (L: sled off & tracking gain up)
21	EFM	O	EFM output for RFO slice(to DSP)
22	ASY	I	Auto asymmetry control input
23	SPM	I	Spindle amp. inverting input
24	SPO	O	Spindle amp. output
25	SLM	I	Sled servo inverting input
26	SLO	O	Sled servo output
27	SLP	I	Sled servo noninverting input
28	TEM	I	Tracking servo amp.inverting input
29	TEO	O	Tracking servo amp. output
30	FEM	I	Focus servo amp. inverting input
31	FEO	O	Focus servo amp. output pin
32	GND	P	Main ground
33	TZC/ SSTOP	I	Tracking zero crossing input & Check the position of pick-up wherther inside or not
34	TEIO	B	Tracking error output & Tracking servo input
35	LPFT	I	Tracking error integration input (to automatic control)
36	ATSC	I	Anti-shock input
37	LD	O	APC amp. output
38	PD	I	APC amp. input
39	PDAC	I	Photo diode A & C RF I/V amp. inverting input
40	PDBD	I	Photo diode B & D RF I/V amp. inverting input
41	PDF	I	Photo diode F & tracking(F) I/V amp. inverting input
42	PDE	I	Photo diode E & tracking(E) I/V amp. inverting input
43	DCB	I	Capacitor connection to limit the defect detection
44	MCP	I	Capacitor connection to mirror hold
45	DCCI	O	Output pin to connect the component for defect detect
46	DCCO	I	Input pin to connect the component for defect detect
47	VREF	O	(VCC+GND)/2 Voltage reference output
48	EQC	I	AGC_equalize level control terminal & capacitor terminal to input in to VCA

■ LC72131(IC02) : PLL frequency synthesizer for electron alignment

1. Pin layout

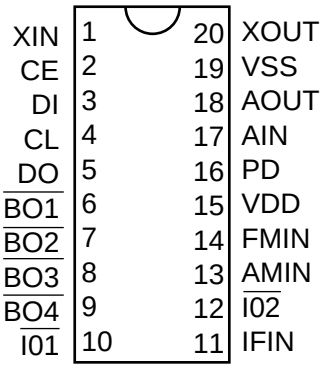

2. Block diagram

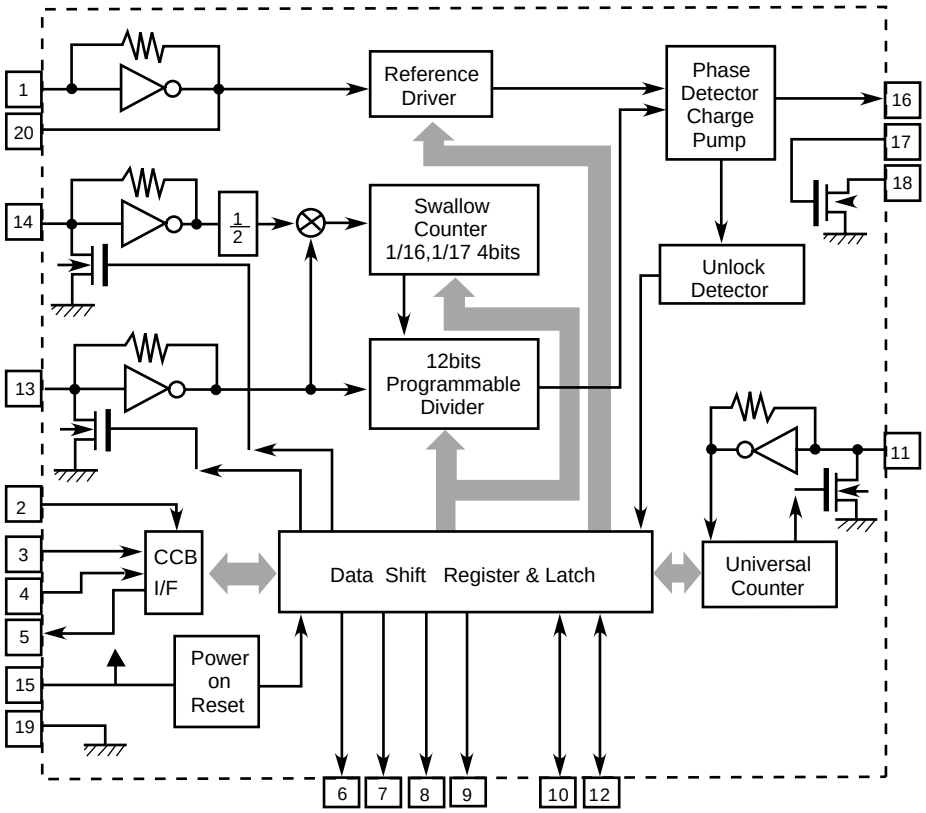

3.Pin function (1/2)

Symbol	Pin No.	Type	Functions	Circuit configuration
XIN XOUT	1 20	Xtal OSC	○ Crystal resonator connection (4.5MHz/7.2MHz)	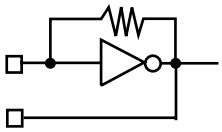
FMIN	14	Local oscillator signal input	○ Serial data input : FMIN is selected when DVS is set to 1. ○ The input frequency range is from 10 to 160MHz. ○ The signal is passed through a built-in divide-by-two prescaler and then supplied to the swallow counter. ○ A1 though the range of divisor setting is from 272 to 65, 535, the actual divisor is twice the setting since there is also a built-in divide-by-two prescaler.	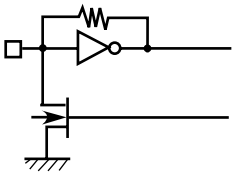
AMIN	13	Local oscillator signal input	○ Serial data input : AMIN is selected when DVS is set to 0. ○ Serial data input : When SNS is set to 1 : • The input frequency range is form 2 to 40MHz • The signal is supplied directly to the swallow counter. • The range of divisor setting is from 272 to 65, 535 and the actual divisor will be the value set. ○ Serial data input : When SNS is set to 0 : • The input frequency ranges is from 0.5 to 10MHz. • The signal is supplied directly to a 12-bit programmable divider. • The range of divisor setting is from 4 to 4,095 and the actual divisor will be the value set.	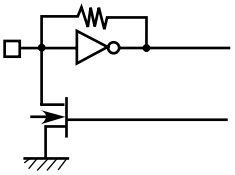
CE	2	Chip enable	○ Most be set high when serial data is input to the LC72131M (DI), or when serial data is output (DO).	

3.Pin function (2/2)

Symbol	Pin No.	Type	Functions	Circut confguration
CL	4	Clock	○ Used as the synchronization clock when serial data is input to the LC72131 (DI), or when serial data is output (DO).	
DI	3	Input data	○ Inputs serial data sent from the controller to the LC72131M.	
DO	5	Output data	○ Output serial data sent from the LC72131M to the controller. The content of the output data is determined by the serial data DOCO to DOC2.	
VDD	15	Power supply	○ The LC72131M power supply (VDD=4.5 to 5/5V) ○ The power on reset circuit operates when power is first applied.	
VSS	19	Ground	○ The LC72131M ground.	
$\overline{BO1}$ $\overline{BO2}$ $\overline{BO3}$ $\overline{BO4}$	6 7 8 9	Output port	○ Dedicated output pins ○ The output states are determined by BO1 to BO4 in the serial data. 'Data"=0:Open =1:Low ○ The pins go to the open state after the power-on reset. ○ An 8Hz time base signal can be output from $\overline{BO1}$ when TBC in the serial data is set to 1. ○ Note that the ON impedance of the $\overline{BO1}$ pin is higher than that of the other pins ($\overline{BO2}$ to $\overline{BO4}$)	
$\overline{IO1}$ $\overline{IO2}$	10 12	I/O Port	○ Pins used for both input and output ○ The input or output state is determined by bits IOC1 and IOC2 in the serial state. 'Data"=0:Input port =1:Output port ○ When specified for use as an input port : The input state is transmitted to the controller through the DO pin. 'Input state"=Low:data value→0 =High:data value→1 ○ When specified for use as an output port : The output state is determined by bits IO1 and IO2 in the serial sate. 'Data"=0:Open =1:Low ○ These pins go to the input port state after the power-on reset.	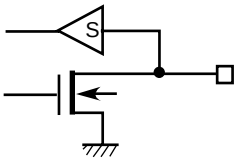
PD	16	Charge pump output	○ PLL Charge pump output When the frequency generated by dividing the Local oscillator frequency by N is higher than the reference frequency, a high level will be output from the PD in. similarly, when that frequency is lower, a low level will be output. The PD pin goes to the high impedance state when the frequencies agree.	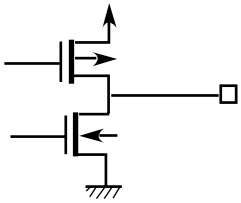
AIN AOUT	17 18	L.P.F amplifier Tr	○ The MOS transistor used for the PLL active Low-pass filter.	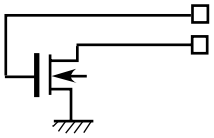
IFIN	11	IF counter	○ The input frequency range is from 0.4 to 12MHz. ○ The signal is supplied directly to the IF counter. ○ The result from the IF counter MBS is output through the DO pin. ○ There are four measurement periods: 4, 8, 32 or 64ms.	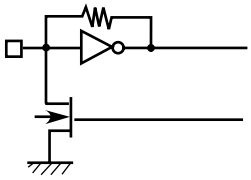

■ LC86P6548 (UIC1) : Microcontroller

1.Pin layout

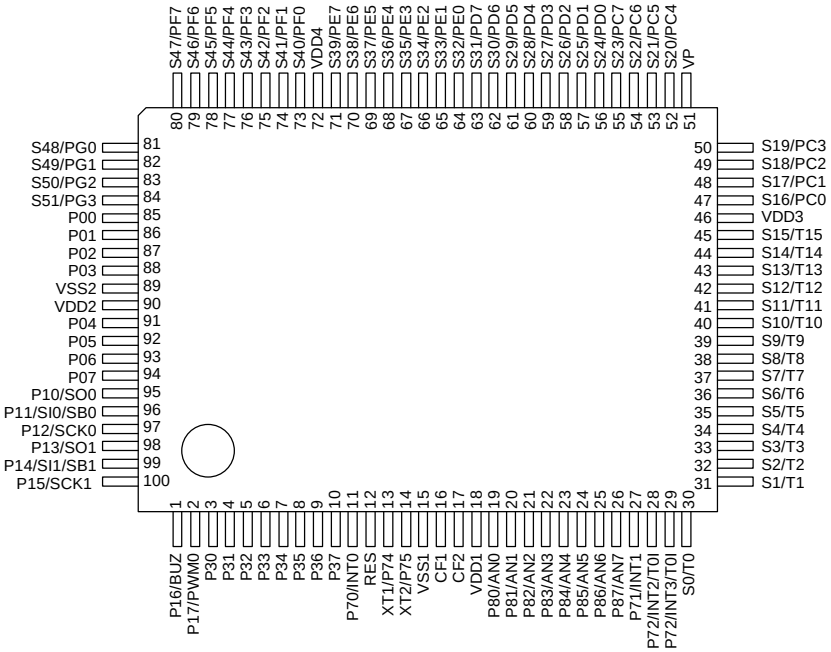

2.Block diagram

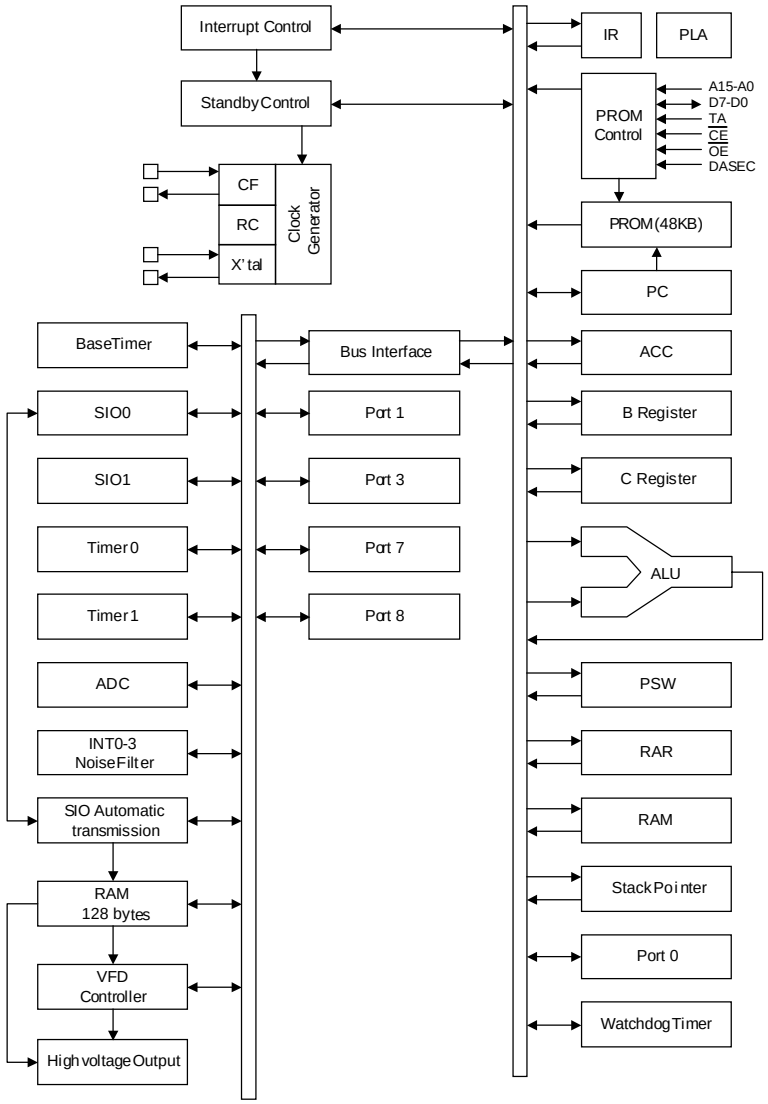

3. Pin function

Pin No.	Symbol	I/O	Function	
1	P16/BUZ	I/O	Buzzer output	
2	P17/PWM0	I/O	Timer 1 output (PWM0 output)	
3 to 10	P30 to P37	I/O	8bit input/output port Input/output in bit unit 15V withstand at N-channel open drain output	
11	P70/INT0	I/O	INT0 input /HOLD release/N-channel Tr. ouptput forwatchdog timer	
12	RES	I	Reset pin	
13	XT1/P74	I	32.768kHz crystal oscillation terminal XT1	
14	XT2/P75	I	32.768kHz crystal oscillation terminal XT2	
15	VSS1	-	Power pin (-)	
16	CF1	I	Input pin for the ceramic resonator oscillation	
17	CF2	O	Output pin for the ceramic resonator oscillation	
18	VDD1	-	Power pin (+)	
19 to 22	P80/AN0 to P83/AN3	I	4-bit input port Input /output in bit unit	
23 to 26	P84/AN4 to P87/AN7	O		
27	P71/INT1	I	INT1 input/HOLD release input	
28	P72/INT2/T0I	I	INT2 input/timer 0 event input	
29	P72/INT3/T0I			
30 to 36	S0/T0 to S6/T6	O	Output for VFD display controller segment/timing incommon	
37 to 45	S7/T7 to S15/T15	O	Output for VFD dis;lay controller segment/timing withinternal pull-down resistor in common Internal pull-down resistor output	
46	VDD3	-	Power pin (+)	
47 to 50	S16/PC0 to P19/PC3	I/O	Output for VFD display controller High voltage input port PC0 to PC3	
51	VP	-	Power pin (+) for the VFD output pull-down resist	
52 to 63	S20/PC4 to S31/PD7	I/O	Output for VFD display controller High voltage input port PC4 to PC7, PD0 to PD7	
64 to 71	S32/PE0 to S39/PE7	I/O	Output for VFD displaya controller segment High voltage input port PE0 to PE7	
72	VDD4	-	Power pin (+)	
73 to 80	S40/PF0 to S47/PF7	I/O	Output for VFD displaya controller segment High voltage input port PF0 to PF7	
81 to 84	S48/PG0 to S51/PG3	I/O	Output for VFD displaya controller segment High voltage I/O port PG0 to PG3	
85	P00	I/O	8-bit input/output port. Input for port0 interrupt.	
86	P01		Input/output in nibble unit	
87	P02		Input for HOLD release	
88	P03		15V withstand at N-channel open drain output	
89	VSS2	-	Power pin (-)	
90	VDD2	-	Power pin (+)	
91	P04	I/O	8-bit input/output port. Input for port0 interrupt.	
92	P05		Input/output in nibble unit	
93	P06		Input for HOLD release	
94	P07		15V withstand at N-channel open drain output	
95	P10/SO0	I/O	SIO0 data output	8-bit input/output port Input/output can be specified in a bit unit
96	P11/SI0/SB0		SIO0 data input/bus input/output	
97	P12/SCK0		SIO0 clock input/output	
98	P13/SO1		SIO1 data output	
99	P14/SI1/SB1		SIO1 data input/bus input/output	
100	P15/SCK1		SIO1 clock input/output	

■ HA12235 (JIC1) : Audio signal processor

1. Block diagram

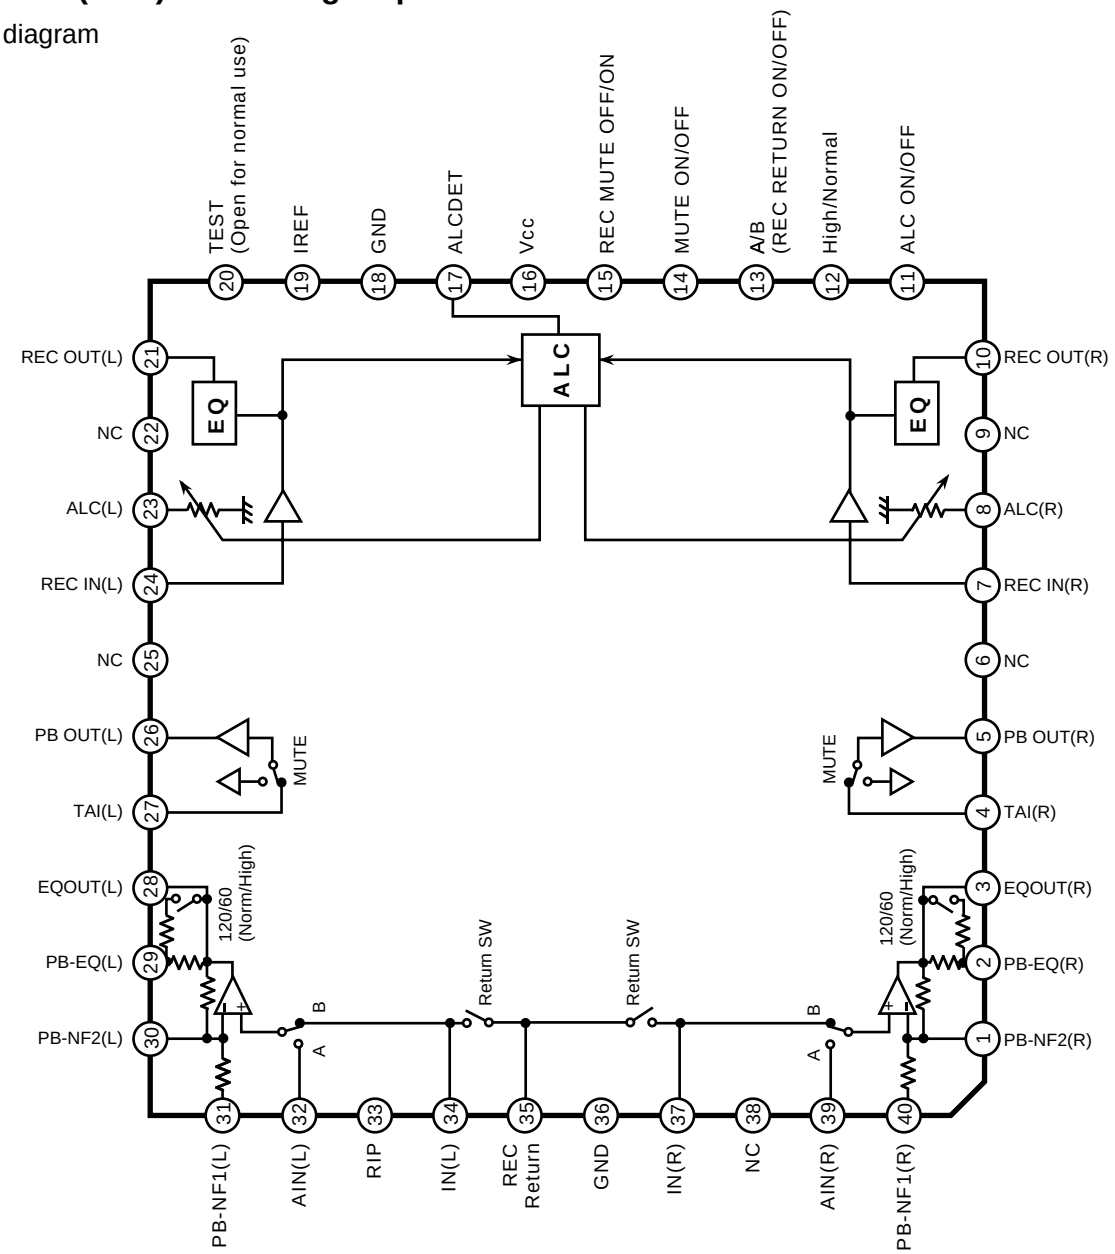

2. Pin function

Pin No.	Symbol	Function
1	PB-NF2(R)	PB EQ feed back
2	PB-EQ(R)	NAB output
3	EQOUT(R)	EQ output
4	TAI(R)	Tape input
5	PBOUT(R)	PB output
6	NC	NC pin
7	RECIN(R)	REC-EQ input
8		
9	NC	NC pin
10	RECOUT(R)	REC output
11	ALC ON/$\overline{\text{OFF}}$	Mode control input
12	High/$\overline{\text{Norm}}$	Mode control input
13	A/$\overline{\text{B}}$	Mode control input
14	MUTE ON/$\overline{\text{OFF}}$	Mode control input
15	REC MUTE OFF/$\overline{\text{ON}}$	Mode control input
16	Vcc	Vcc pin
17		
18	GND	GND pin
19	IREF	Equalizer reference current input
20	Test mode	Test mode pin
21	RECOUT(L)	REC output
22	NC	NC pin
23		
24	RECIN(L)	REC-EQ input
25	NC	NC pin
26	PBOUT(L)	PB output
27	TAI(L)	Tape input
28	EQOUT(L)	EQ output
29	PB-EQ(L)	NAB output
30	PB-NF2(L)	PB EQ feed back
31	PB-NF(L)	PB EQ feed back
32	AIN(L)	PB A deck input
33	RIP	Ripple filter
34	BIN(L)	PB B deck input
35	REC-RETURN	REC Return
36	GND	GND pin
37	BIN(R)	PB B deck input
38	NC	NC pin
39	AIN(R)	PB A deck input
40	PB-NF1(R)	PB EQ feed back

■ M66010 (UIC2) : I/O control

1.Pin layout

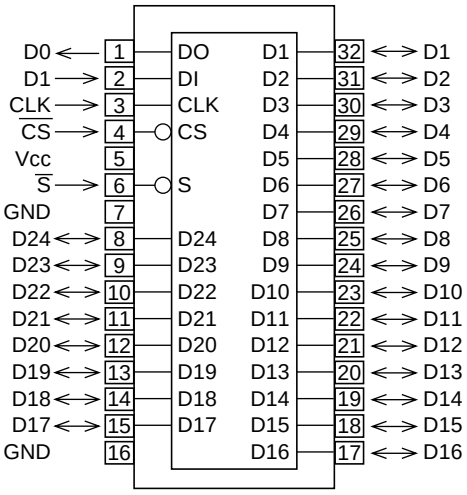

2.Block diagram

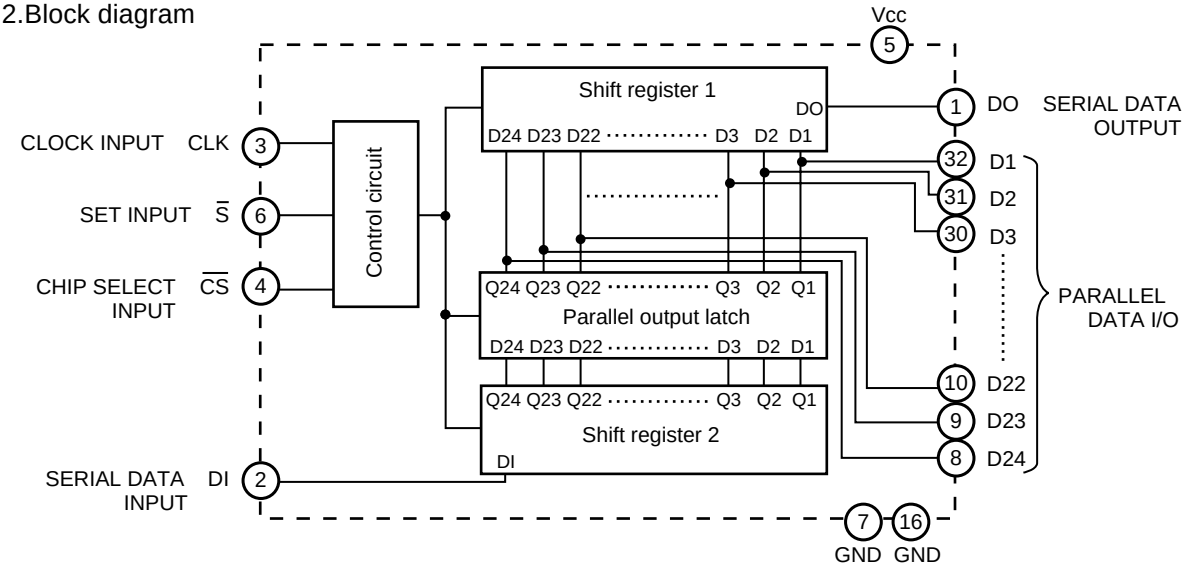

■ STK402-120 (AIC2) : Power amp.

1.Pin layout

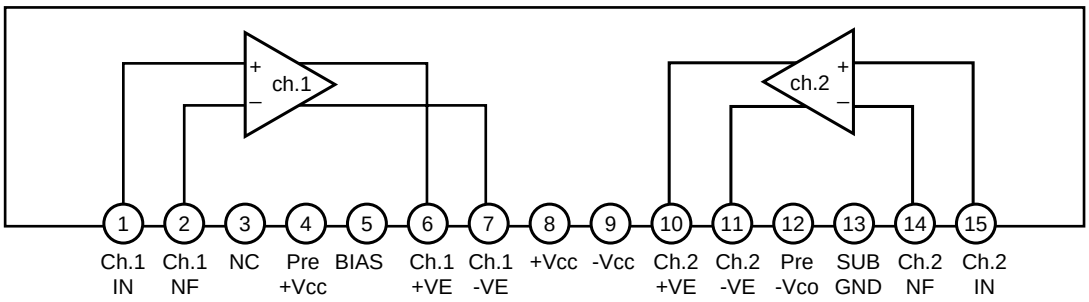

■ TDA7442D (FIC1) : Audio processor

1.Pin layout

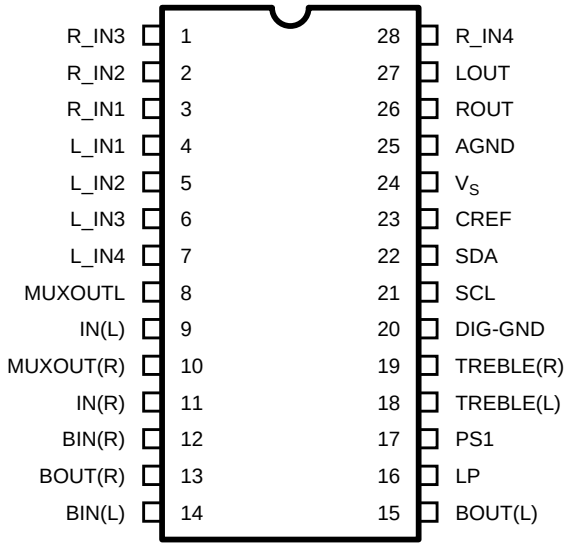

2.Block diagram

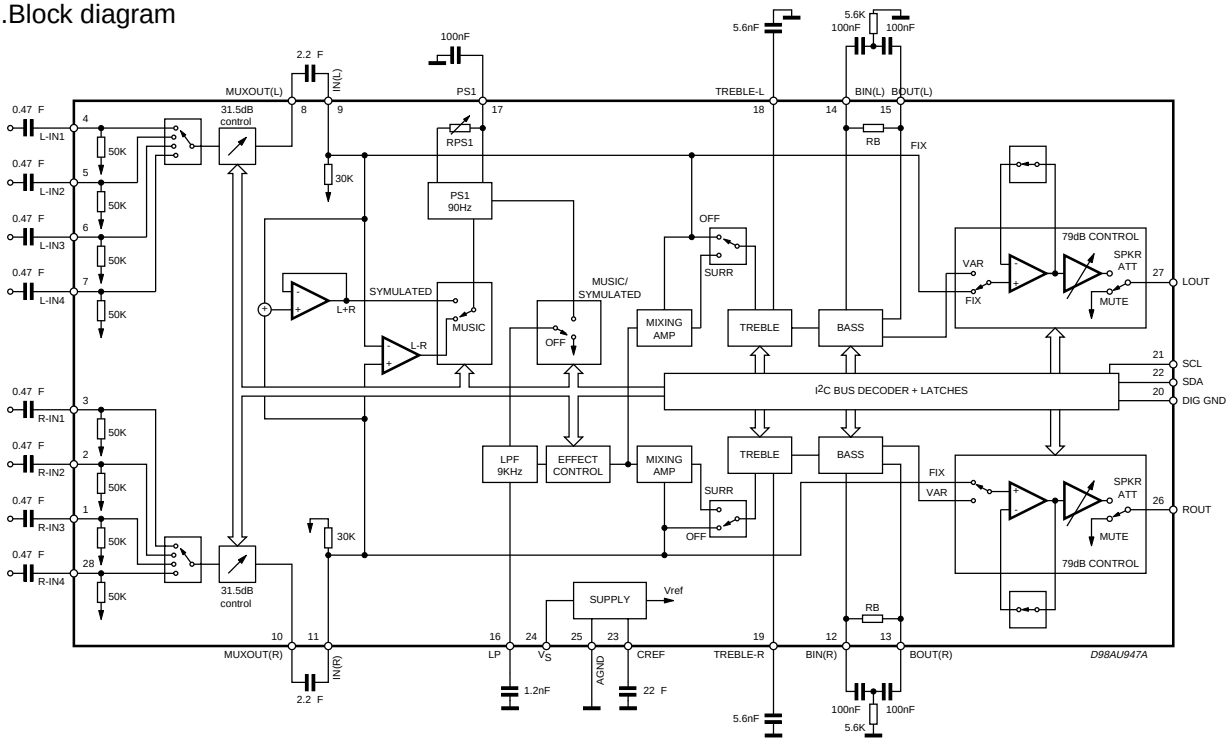

■ BA4560 (AIC3, AIC4, AIC5, AIC6, AIC7, FIC4, HIC1) : Dual op amp.

1.Pin layout

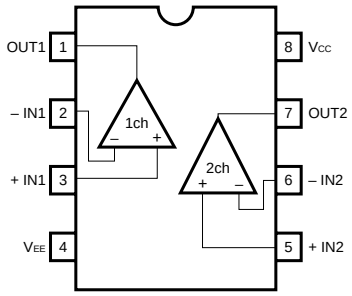

■ L4959 (RIC1) : Voltage regulator

1.Pin layout

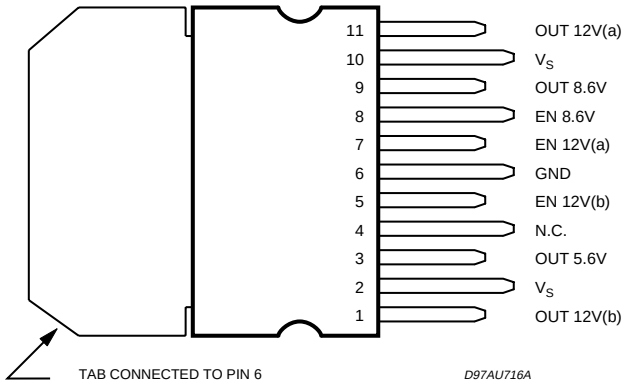

2.Block diagram

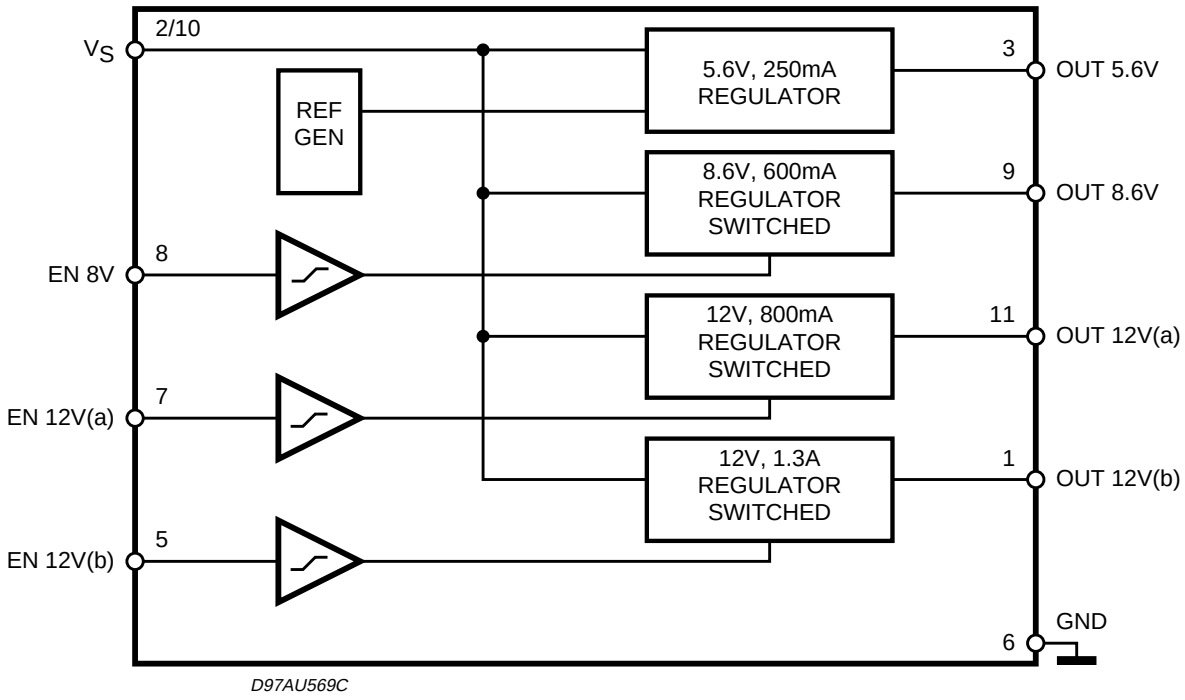

3.Pin function

Pin	Pins	Description
1	OUT 12V (b)	12V/1.3A SWITCHED OUTPUT VOLTAGE
2	V_S	Supply Voltage
3	OUT 5.6V	5.6V/250mA OUTPUT VOLTAGE
4	N.C.	not connected
5	EN 12V (b)	Enable 12V/1.3A SWITCHED OUTPUT VOLTAGE
6	GND	Ground
7	EN 12V (a)	Enable 12V/0.8A SWITCHED OUTPUT VOLTAGE
8	EN 8.6V	Enable 8.6V/0.6A SWITCHED OUTPUT VOLTAGE
9	OUT 8.6	8.6V/0.6A SWITCHED OUTPUT VOLTAGE
10	V_S	Supply Voltage
11	OUT 12V (a)	12V/0.8A SWITCHED OUTPUT VOLTAGE

■ KA9258D (IC301) : 4-ch Motor driver

1.Block diagram

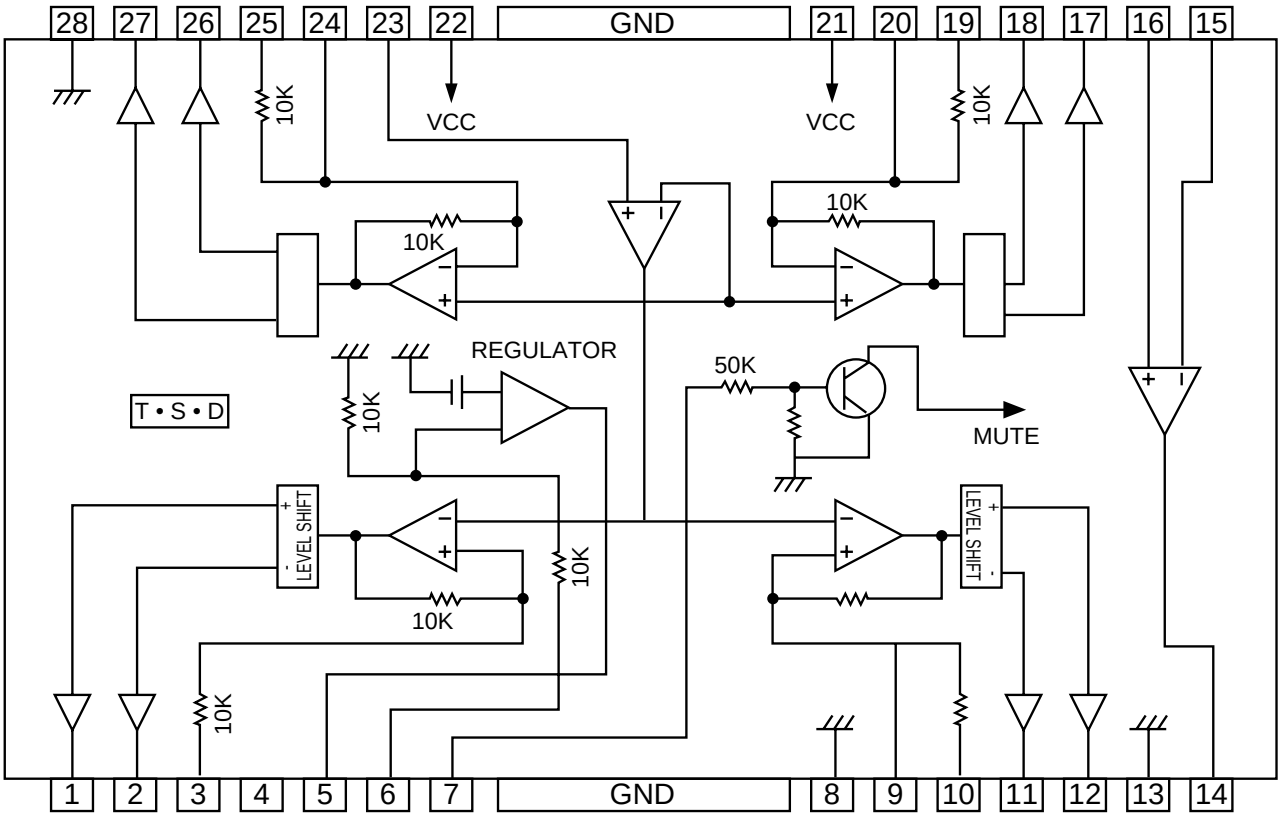

■ LA1837 (IC01) : FM IF/DET AM RF/IF/DET

1.Block diagram

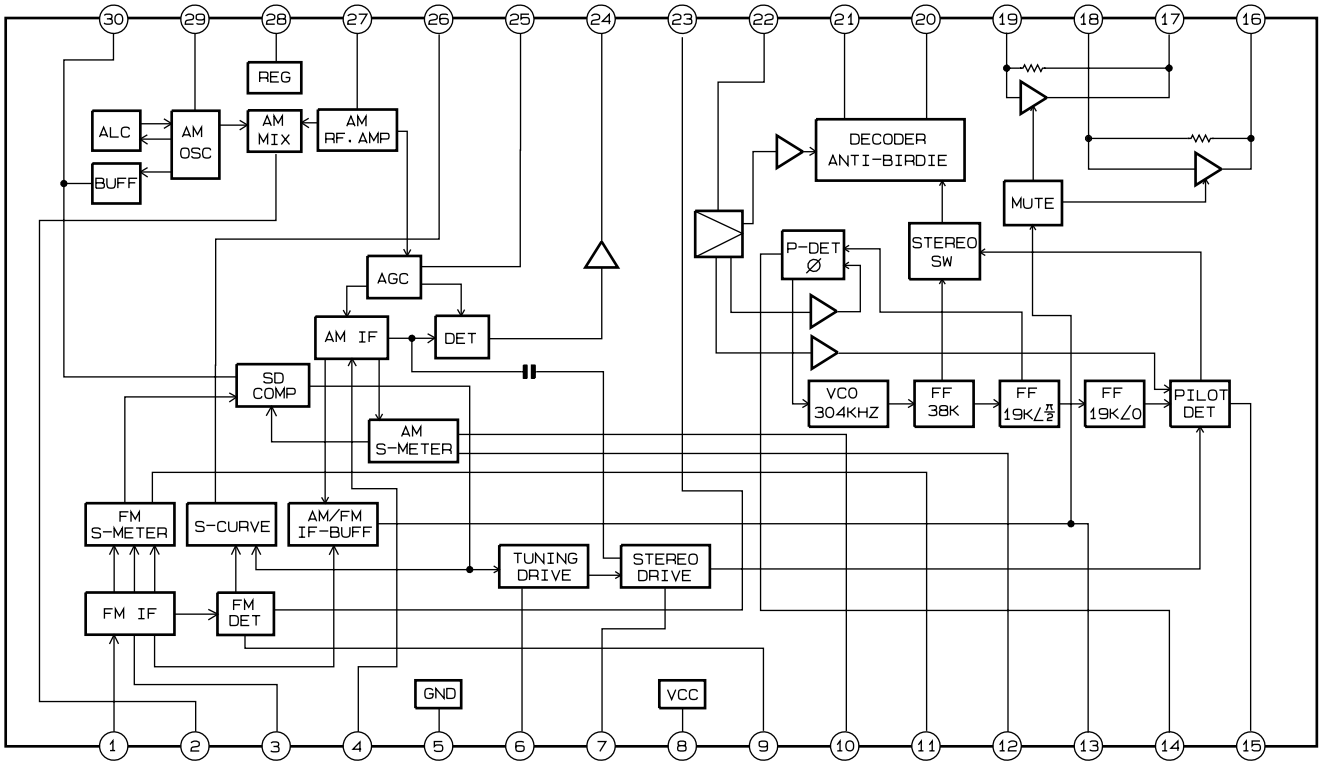

< MEMO >

MX-G700R

VICTOR COMPANY OF JAPAN, LIMITED
AUDIO & COMMUNICATION BUSINESS DIVISION
PERSONAL & MOBILE NETWORK BUSINESS UNIT. 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan

(No.21103)

200205

PARTS LIST

[MX-G700R]

* All printed circuit boards and its assemblies are not available as service parts.

Area suffix

B ---------- U.K.
E ---------- Continental Europe
EN ---------- Northern Europe
EV ---------- Eastern Europe

- Contents -

Exploded view of general assembly and parts list (Block No.M1) ---------- 3- 3
CD changer mechanism assembly and parts list (Block No.MA) ---------- 3- 5
Cassette mechanism assembly and parts list (Block No.MP) ---------- 3- 7
Electrical parts list (Block No.01~05) ---------- 3- 8
Packing materials and accessories parts list (Block No.M3,M5) ---------- 3-19

< MEMO >

Exploded view of general assembly and parts list

Block No. M 1 M M

CD changer unit
CD swith board
Hphone jack board
VFD
Tuner board
ECO board
Front board
Front key board
Cassette mechanism assembly
Trans. board
RFS9
RFS2

■ Parts list (General assembly)

Block No. M1MM

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
	A	6002-000126	SCREW	2	FH M3X10 BLK	
	B	6003-000276	SCREW	71	BH M3X10 YEL	
	C	AH60-10107A	SCREW	4	M4X6 YEL	
	D	6003-000277	SCREW	4	BH M3X12 YEL	
	E	6002-000398	SCREW	3	BH M3X6 YEL	
	F	6003-000278	SCREW	4	BH,M3X14,YEL	
	G	6003-000279	SCREW	2	BH,M3X20 YEL	
	1	AH64-01654A	WINDOW	1	DOOR A	
	2	AH64-01655A	WINDOW	1	DOOR B	
	3	AH64-01650B	CASSETTE DOOR A	1		
	4	AH64-01651B	CASSETTE DOOR B	1		
	5	AH61-00552A	DOOR SPRING A	1		
	6	AH61-00553A	DOOR SPRING B	1		
	7	AH64-01653F	WINDOW	1	VFD	
	8	AH63-00390A	SHEET	1	VFD	
	9	AH64-01649B	CD DOOR	1		
	10	AH64-00462C	BADGE	1	JVC	
	11	AH63-00389A	SHEET	1	VOLUME	
	12	AH64-01660B	KNOB	1	VOLUME	
	13	AH64-01665B	DECO-VOLUME	1		
	14	AH61-00930C	CAP-DUMMY	1		
	17	AH64-01659B	KNOB	1	SUBWOOFER	
	18	AH67-00147A	LENS	1	SUBWOOFER	
	19	AH64-01661B	KNOB	1	SOUND	
	20	AH67-00148A	LENS	1	SOUND	
	21	AH64-01649E	FRONT CABINET	1		
	22	AH61-80030A	DAMPER ASSY	2		
	23	AH95-50001A	LATCH ASSY	2		
	25	AH64-01664B	BUTTON	1	POWER ECO	
	26	AH67-00151A	LENS	1	POWER	
	27	AH67-00149B	LENS	1	FUNCTION	
	28	AH61-00931A	HOLDER	1	FUNCTION	
	29	AH64-01657B	BUTTON	1	DISPLAY	
	30	AH64-01658B	BUTTON	1	PRESET	
	31	AH67-00150B	LENS	1	DISC	
	32	AH64-01662B	BUTTON	1	DISC	
	33	AH64-01656B	BUTTON	1	TAPE	
	36	AH61-00662A	HOLDER	1	VFD	
	37	AH61-40014A	SUPPORT	1	RIVET	
	38	AH61-00021A	SUPPORT	1	PCB	
	39	AH64-30416C	BOTTOM CABINET	1		
	40	AH62-00043D	HEAT SINK	1		
	41	AH61-00655A	H.SINK BRAKET	1	R	
	42	AH61-00656A	H.SINK BRAKET	1	L	
	43	AH64-01666F	REAR CABINET	1		
	44	AH63-00250A	REAR COVER	1		
	45	AH64-30390F	TOP CABINET	1		
	46	AH62-00042A	HEAT SINK 4959	1		

■ Parts list (General assembly)

Block No. M1MM

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
⚠	47	AH39-00258Q	POWER CORD	1		B
⚠		AH39-00257A	POWER CORD	1		E,EN,EV
	48	AH61-01125A	FAN BRAKECT	1		
	49	AH31-00029B	MOTOR FAN	1		
	50	AH68-50275D	CD STICKER	1		
	56	AH68-01028Z	RATING LABEL	1		B,E,EN
		AH68-01083C	RATING LABEL	1		EV
	58	AH68-00331A	GOST LABEL	1	RUSSIAN	EV
	59	AH68-00486A	CAUTION LABEL(B)	1		EV
	60	----------	CASSETTE DECK	1	ADR248DSW	
⚠	61	AH26-00188A	POWER TRANS	1	PT1	
	62	AH40-00008A	TUNER PACK ASSY	1		
		AH40-00014A	TUNER PACK ASSY	1	RUSSIAN	

CD changer mechanism assembly and parts list

Block No. M A M M

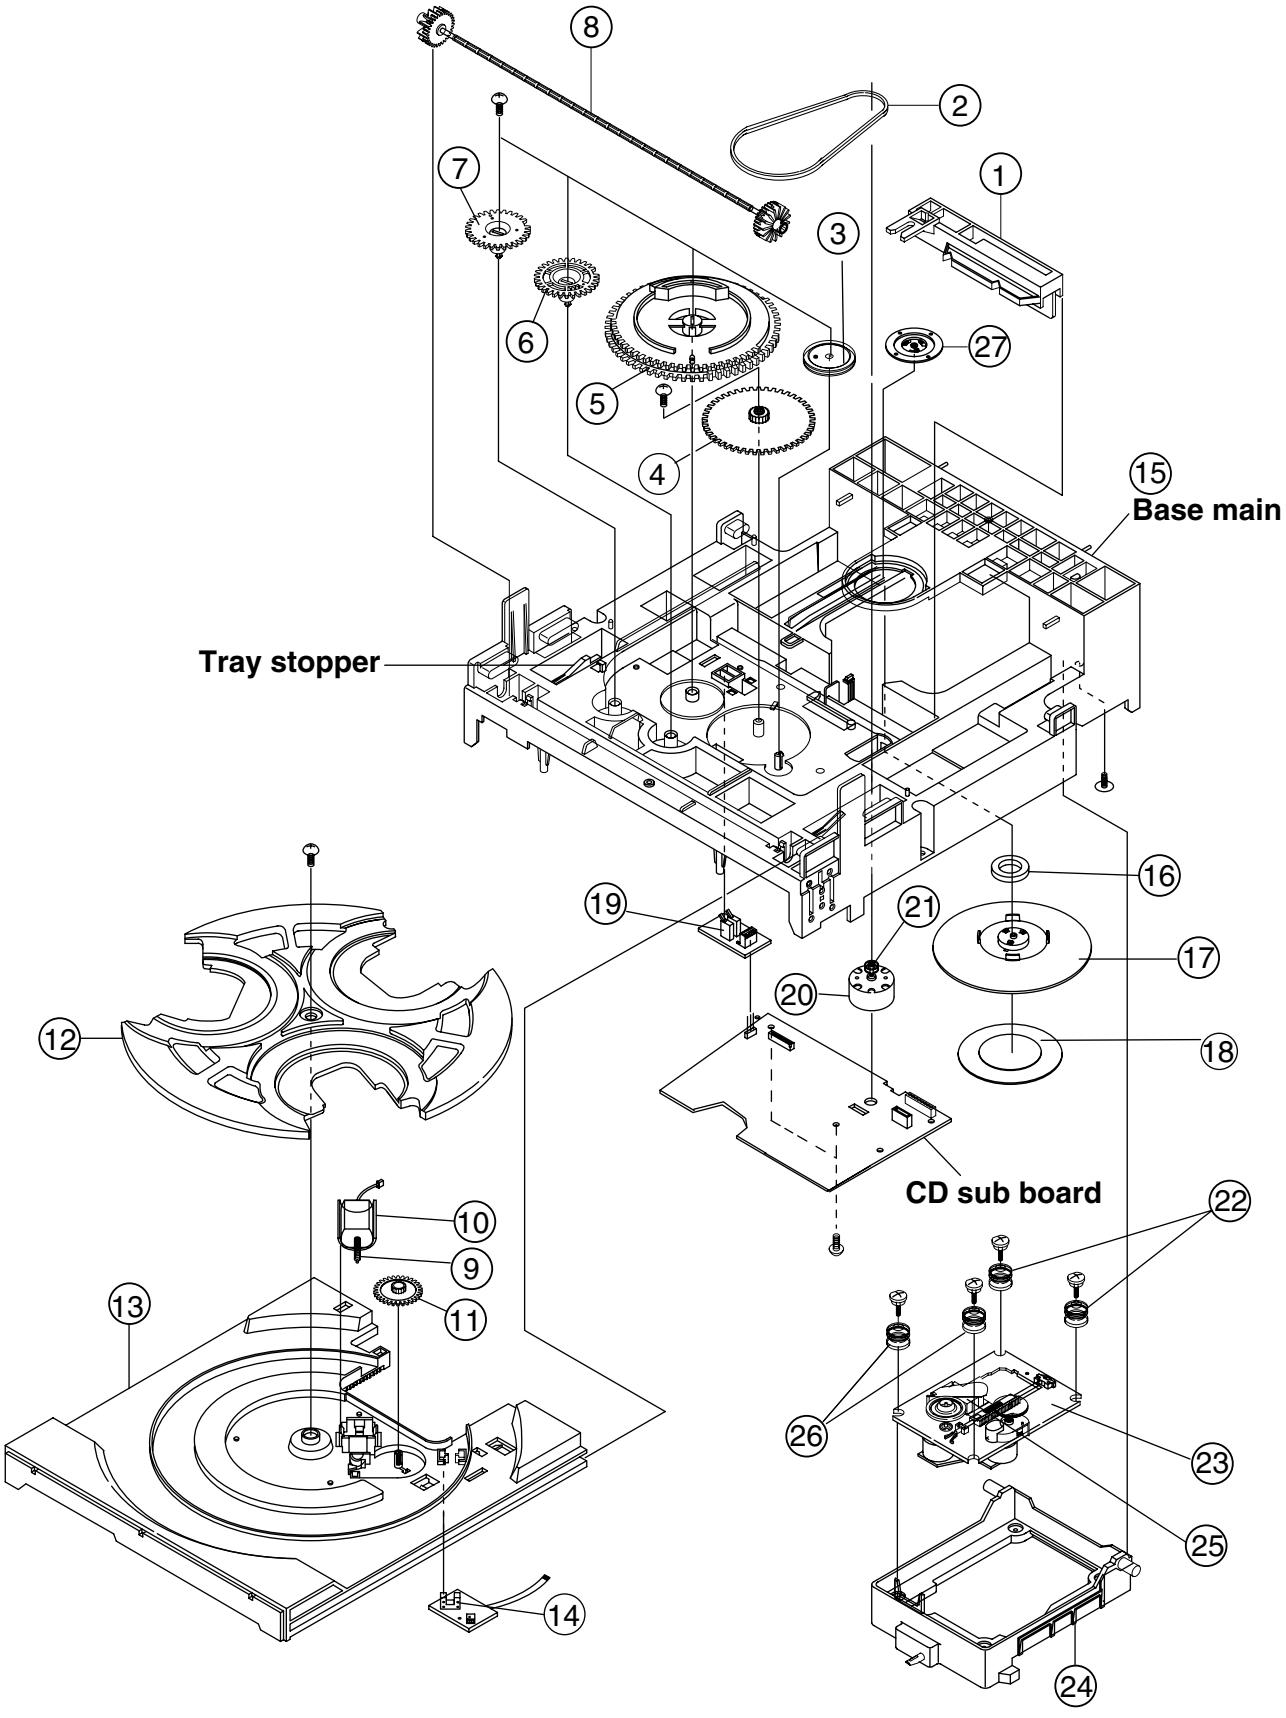

■ Parts list (CD changer mechanism)

Block No. MAMM

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
	1	AH66-80022A	SLIDE CAM	1	ABS HF-380 NTR	
	2	AH66-60034A	BELT LOAD	1	CR	
	3	AH66-20186A	GEAR PULLEY	1	POM (M90-44)WHT	
	4	AH66-20187A	GEAR-LOAD	1	POM (M90-44)BLK	
	5	AH66-20188A	GEAR-CAM	1	POM(M90-44)WHT	
	6	AH66-20189A	GEAR-TRAY	1	POM(M90-44)BLK	
	7	AH66-20190A	GEAR-CONVERTOR	1	POM (M90-44) WH	
	8	AH66-20191A	GEAR-SYNCRO	1	ABS HF-380 NTR	
	9	AH66-20192A	GEAR-WORM	1	POM (M90-44)WHT	
	10	AH31-12001A	LOADING MOTOR	1	FF-030PN-09120	
	11	AH66-20193A	GEAR-ROULETTE	1	POM(M90-44)BLK	
	12	AH66-90056A	TRAY-ROULETTE	1	ABS XR-401 BLK	
	13	AH66-90055A	TRAY DISC	1	ABS XR-401 BLK	
	14	AH32-10001F	SENSOR	1	KPI-L06	
	15	AH61-20428A-1	BASE MAIN	1	CMS-300,BLK	
	16	3302-000159	MAGNET-FERRITE	1	3500-3800G,6P	
	17	AH66-90053A	TABTE-CHUCK UNI	1	BLK,CMS300	
	18	AH63-00068B	SHEET CHUCK	1	HYMERON,BLK,0.4	
	19	3404-000101	SWICH MICRO	1	MLS-24	
	20	AH31-10021A	DC MORTOR	1	RF-500TB,9VDC	
	21	AH66-10008A	PULLEY-MOTOR	1	BLK,CMS-CR3	
	22	AH73-10031A	RUBBER-CD	1	RCD380,RED	
	23	AH91-60150C	SP MOTOR ASS'Y	1	CMS-D73SG6U	
	24	AH66-30098A	LEVER-LIFTER	1	ABS(BLK),CMS-30	
	25	AH30-00007A	CD PICKUP	1	SOH-AD3	
	26	AH73-10034A	RUBBER-CD(G)	1	CMS-300D,GREEN	
	27	AH61-00255A	BRKT CHUCK	1	SECL 0.8T	

Cassette mechanism assembly and parts list

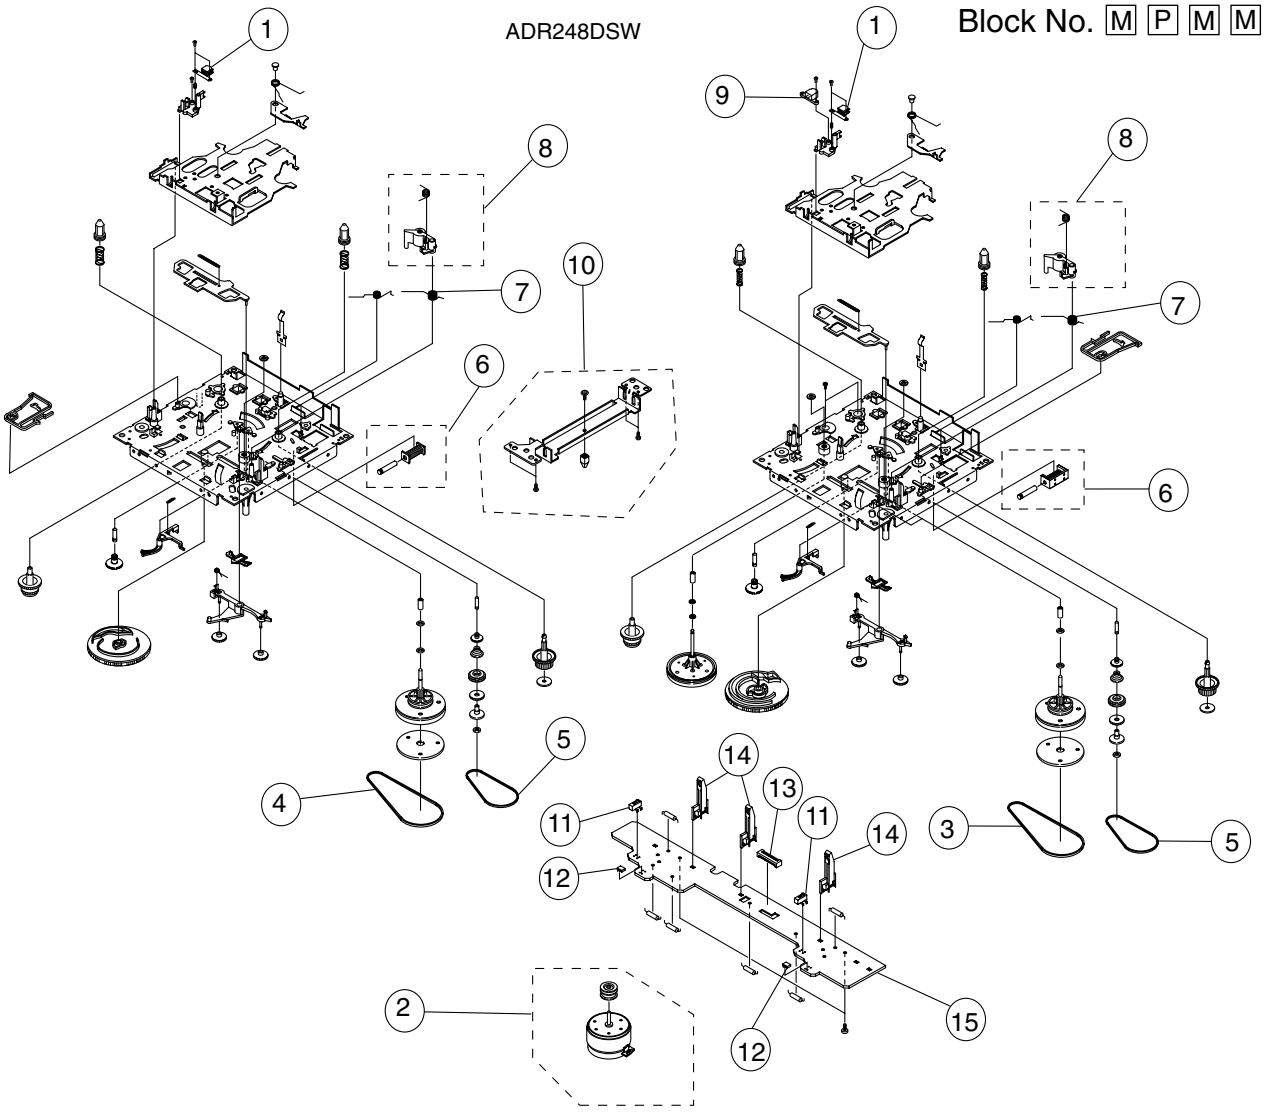

Note: Parts listed on the Parts List below can be supplied. However, parts that are not listed below cannot be supplied individually but only by purchasing the whole Cassette Mechanism Assembly Unit. (When ordering, use the Parts No. AH59-00102A for Cassette Mechanism Assembly Unit.)

■ Parts list(Cassette mechanism)

Block No. MPMM

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
	1	AH81-00141A	REC/PB HEAD	2	TC881CB	
	2	AH81-00422A	MOTOR ASS'Y	1	CCM09-120L2-2	
	3	AH81-00364A	MAIN BELT 1	1	ADR2400-MAIN0.5	
	4	AH81-00365A	MAIN BELT 2	1	ADR2400-MAIN1.3	
	5	AH81-00101A	FR BELT	2	ADR2400-FR34.7	
	6	AH81-00102A	SOLENOID	2	ADR2400-1	
	7	AH81-00282A	SPRING	2	S/PP/R(F)	
	8	AH81-00366A	PINCH R.ASS'Y	2	ADR2400-PINCH(F)	
	9	AH81-00284A	E-HEAD	1	TC2131F	
	10	AH81-00367A	MOTOR BRACKET	1	ADR241SW-BRKT 110	
	11	AH81-00286A	SWICH	2	ADR2400-MODE	
	12	AH81-00287A	PHOT SENSER	2	ADR2400-SENSOR	
	13	AH81-00288A	CONNECTOR	1	ADR2400-16P	
	14	AH81-00289A	LEEF SW	3	ADR2400-MXS00220	
	15	AH81-00375A	PCB	1	ADR2400-1PCB	

■ **Electrical parts list (Main board)** **Block No. 01**

⚠	Item	Parts number	Parts name	Remarks	Area
	AUX	3722-000379	RCA JACK	4P/2C 3.5MM	
	FCW1	3708-001051	CONNECTOR	13P 1.25MM AN	
	FCW2	3708-001094	CONNECTOR	13P 1.25MM ST	
	FCW3	3708-001577	CONNECTOR	30P 1.25MM ST	
	FC1L	2201-000368	C.CAPASITOR	220PF 10% 50V	
	FC1R	2201-000368	C.CAPASITOR	220PF 10% 50V	
	FC10L	2301-000216	M.CAPACITOR	220NF 5% 50V	
	FC10R	2301-000216	M.CAPACITOR	220NF 5% 50V	
	FC11	2401-001975	E.CAPACITOR	47UF 20% 16V	
	FC17	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	FC2L	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC2R	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC23	2401-000419	E.CAPACITOR	10UF 20% 16V	
	FC251	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC252	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC253	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC3L	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC3R	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC31	2401-000759	E.CAPACITOR	220NF 20% 50V	
	FC32	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	FC35	2301-000361	M.CAPACITOR	1.2NF 10% 50V	
	FC36	2301-000375	M.CAPACITOR	100NF 5% 50V	
	FC4L	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC4R	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC5L	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC50	2401-000419	E.CAPACITOR	10UF 20% 16V	
	FC51	2202-000806	C.CAPASITOR	220PF 10% 50V	
	FC52	2202-000806	C.CAPASITOR	220PF 10% 50V	
	FC53	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC54	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC57	2401-001975	E.CAPACITOR	47UF 20% 16V	
	FC6L	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	FC6R	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	FC7L	2401-001912	E.CAPACITOR	1UF 20% 50V	
	FC8L	2301-000454	M.CAPACITOR	5.6NF 10% 50V	
	FC8R	2301-000454	M.CAPACITOR	5.6NF 10% 50V	
	FC9	2401-000419	E.CAPACITOR	10UF 20% 16V	
	FC9L	2301-000216	M.CAPACITOR	220NF 5% 50V	
	FC9R	2301-000216	M.CAPACITOR	220NF 5% 50V	
	FD2	0401-000101	DIODE	1N4148 100V	
	FD3	0401-000101	DIODE	1N4148 100V	
	FIC1	1204-001776	IC	TDA7442D 28P	
	FIC4	1201-000163	IC	BA4560 8P DUAL	
	FQ1L	0504-000122	DEGI TRANSISTOR	KSR1009Y NPN	
	FQ1R	0504-000122	DEGI TRANSISTOR	KSR1009Y NPN	
	FQ151	0504-000144	DEGI TRANSISTOR	KSR2002 PNP	
	FQ152	0504-000118	DEGI TRANSISTOR	KSR1003 NPN	
	FQ2	0504-001003	DEGI TRANSISTOR	KSR2003TA	
	FQ4	0501-000398	TRANSISTOR	KSC945 NPN	
	FR1L	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR1R	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR18	2001-000515	RESISTOR	220 5% 1/8W	
	FR2L	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR2R	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR20	2001-000515	RESISTOR	220 5% 1/8W	
	FR21	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	FR22	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	FR23	2001-000773	CARBON RESISTOR	470K 5% 1/8W	
	FR24	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	FR25	2001-000429	RESISTOR	1K 5% 1/8W	
	FR251	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	FR252	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	FR253	2001-000290	CARBON RESISTOR	10K 5% 1/8W	

⚠	Item	Parts number	Parts name	Remarks	Area
	FR26	2001-000850	CARBON RESISTOR	560K 5% 1/8W	
	FR27L	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	FR28	2001-000645	CARBON RESISTOR	330K 5% 1/8W	
	FR4L	2001-000780	CARBON RESISTOR	470 5% 1/8W	
	FR4R	2001-000780	CARBON RESISTOR	470 5% 1/8W	
	FR5L	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	FR5R	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	FR51	2001-000515	RESISTOR	220 5% 1/8W	
	FR52	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	FR53	2001-000515	RESISTOR	220 5% 1/8W	
	FR54	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	FR55	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	FR56	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR57	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	FR58	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	FR59	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR6L	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR6R	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	FR8L	2001-000802	CARBON RESISTOR	5.6K 5% 1/8W	
	FR8R	2001-000802	CARBON RESISTOR	5.6K 5% 1/8W	
	FR81	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	FR82	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	FR9	2001-000027	CARBON RESISTOR	100 5% 1/4W	
	FZD1	0403-000372	ZENER DIODE	UZ9.1BM 9.1V	
	HCW2	AH39-00247A	LEAD CONNECTOR	#1007 06P 280M	
	HCW3	3711-001062	CONNECTOR	6P 1R 2MM	
	HC1	2401-000795	E.CAPACITOR	220UF 20% 16V	
	HC1L	2401-001912	E.CAPACITOR	1UF 20% 50V	
	HC1R	2401-001912	E.CAPACITOR	1UF 20% 50V	
	HC10	2202-000850	C.CAPASITOR	2.2NF 16V	
	HC11	2202-000850	C.CAPASITOR	2.2NF 16V	
	HC12	2202-000807	C.CAPASITOR	22NF 25V	
	HC13	2202-000807	C.CAPASITOR	22NF 25V	
	HC2	2401-000795	E.CAPACITOR	220UF 20% 16V	
	HC2L	2401-001164	E.CAPACITOR	33UF 20% 16V	
	HC2R	2401-001164	E.CAPACITOR	33UF 20% 16V	
	HC3L	2201-000642	C.CAPASITOR	0.68NF 10% 50V	
	HC3R	2201-000642	C.CAPASITOR	0.68NF 10% 50V	
	HD1	0401-000101	DIODE	1N4148 100V	
	HIC1	1201-000163	IC	BA4560 8P DUAL	
	HJK1	3722-000351	PHONE JACK	11P 3.5MM BLK	
	HQ1L	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	HQ1R	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	HRFS2	3602-000147	FUSE CLIP	250V 7.5A 30M	
	HR1	2001-000028	CARBON RESISTOR	100 5% 1/2W	
	HR1L	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	HR1R	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	HR2	2001-000110	CARBON RESISTOR	10 5% 1/2W	
	HR2L	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	HR2R	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	HR20L	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	HR20R	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	HR3L	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	HR3R	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	HR4L	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	HR4R	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	HR5L	2001-000019	CARBON RESISTOR	10 5% 1/2W	
	HR5R	2001-000019	CARBON RESISTOR	10 5% 1/2W	
	JCW1	3711-003107	CONNECTOR	3P 1R 2.5MM	
	JCW2	3711-003111	CONNECTOR	6P 1R 2.5MM	
	JCW3	3711-003107	CONNECTOR	3P 1R 2.5MM	
	JC01L	2301-000393	M.CAPACITOR	18NF 10% 50V	
	JC01R	2301-000393	M.CAPACITOR	18NF 10% 50V	

■ **Electrical parts list (Main board)** **Block No. 01**

⚠	Item	Parts number	Parts name	Remarks	Area
	JC1L	2301-000361	M.CAPACITOR	1.2NF 10% 50V	
	JC1R	2301-000361	M.CAPACITOR	1.2NF 10% 50V	
	JC13L	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	JC13R	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	JC23L	2201-000674	C.CAPASITOR	0.82NF 10% 50V	
	JC23R	2201-000674	C.CAPASITOR	0.82NF 10% 50V	
	JC24L	2301-000361	M.CAPACITOR	1.2NF 10% 50V	
	JC24R	2301-000361	M.CAPACITOR	1.2NF 10% 50V	
	JC26	2301-000404	M.CAPACITOR	2.2NF 10% 50V	
	JC27	2301-000404	M.CAPACITOR	2.2NF 10% 50V	
	JC29	2301-000407	M.CAPACITOR	2.7NF 10% 50V	
	JC30L	2201-000368	C.CAPASITOR	220PF 10% 50V	
	JC30R	2201-000368	C.CAPASITOR	220PF 10% 50V	
	JC300	2201-000557	C.CAPASITOR	0.47NF 10% 50V	
	JC60L	2301-000379	M.CAPACITOR	10NF 10% 50V	
	JC60R	2301-000379	M.CAPACITOR	10NF 10% 50V	
	JC62L	2301-000375	M.CAPACITOR	100NF 5% 50V	
	JC62R	2301-000375	M.CAPACITOR	100NF 5% 50V	
	JC63L	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	JC63R	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	JC64L	2301-000375	M.CAPACITOR	100NF 5% 50V	
	JC64R	2301-000375	M.CAPACITOR	100NF 5% 50V	
	JC70	2201-000146	C.CAPASITOR	100PF 5% 50V	
	JC71	2201-000146	C.CAPASITOR	100PF 5% 50V	
	JC72	2201-000146	C.CAPASITOR	100PF 5% 50V	
	JC73	2401-000419	E.CAPACITOR	10UF 20% 16V	
	JC74	2401-000438	E.CAPACITOR	10UF 20% 25V	
	JC75	2401-001912	E.CAPACITOR	1UF 20% 50V	
	JC76	2401-000438	E.CAPACITOR	10UF 20% 25V	
	JC77	2202-000781	C.CAPASITOR	100PF 10% 50V	
	JC78	2401-001019	E.CAPACITOR	3.3UF 20% 50V	
	JD1	0401-000101	DIODE	1N4148 100V	
	JIC1	1201-001819	IC	BA4560 8P DUAL	
	JLP1L	AH26-10002W	TRAP COIL	BIAS-TRAP105K	
	JLP1R	AH26-10002W	TRAP COIL	BIAS-TRAP105K	
	JL1	2701-000298	INDUCTOR	470UH 10%	
	JL2	AH26-10003C	TRAP COIL	PCHNS-5371EQJ	
	JQ11L	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	JQ11R	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	JQ14	0501-000610	TRANSISTOR	KSA928A-Y PNP	
	JQ15	0501-000369	TRANSISTOR	KSC2331-Y NPN	
	JQ16	0501-000398	TRANSISTOR	KSC945 NPN	
	JQ18	0504-001003	DEGI TRANSISTOR	KSR2003TA	
	JQ2L	0501-000010	TRANSISTOR	KSC1008 NPN	
	JQ2R	0501-000010	TRANSISTOR	KSC1008 NPN	
	JQ3L	0501-000010	TRANSISTOR	KSC1008 NPN	
	JQ3R	0501-000010	TRANSISTOR	KSC1008 NPN	
	JQ4L	0501-000398	TRANSISTOR	KSC945 NPN	
	JQ4R	0501-000398	TRANSISTOR	KSC945 NPN	
	JQ51	0504-001003	DEGI TRANSISTOR	KSR2003TA	
	JQ6	0504-001003	DEGI TRANSISTOR	KSR2003TA	
	JQ7	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	JQ7	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	JQ8	0504-001003	DEGI TRANSISTOR	KSR2003TA	
	JR1L	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	JR1R	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	JR12L	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	JR12R	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	JR2L	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	JR2R	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	JR23	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	JR24L	2001-000302	CARBON RESISTOR	10 5% 1/8W	
	JR24R	2001-000302	CARBON RESISTOR	10 5% 1/8W	

⚠	Item	Parts number	Parts name	Remarks	Area
	JR27	2001-000023	CARBON RESISTOR	47 5% 1/4W	
	JR29	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	JR3L	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	JR3R	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	JR30	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	JR31	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	JR32	2001-000456	CARBON RESISTOR	2.2 5% 1/4W	
	JR33	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	JR37L	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	JR37R	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	JR39	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	JR4	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	JR40L	2001-000302	CARBON RESISTOR	10 5% 1/8W	
	JR40R	2001-000302	CARBON RESISTOR	10 5% 1/8W	
	JR41L	2001-000008	CARBON RESISTOR	15K 5% 1/8W	
	JR41R	2001-000008	CARBON RESISTOR	15K 5% 1/8W	
	JR6L	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	JR6R	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	JR63L	2001-000977	CARBON RESISTOR	8.2K 5% 1/8W	
	JR63R	2001-000977	CARBON RESISTOR	8.2K 5% 1/8W	
	JR64L	2001-000241	CARBON RESISTOR	1.5K 5% 1/8W	
	JR64R	2001-000241	CARBON RESISTOR	1.5K 5% 1/8W	
	JR66L	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	JR66R	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	JR67L	2001-000802	CARBON RESISTOR	5.6K 5% 1/8W	
	JR67R	2001-000802	CARBON RESISTOR	5.6K 5% 1/8W	
	JR69	2001-000429	RESISTOR	1K 5% 1/8W	
	JR70	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	JR71	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	JR72	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	JR73	2001-000435	CARBON RESISTOR	1M 5% 1/8W	
	JR74	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	JR75	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	JSR2L	2103-000248	ROTA V RESISTOR	200K 1/10W	
	JSR2R	2103-000248	ROTA V RESISTOR	200K 1/10W	
	JW64	2001-000003	CARBON RESISTOR	330 5% 1/8W	
	JW66	2001-000003	CARBON RESISTOR	330 5% 1/8W	
	OCW2	AH39-00096B	LEAD CONNECTOR	#1007 AWG28 3P	
	OC1	2202-000807	C.CAPASITOR	22NF 25V	
	OC2	2201-000483	C.CAPASITOR	0.033NF 5% 50V	
	OC3	2401-000240	E.CAPACITOR	100UF 20% 10V	
	OIC1	AH14-10004R	IC	M74HCU04 14P	
	OJACK	0603-001069	OPTICAL JACK	5V 8MB/S 17DBM	
	OLPF	2901-001139	FILTER EMI	50V 5A 390PF	
	PCW1	3711-000588	CONNECTOR	10P 1R 2.5MM	
⚠	RBD1	0402-000450	BRIDGE DIODE	PBL403 200V 4.0A	
⚠	RBD2	0402-001258	BRIDGE DIODE	GBU606 6A 600V	
	RCW1	AH37-22001N	CONNECTOR	YFW800-02	
	RCW6	3711-001137	CONNECTOR	8P 1R 2MM	
⚠	RC1	2401-001928	E.CAPACITOR	2200UF 20% 35V	
⚠	RC11	2201-000161	C.CAPASITOR	10NF 500V	
	RC13	2401-000230	E.CAPACITOR	100UF 20% 100V	
	RC14	2401-000795	E.CAPACITOR	220UF 20% 16V	
	RC15	2201-000546	C.CAPASITOR	4.7NF 400V	
	RC19	2401-001895	E.CAPACITOR	100UF 20% 16V	
⚠	RC2	2401-001928	E.CAPACITOR	2200UF 20% 35V	
	RC20	2401-001895	E.CAPACITOR	100UF 20% 16V	
⚠	RC3	2401-003381	E.CAPACITOR	3300UF 20% 63V	
	RC37	2401-000438	E.CAPACITOR	10UF 20% 25V	
	RC39	2201-000546	C.CAPASITOR	4.7NF 400V	
⚠	RC4	2401-003381	E.CAPACITOR	3300UF 20% 63V	
	RC5	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	RC6	2401-000907	E.CAPACITOR	22UF 20% 16V	

■ **Electrical parts list (Main board)** **Block No. 01**

⚠	Item	Parts number	Parts name	Remarks	Area
	RC7	2401-001912	E.CAPACITOR	1UF 20% 50V	
	RC8	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
⚠	RC81	2201-000161	C.CAPASITOR	10NF 500V	
	RD1	0402-000127	DIODE	1N4002 100V 1A	
	RD10	0402-000127	DIODE	1N4002 100V 1A	
	RD2	0402-000127	DIODE	1N4002 100V 1A	
	RD3	0402-000127	DIODE	1N4002 100V 1A	
	RD5	0402-000127	DIODE	1N4002 100V 1A	
	RD7	0401-000101	DIODE	1N4148 100V	
	RD9	0402-000127	DIODE	1N4002 100V 1A	
	RD999	0402-000127	DIODE	1N4002 100V 1A	
⚠	RFS2	3601-000282	FUSE	4A 250V TL	
⚠	RFS9	3601-001295	FUSE	4A 125V FAST A.	
⚠	RF23	2008-000135	FUSIBLE RESISTOR	1 5% 1/2W	
	RIC1	1203-001653	REGULATOR	L4959 15P	
	RL1	2701-000298	INDUCTOR	470UH 10%	
	RL3	AH27-10001F	COIL	27UH	
	RL4	AH27-10001F	COIL	27UH	
	RQ1	0501-000610	TRANSISTOR	KSA928A-Y PNP	
	RQ3	0501-000331	TRANSISTOR	KSC1009-Y NPN	
	RQ4	0501-000294	TRANSISTOR	KSA708-Y PNP	
	RR1	2003-000701	OMF RESISTOR	470 5% 2W	
	RR10	2001-000055	CARBON RESISTOR	4.7K 5% 1/4W	
	RR11	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	RR12	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	RR13	2001-000111	CARBON RESISTOR	150 5% 1/4W	
	RR16	2001-000038	CARBON RESISTOR	390 5% 1/4W	
	RR17	2001-000429	RESISTOR	1K 5% 1/8W	
	RR20	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	RR3	2001-000023	CARBON RESISTOR	47 5% 1/4W	
	RR4	2001-000023	CARBON RESISTOR	47 5% 1/4W	
	RR5	2001-000613	CARBON RESISTOR	3.9K 5% 1/8W	
	RR51	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	RR52	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	RR6	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	RR8	2003-000455	OMF RESISTOR	100 5% 2W	
	RR800	2001-000660	CARBON RESISTOR	33K 5% 1/8W	
	RR9	2001-000563	CARBON RESISTOR	27K 5% 1/8W	
	RW1	AH39-00338A	LEAD CONNECTOR	#1007	
	RW2	AH39-00244A	LEAD CONNECTOR	#1007	
	RZD1	0403-000379	ZENER DIODE	UZP12B 12V 1W	
	RZD2	0403-000570	ZENER DIODE	UZP18B 18V 1W	
	RZD3	0403-000570	ZENER DIODE	UZP18B 18V 1W	
	RZD4	0403-000354	ZENER DIODE	UZ5.1B 5.1V	
	RZD5	0403-001010	ZENER DIODE	UZP5.6B 1W	
	R500	2001-000435	CARBON RESISTOR	1M 5% 1/8W	
	TC101	2201-000783	C.CAPASITOR	100NF 50V	
	TC102	2201-000783	C.CAPASITOR	100NF 50V	
	UD3	0401-000101	DIODE	1N4148 100V	
⚠	VBD3	0402-001077	BRIDGE DIODE	KPB202G 200V 2A	
	VC6	2201-000161	C.CAPASITOR	10NF 500V	
⚠	VC7	2401-001942	E.CAPACITOR	3300UF 35V	
	WA999	AH39-20008Q	LEAD CONNECTOR	5264 5395 300MM	

■ **Electrical parts list (Front board)** **Block No. 02**

⚠	Item	Parts number	Parts name	Remarks	Area
	ECW1	AH39-00249B	LEAD CONNECTOR	5P 28#1007	
	MR16	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	MR17	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	R-EYE	AC59-60060A	REMOCON EYE	GP1U281R SHARP	
	UCW1	3708-000492	CONNECTOR	9P 1.25MM SN	
	UCW2	3708-001691	CONNECTOR	18P 1.25MM AN	
	UCW3	3708-000454	CONNECTOR	22P 1.25MM ST	
	UCW4	3708-000451	CONNECTOR	16P 1.25MM ST	
	UCW5	3708-000492	CONNECTOR	9P 1.25MM SN	
	UCW6	3708-001488	CONNECTOR	30P 1.25MM AN	
	UCW7	3708-001692	CONNECTOR	18P 1.25MM ST	
	UC1	2401-000475	E.CAPACITOR	10UF 20% 50V	
	UC10	2401-000240	E.CAPACITOR	100UF 20% 10V	
	UC11	2401-000759	E.CAPACITOR	220NF 20% 50V	
	UC12	2401-001355	E.CAPACITOR	470UF 20% 10V	
	UC15	2201-000565	C.CAPASITOR	47NF 50V	
	UC17	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	UC19	2201-000565	C.CAPASITOR	47NF 50V	
	UC2	2201-000565	C.CAPASITOR	47NF 50V	
	UC20	2201-000163	C.CAPASITOR	10NF +80-20% 50V	
	UC21	2201-000163	C.CAPASITOR	10NF +80-20% 50V	
	UC3	2401-000475	E.CAPACITOR	10UF 20% 50V	
	UC30	2202-000781	C.CAPASITOR	100PF 10% 50V	
	UC32	2401-001364	E.CAPACITOR	470UF 20% 16V	
	UC4	2201-000565	C.CAPASITOR	47NF 50V	
	UC5	2201-000565	C.CAPASITOR	47NF 50V	
	UC6	2201-000423	C.CAPASITOR	0.027NF 5% 50V	
	UC7	2201-000423	C.CAPASITOR	0.027NF 5% 50V	
	UC8	2201-000247	C.CAPASITOR	0.015NF 5% 50V	
	UC9	2201-000247	C.CAPASITOR	0.015NF 5% 50V	
	UD1	0401-000101	DIODE	1N4148 100V	
	UD11	0402-000127	DIODE	1N4002 100V 1A	
	UD12	0402-000127	DIODE	1N4002 100V 1A	
	UD13	0402-000127	DIODE	1N4002 100V 1A	
	UD14	0401-000101	DIODE	1N4148 100V	
	UD15	0401-000101	DIODE	1N4148 100V	
	UD16	0402-000127	DIODE	1N4002 100V 1A	
	UD17	0402-000127	DIODE	1N4002 100V 1A	
	UD18	0402-000127	DIODE	1N4002 100V 1A	
	UD19	0402-000127	DIODE	1N4002 100V 1A	
	UD20	0402-000127	DIODE	1N4002 100V 1A	
	UD5	0401-000101	DIODE	1N4148 100V	
	UD6	0401-000101	DIODE	1N4148 100V	
	UIC1	AH11-00037C	IC	LC86P6548V-5V95	
	UIC2	0904-001316	IC	M66010GP 32P	
	ULD1	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD10	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD11	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD12	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD2	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD3	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD4	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD5	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD6	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD7	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD8	0601-001238	LED RED	LTL-1CHESS-UA	
	ULD9	0601-001238	LED RED	LTL-1CHESS-UA	
	UQ1	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	
	UQ10	0501-000610	TRANSISTOR	KSA928A-Y 1W	
	UQ11	0501-000610	TRANSISTOR	KSA928A-Y 1W	
	UQ12	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	
	UQ13	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	
	UQ14	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	

⚠	Item	Parts number	Parts name	Remarks	Area
	UQ15	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	
	UQ17	0504-000118	DEGI TRANSISTOR	KSR1003 NPN	
	UQ18	0501-000398	TRANSISTOR	KSC945 NPN	
	UQ2	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	
	UQ3	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	
	UQ4	0504-000117	DEGI TRANSISTOR	KSR1002 NPN	
	UQ5	0504-000118	DEGI TRANSISTOR	KSR1003 NPN	
	UQ6	0501-000398	TRANSISTOR	KSC945 NPN	
	UQ7	0504-000118	DEGI TRANSISTOR	KSR1003 NPN	
	UQ8	0501-000610	TRANSISTOR	KSA928A-Y 1W	
	UQ9	0504-000118	DEGI TRANSISTOR	KSR1003 NPN	
	UR1	2001-000003	CARBON RESISTOR	330 5% 1/8W	
	UR10	2001-000258	CARBON RESISTOR	1.8K 5% 1/8W	
	UR11	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	UR110	2001-000995	CARBON RESISTOR	820 5% 1/8W	
	UR111	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	UR112	2001-000241	CARBON RESISTOR	1.5K 5% 1/8W	
	UR113	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	UR114	2001-000258	CARBON RESISTOR	1.8K 5% 1/8W	
	UR115	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	UR116	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	UR117	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	UR118	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	UR119	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR12	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR120	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	UR121	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR122	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	UR123	2001-000010	CARBON RESISTOR	68K 5% 1/8W	
	UR124	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR125	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR126	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	UR127	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	UR128	2001-000258	CARBON RESISTOR	1.8K 5% 1/8W	
	UR129	2001-000241	CARBON RESISTOR	1.5K 5% 1/8W	
	UR13	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR130	2001-000221	CARBON RESISTOR	1.2K 5% 1/8W	
	UR131	2001-000429	RESISTOR	1K 5% 1/8W	
	UR14	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR15	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR150	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR151	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR152	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR153	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR154	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR16	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR162	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR164	2001-000515	RESISTOR	220 5% 1/8W	
	UR17	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR18	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR19	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR196	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	UR2	2001-000995	CARBON RESISTOR	820 5% 1/8W	
	UR20	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR201	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR202	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR203	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR204	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR205	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR206	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR207	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR208	2001-000429	RESISTOR	1K 5% 1/8W	
	UR209	2001-000857	CARBON RESISTOR	560 5% 1/8W	

■ **Electrical parts list (Front board)** **Block No. 02**

⚠	Item	Parts number	Parts name	Remarks	Area
	UR21	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR22	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR23	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR24	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR25	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR26	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR27	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR28	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR29	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR30	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR31	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR32	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR33	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	UR34	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR35	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR36	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR37	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR38	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR39	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR4	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	UR40	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	UR41	2001-000429	RESISTOR	1K 5% 1/8W	
	UR42	2001-000429	RESISTOR	1K 5% 1/8W	
	UR43	2001-000435	CARBON RESISTOR	1M 5% 1/8W	
	UR44	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	UR45	2001-000508	CARBON RESISTOR	220K 5% 1/8W	
	UR46	2001-000793	CARBON RESISTOR	47 5% 1/8W	
	UR47	2001-000850	CARBON RESISTOR	560K 5% 1/8W	
	UR48	2001-000295	CARBON RESISTOR	10M 5% 1/8W	
	UR49	2001-001178	CARBON RESISTOR	680 5% 1/2W	
	UR5	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	UR50	2001-001178	CARBON RESISTOR	680 5% 1/2W	
	UR51	2001-001178	CARBON RESISTOR	680 5% 1/2W	
	UR52	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	UR54	2001-000995	CARBON RESISTOR	820 5% 1/8W	
	UR56	2001-000429	RESISTOR	1K 5% 1/8W	
	UR57	2001-000429	RESISTOR	1K 5% 1/8W	
	UR58	2001-000429	RESISTOR	1K 5% 1/8W	
	UR59	2001-000429	RESISTOR	1K 5% 1/8W	
	UR6	2001-000855	CARBON RESISTOR	560 5% 1/4W	
	UR60	2001-000429	RESISTOR	1K 5% 1/8W	
	UR61	2001-000429	RESISTOR	1K 5% 1/8W	
	UR62	2001-000429	RESISTOR	1K 5% 1/8W	
	UR63	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR64	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR65	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR66	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR67	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR68	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR69	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR7	2001-000429	RESISTOR	1K 5% 1/8W	
	UR70	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR71	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR72	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR73	2001-000429	RESISTOR	1K 5% 1/8W	
	UR74	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR75	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR76	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR77	2001-000005	CARBON RESISTOR	390 5% 1/8W	
	UR79	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR8	2001-000221	CARBON RESISTOR	1.2K 5% 1/8W	
	UR80	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR81	2001-000290	CARBON RESISTOR	10K 5% 1/8W	

⚠	Item	Parts number	Parts name	Remarks	Area
	UR82	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR83	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR84	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR85	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR86	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR87	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR88	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR89	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR9	2001-000241	CARBON RESISTOR	1.5K 5% 1/8W	
	UR90	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR91	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	UR92	2001-000429	RESISTOR	1K 5% 1/8W	
	UR93	2001-000995	CARBON RESISTOR	820 5% 1/8W	
	UR94	2001-000221	CARBON RESISTOR	1.2K 5% 1/8W	
	UR95	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	USR1	2103-000341	ROTA V RESISTOR	2K 30% 1/10W	
	USW1	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW10	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW11	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW12	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW13	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW14	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW15	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW16	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW17	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW18	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW19	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW2	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW20	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW21	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW22	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW23	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW24	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW25	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW26	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW27	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW28	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW29	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW3	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW30	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW31	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW32	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW4	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW5	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW6	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW7	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW8	3404-000165	TACT SWITCH	12V 50MA 160GF	
	USW9	3404-000165	TACT SWITCH	12V 50MA 160GF	
	UVR1	3406-001071	ROTARY SWITCH	5V DC 0.5MA 3P	
	UVR2	3406-001047	ROTARY SWITCH	RE012104PVB25FINB	
	UVR3	3406-001047	ROTARY SWITCH	RE012104PVB25FINB	
	UX1	2802-000181	RESONATOR	6MHZ 0.3%	
	UX2	2801-001394	CRYSTAL	32.768KHZ	
	VFD	AH07-00040A	VFD	BJ821GNK	

■ **Electrical parts list (Amp board)** **Block No. 03**

⚠	Item	Parts number	Parts name	Remarks	Area
	ACE1	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACE2	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACE3	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACE4	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACE5	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACE6	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACE7	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACE8	2202-000817	C.CAPASITOR	4.7NF 16V	
	ACW1	3708-001094	CONNECTOR	13P 1.25MM ST	
	ACW2	3711-003113	CONNECTOR	9P 1R 2.5MM	
	ACW5	3711-000820	CONNECTOR	2P 1.25MM ST	
	ACW6	3711-000820	CONNECTOR	2P 1.25MM ST	
	AC1	2201-000532	C.CAPASITOR	4.7NF 10% 50V	
	AC1L	2201-000368	C.CAPASITOR	220PF 10% 50V	
	AC1R	2201-000368	C.CAPASITOR	220PF 10% 50V	
	AC10	2401-000230	E.CAPACITOR	100UF 20% 100V	
	AC10L	2301-000375	M.CAPACITOR	100NF 5% 50V	
	AC11	2201-000368	C.CAPASITOR	220PF 10% 50V	
	AC12	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	AC13	2401-001154	E.CAPACITOR	33UF 20% 10V	
	AC14	2201-000659	C.CAPASITOR	6PF 0.5PF 50V	
	AC15	2201-000659	C.CAPASITOR	6PF 0.5PF 50V	
	AC16	2401-001154	E.CAPACITOR	33UF 20% 10V	
	AC17	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	AC2	2201-000532	C.CAPASITOR	4.7NF 10% 50V	
	AC2L	2401-000357	E.CAPACITOR	100UF 0.2 50V	
	AC2R	2401-000357	E.CAPACITOR	100UF 0.2 50V	
	AC20	2401-000230	E.CAPACITOR	100UF 20% 100V	
	AC22	2301-000390	M.CAPACITOR	15NF 10% 50V	
	AC23	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC24	2301-000216	M.CAPACITOR	220NF 5% 50V	
	AC25	2301-000419	M.CAPACITOR	27NF 10% 50V	
	AC26	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC27	2201-000783	C.CAPASITOR	100NF 50V	
	AC28	2201-000783	C.CAPASITOR	100NF 50V	
	AC29	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC3	2301-000375	M.CAPACITOR	100NF 5% 50V	
	AC3R	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	AC30	2401-001975	E.CAPACITOR	47UF 20% 16V	
	AC301	2401-000385	E.CAPACITOR	10UF 20% 100V	
	AC302	2401-000385	E.CAPACITOR	10UF 20% 100V	
	AC303	2401-000385	E.CAPACITOR	10UF 20% 100V	
	AC304	2401-000385	E.CAPACITOR	10UF 20% 100V	
	AC31	2201-000146	C.CAPASITOR	100PF 5% 50V	
	AC32	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC33	2401-003621	E.CAPACITOR	47UF 20% 63V	
	AC34	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	AC35	2301-000474	M.CAPACITOR	8.2NF 10% 50V	
	AC36	2201-000565	C.CAPASITOR	47NF 50V	
	AC37	2401-001975	E.CAPACITOR	47UF 20% 16V	
	AC38	2401-001975	E.CAPACITOR	47UF 20% 16V	
	AC39	2401-001912	E.CAPACITOR	1UF 20% 50V	
	AC4	2301-000375	M.CAPACITOR	100NF 5% 50V	
	AC4L	2401-001154	E.CAPACITOR	33UF 20% 10V	
	AC4R	2401-001154	E.CAPACITOR	33UF 20% 10V	
	AC40	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	AC41	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC42	2301-000216	M.CAPACITOR	220NF 5% 50V	
	AC43	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC44	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC45	2301-000216	M.CAPACITOR	220NF 5% 50V	
	AC46	2301-000419	M.CAPACITOR	27NF 10% 50V	
	AC47	2201-000381	C.CAPASITOR	22NF +80% 50V	

⚠	Item	Parts number	Parts name	Remarks	Area
	AC48	2201-000381	C.CAPASITOR	22NF +80% 50V	
	AC49	2401-001975	E.CAPACITOR	47UF 20% 16V	
	AC5L	2201-000659	C.CAPASITOR	6PF 0.5PF 50V	
	AC5R	2201-000659	C.CAPASITOR	6PF 0.5PF 50V	
	AC50	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC51	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	AC52	2401-000871	E.CAPACITOR	220UF 20% 50V	
	AC54	2201-000783	C.CAPASITOR	100NF 50V	
	AC55	2201-000783	C.CAPASITOR	100NF 50V	
	AC56	2301-000375	M.CAPACITOR	100NF 5% 50V	
	AC6L	2401-002180	E.CAPACITOR	2.2UF 20% 50V	
	AC7L	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC7R	2401-001895	E.CAPACITOR	100UF 20% 16V	
	AC8	2201-000368	C.CAPASITOR	220PF 10% 50V	
	AC8L	2401-000459	E.CAPACITOR	10UF 20% 35V	
	AC8R	2401-000459	E.CAPACITOR	10UF 20% 35V	
	AC9	2401-000230	E.CAPACITOR	100UF 20% 100V	
	AC9L	2201-000381	C.CAPASITOR	22NF +80% 50V	
	AC9R	2201-000381	C.CAPASITOR	22NF +80% 50V	
	AD1	0401-000101	DIODE	1N4148 100V	
	AD2	0401-000101	DIODE	1N4148 100V	
	AD5	0402-000127	DIODE	1N4002 100V 1A	
	AD6	0401-000101	DIODE	1N4148 100V	
	AD7	0401-000101	DIODE	1N4148 100V	
	AD8	0401-000101	DIODE	1N4148 100V	
	AD9	0401-000101	DIODE	1N4148 100V	
⚠	AIC1	1201-001582	IC	STK402-070 15P	
⚠	AIC2	1201-001850	IC	STK402-120 15P	
	AIC3	1201-000163	IC	BA4560 8P	
	AIC4	1201-000163	IC	BA4560 8P	
	AIC5	1201-000163	IC	BA4560 8P	
	AIC6	1201-000163	IC	BA4560 8P	
	AIC7	1201-000163	IC	BA4560 8P	
	AL1	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AL1L	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AL1R	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AL2	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AL3	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AL4	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AL5	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AL6	AH27-90001A	SPRING COIL	2.2UH SPRING	
	AQ1	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	AQ11	0501-000398	TRANSISTOR	KSC945 NPN	
	AQ12	0501-000398	TRANSISTOR	KSC945 NPN	
	AQ13	0501-000398	TRANSISTOR	KSC945 NPN	
	AQ14	0501-000610	TRANSISTOR	KSA928A-Y PNP	
	AQ2	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	AQ2L	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	AQ2R	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	AQ3	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	AQ6	0501-000010	TRANSISTOR	KSC1008 NPN	
	AQ8	0501-000610	TRANSISTOR	KSA928A-Y PNP	
	ARL1	3501-001197	RELAY	OSA-SS-212DM3	
	AR1	2003-000689	OMF RESISTOR	4.7 5% 1W	
	AR1L	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	AR1R	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	AR10	2003-000390	OMF RESISTOR	0.27 5% 2W	
	AR11	2003-000390	OMF RESISTOR	0.27 5% 2W	
	AR11L	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR11R	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR12	2003-000390	OMF RESISTOR	0.27 5% 2W	
	AR12L	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR12R	2001-001000	CARBON RESISTOR	82K 5% 1/8W	

■ **Electrical parts list (Amp board)** **Block No. 03**

⚠	Item	Parts number	Parts name	Remarks	Area
	AR13	2003-000008	OMF RESISTOR	100 5% 1W	
	AR13L	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR13R	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR14	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR14L	2001-001000	CARBON RESISTOR	82K 5% 1/8W	
	AR14R	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR15	2001-000221	CARBON RESISTOR	1.2K 5% 1/8W	
	AR15L	2003-000689	OMF RESISTOR	4.7 5% 1W	
	AR15R	2003-000689	OMF RESISTOR	4.7 5% 1W	
	AR2	2003-000689	OMF RESISTOR	4.7 5% 1W	
	AR2L	2001-000258	CARBON RESISTOR	1.8K 5% 1/8W	
	AR2R	2001-000258	CARBON RESISTOR	1.8K 5% 1/8W	
	AR20	2001-000660	CARBON RESISTOR	33K 5% 1/8W	
	AR21	2001-000429	RESISTOR	1K 5% 1/8W	
	AR22	2001-000017	CARBON RESISTOR	4.7 5% 1/4W	
	AR24	2001-000017	CARBON RESISTOR	4.7 5% 1/4W	
	AR25	2001-000515	RESISTOR	220 5% 1/8W	
	AR26	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR3	2001-000065	CARBON RESISTOR	10K 5% 1/4W	
	AR3L	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR3R	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR30	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR300	2001-000411	CARBON RESISTOR	18K 5% 1/8W	
	AR301	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR302	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR303	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	AR31	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR310	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR311	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR312	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR32	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR33	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR34	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR35	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR36	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR37	2001-000258	CARBON RESISTOR	1.8K 5% 1/8W	
	AR38	2001-000802	CARBON RESISTOR	5.6K 5% 1/8W	
	AR39	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR4	2001-000290	CARBON RESISTOR	10K 5% 1/8W	
	AR4L	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR4R	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR40	2001-000508	CARBON RESISTOR	220K 5% 1/8W	
	AR41	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR42	2001-000008	CARBON RESISTOR	33K 5% 1/8W	
	AR43	2001-000331	RESISTOR	12K 5% 1/8W	
	AR44	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR45	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR46	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR47	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR48	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR49	2001-000548	CARBON RESISTOR	270K 5% 1/8W	
	AR5	2003-000008	OMF RESISTOR	100 5% 1W	
	AR50	2001-000563	CARBON RESISTOR	27K 5% 1/8W	
	AR51	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR52	2001-000977	CARBON RESISTOR	8.2K 5% 1/8W	
	AR53	2001-000508	CARBON RESISTOR	220K 5% 1/8W	
	AR54	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	AR55	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR56	2001-000554	CARBON RESISTOR	270K 5% 1/8W	
	AR57	2001-000802	CARBON RESISTOR	5.6K 5% 1/8W	
	AR58	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR59	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR6	2001-000290	CARBON RESISTOR	10K 5% 1/8W	

⚠	Item	Parts number	Parts name	Remarks	Area
	AR6L	2001-000017	CARBON RESISTOR	4.7 5% 1/4W	
	AR6R	2001-000017	CARBON RESISTOR	4.7 5% 1/4W	
	AR60	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR61	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR62	2001-000563	CARBON RESISTOR	27K 5% 1/8W	
	AR63	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR64	2001-000258	CARBON RESISTOR	1.8K 5% 1/8W	
	AR65	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR66	2001-000508	CARBON RESISTOR	220K 5% 1/8W	
	AR67	2001-000508	CARBON RESISTOR	220K 5% 1/8W	
	AR68	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR69	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR7	2001-000221	CARBON RESISTOR	1.2K 5% 1/8W	
	AR7L	2001-000429	RESISTOR	1K 5% 1/8W	
	AR7R	2001-000429	RESISTOR	1K 5% 1/8W	
	AR70	2001-000522	CARBON RESISTOR	22K 5% 1/8W	
	AR71	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR72	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR73	2001-001000	CARBON RESISTOR	82K 5% 1/8W	
	AR74	2001-000273	CARBON RESISTOR	100K 5% 1/8W	
	AR75	2001-000281	CARBON RESISTOR	100 5% 1/8W	
	AR77	2001-000065	CARBON RESISTOR	10K 5% 1/4W	
	AR78	2003-000008	OMF RESISTOR	100 5% 1W	
	AR79	2003-000008	OMF RESISTOR	100 5% 1W	
	AR8	2001-000864	CARBON RESISTOR	56K 5% 1/8W	
	AR8L	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	AR8R	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	AR80	2001-000660	CARBON RESISTOR	33K 5% 1/8W	
	AR81	2001-000660	CARBON RESISTOR	33K 5% 1/8W	
	AR82	2001-000660	CARBON RESISTOR	33K 5% 1/8W	
	AR83	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR84	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	AR86	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	AR87	2001-000591	CARBON RESISTOR	3.3K 5% 1/8W	
	AR88	2001-000449	CARBON RESISTOR	2.2K 5% 1/8W	
	AR89	2001-000786	CARBON RESISTOR	47K 5% 1/8W	
	AR9	2003-000390	OMF RESISTOR	0.27 5% 2W	
	LPC30	2401-001538	E.CAPACITOR	47UF 20% 25V	
	LQ1	05041-000369	TRANSISTOR	KSC2331 NPN	
	LQ2	0501-000610	TRANSISTOR	KSA928A-Y PNP	
	SPK	3716-001164	TERMINAL BLOCK	SOLDER 8P	

■ **Electrical parts list (ECO board)** **Block No. 04**

⚠	Item	Parts number	Parts name	Remarks	Area
	ERL3	AH27-10001F	COIL	27UH	
	ERL4	AH27-10001F	COIL	27UH	
	PJ2	3711-000190	CONNECTOR	2P 7.92MM ST	
	PJ3	AH37-22001N	CONNECTOR	YFW800-02 2P	
⚠	PT2	AH26-80144W	POWER TRANS	220V 50HZ	
	RCW5	3711-000967	CONNECTOR	4P 1R 2MM AN	
	RC20	2401-001969	E.CAPACITOR	470UF 20% 25V	
	RC21	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	RC22	2401-001912	E.CAPACITOR	1UF 20% 50V GP	
	RD20	0402-000127	DIODE	1N4002 100V 1A	
	RD21	0402-000127	DIODE	1N4002 100V 1A	
	RD22	0402-000127	DIODE	1N4002 100V 1A	
	RD23	0402-000127	DIODE	1N4002 100V 1A	
	RD24	0402-000127	DIODE	1N4002 100V 1A	
	RD25	0402-000127	DIODE	1N4002 100V 1A	
	RD26	0401-000101	DIODE	1N4148 100V 200MA	
	RD27	0402-000127	DIODE	1N4002 100V 1A	
⚠	RIC2	AC14-12001G	IC	KA78L05Z	
	RL2	3501-001159	RELAY	SDT-SS-112DM	
	RQ20	0501-000407	TRANSISTOR	KSD471A-Y NPN	
	RR22	2001-000429	RESISTOR	1K 5% 1/8W	
	RR23	2001-000890	CARBON RESISTOR	6.8K 5% 1/8W	
	RR24	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	RR25	2001-000734	CARBON RESISTOR	4.7K 5% 1/8W	
	RR26	2001-001195	CARBON RESISTOR	82 5% 1/2W	
	RZD10	0403-000354	ZENER DIODE	UZ5.1B 5.1V 500MW	

■ **Electrical parts list (CD board)** **Block No. 05**

⚠	Item	Parts number	Parts name	Remarks	Area
	CW101	3708-001252	CONNECTOR	16P 1MM STR	
	CW102	AH39-20561P	LEAD CONNECTOR	5295 6P 150MM	
	CW103	3708-001131	CONNECTOR	SCB-1105-00-025P	
	CW104	3711-003379	CONNECTOR	35366-0310	
	CW105	3708-001438	COMMECTOR	22P 1.25MM AN	
	CW106	AH39-20025S	LEAD CONNECTOR	51004-08 35023-08	
	CW107	3711-000906	CONNECTOR	BOX 3P 1R 2MM AN	
	C101	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C102	2203-000440	CHIP CAPACITOR	1NF 50V 1608	
	C103	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C104	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C105	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C106	2203-001140	CHIP CAPACITOR	68NF 16V 1608	
	C107	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C108	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C111	2203-000888	CHIP CAPACITOR	4.7NF 50V 1608	
	C112	2203-000888	CHIP CAPACITOR	4.7NF 50V 1608	
	C113	2202-000780	C.CAPACITOR	100NF +80-20% 50V	
	C114	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	C115	2203-000206	CHIP CAPACITOR	100NF 50V 2012	
	C116	2203-000206	CHIP CAPACITOR	100NF 50V 2012	
	C117	2203-000440	CHIP CAPACITOR	1NF 50V 1608	
	C118	2203-000206	CHIP CAPACITOR	100NF 50V 2012	
	C119	2203-000800	CHIP CAPACITOR	33NF 25V 1608	
	C120	2401-001968	E.CAPACITOR	470NF 20% 50V	
	C121	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C122	2203-001140	CHIP CAPACITOR	68NF 16V 1608	
	C123	2401-000419	E.CAPACITOR	10UF 20% 16V	
	C124	2203-000206	CHIP CAPACITOR	100NF 50V 2012	
	C124A	2203-001063	CHIP CAPACITOR	56NF 16V 1608	
	C126	2203-000491	CHIP CAPACITOR	2.2NF 50V 1608	
	C127	2203-000592	CHIP CAPACITOR	0.22NF 50V 1608	
	C128	2203-000800	CHIP CAPACITOR	33NF 25V 1608	
	C129	2203-000206	CHIP CAPACITOR	100NF 50V 2012	
	C130	2203-000206	CHIP CAPACITOR	100NF 50V 2012	
	C131	2203-000178	CHIP CAPACITOR	100NF 25V 1608	
	C132	2203-000178	CHIP CAPACITOR	100NF 25V 1608	
	C133	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C134	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C135	2401-001968	E.CAPACITOR	470NF 20% 50V	
	C201	2203-000681	CHIP CAPACITOR	27PF 50V 1608	
	C202	2203-000681	CHIP CAPACITOR	27PF 50V 1608	
	C203	2203-001222	CHIP CAPACITOR	820PF 50V 1608	
	C204	2203-000178	CHIP CAPACITOR	100NF 25V 1608	
	C205	2203-000178	CHIP CAPACITOR	100NF 25V 1608	
	C207	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C208	2203-000851	CHIP CAPACITOR	0.039NF 50V 1608	
	C209	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C211	2203-000178	CHIP CAPACITOR	100NF 25V 1608	
	C212	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C213	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C214	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C215	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C216	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C217	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C218	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C301	2401-001102	E.CAPACITOR	330UF 20% 16V	
	C302	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C303	2401-000240	E.CAPACITOR	100UF 20% 10V	
	C304	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C305	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C401	2203-000257	CHIP CAPACITOR	10NF 50V 1608	
	C402	2203-000257	CHIP CAPACITOR	10NF 50V 1608	

⚠	Item	Parts number	Parts name	Remarks	Area
	C403	2203-000178	CHIP CAPACITOR	100NF 25V 1608	
	C501L	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	C501R	2401-001954	E.CAPACITOR	4.7UF 20% 50V	
	C502L	2203-000440	CHIP CAPACITOR	1NF 50V 1608	
	C502R	2203-000440	CHIP CAPACITOR	1NF 50V 1608	
	C801	2401-000795	E.CAPACITOR	220UF 20% 16V	
	C804	2202-000243	C.CAPACITOR	33PF 5% 50V	
	C805	2202-000243	C.CAPACITOR	33PF 5% 50V	
	C806	2202-000243	C.CAPACITOR	33PF 5% 50V	
	D301	0402-000151	DIODE	1N5392 100V	
	HS	AH62-30048A	HEAT SINK	FOR IC301	
	IC101	1204-001799	IC	KB9226 48P	
	IC201	0904-001524	IC	5L9290 48P	
	IC301	1003-000179	IC	KA9258D 28P	
	IC401	1003-001162	IC	KA3082 10PIN	
	IC402	1003-001162	IC	KA3082 10PIN	
	IC801	AC14-12001G	IC	KA78L05Z	
	J1	2007-000070	CHIP RESISTOR	0OHM 1/16W 1608	
	J10	2007-000070	CHIP RESISTOR	0OHM 1/16W 1608	
	J12	2007-000029	CHIP RESISTOR	0OHM 1/10W 2012	
	J13	2007-000070	CHIP RESISTOR	0OHM 1/16W 1608	
	J2	2007-000070	CHIP RESISTOR	0OHM 1/16W 1608	
	J3	2007-000070	CHIP RESISTOR	0OHM 1/16W 1608	
	J4	2007-000029	CHIP RESISTOR	0OHM 1/10W 2012	
	J5	2007-000070	CHIP RESISTOR	0OHM 1/16W 1608	
	J7	2007-000029	CHIP RESISTOR	0OHM 1/10W 2012	
	J8	2007-000029	CHIP RESISTOR	0OHM 1/10W 2012	
	J9	2007-000029	CHIP RESISTOR	0OHM 1/10W 2012	
	MJ1	2007-000070	CHIP RESISTOR	0OHM 1/16W 1608	
	MR1	2007-000090	CHIP RESISTOR	10K 1/16W 1608	
	MR2	2007-000090	CHIP RESISTOR	10K 1/16W 1608	
	MR3	2007-000090	CHIP RESISTOR	10K 1/16W 1608	
	Q101	0501-000314	TRANSISTOR	KSA812 PNP	
	Q301	0501-000610	TRANSISTOR	KSA928A PNP	
	Q302	0501-000010	TRANSISTOR	KSC1008-YTA	
	R101	2007-000098	CHIP RESISTOR	56K 1/16W 1608	
	R102	2007-000098	CHIP RESISTOR	56K 1/16W 1608	
	R103	2007-000098	CHIP RESISTOR	56K 1/16W 1608	
	R104	2007-000098	CHIP RESISTOR	56K 1/16W 1608	
	R105	2007-000100	CHIP RESISTOR	68K 1/16W 1608	
	R106	2007-000100	CHIP RESISTOR	68K 1/16W 1608	
	R107	2007-000115	CHIP RESISTOR	82 1/16W 1608	
	R108	2007-000308	CHIP RESISTOR	10 1/10W 2012	
	R110	2007-000455	CHIP RESISTOR	18K 1% 1/16W 1608	
	R112	2007-001196	CHIP RESISTOR	820K 1/16W 1608	
	R113	2007-000132	CHIP RESISTOR	180K 1/16W 1608	
	R114	2007-000100	CHIP RESISTOR	68K 1/16W 1608	
	R115	2007-001179	CHIP RESISTOR	8.2K 1/16W 1608	
	R116	2007-000093	CHIP RESISTOR	20K 1/16W 1608	
	R117	2001-000331	RESISTOR	12K 5% 1/8W	
	R118	2007-000109	CHIP RESISTOR	1M 1/16W 1608	
	R119	2007-000101	CHIP RESISTOR	82K 1/16W 1608	
	R120	2007-000100	CHIP RESISTOR	68K 1/16W 1608	
	R120	2007-000098	CHIP RESISTOR	56K 1/16W 1608	
	R121	2007-000092	CHIP RESISTOR	15K 1/16W 1608	
	R123	2007-000097	CHIP RESISTOR	47K 1/16W 1608	
	R124	2007-000103	CHIP RESISTOR	120K 1/16W 1608	
	R125	2007-000103	CHIP RESISTOR	120K 1/16W 1608	
	R126	2007-000098	CHIP RESISTOR	56K 1/16W 1608	
	R127	2007-000100	CHIP RESISTOR	68K 1/16W 1608	
	R128	2007-000129	CHIP RESISTOR	27K 1/16W 1608	
	R132	2007-000090	CHIP RESISTOR	10K 1/16W 1608	
	R133	2007-000090	CHIP RESISTOR	10K 1/16W 1608	

■ **Electrical parts list (CD board)** **Block No. 05**

⚠	Item	Parts number	Parts name	Remarks	Area
	R201	2007-000074	CHIP RESISTOR	100 1/16W 1608	
	R202	2007-000109	CHIP RESISTOR	1M 1/16W 1608	
	R204	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R205	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R206	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R207	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R208	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R209	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R210	2007-000075	CHIP RESISTOR	220 /16W 1608	
	R301	2008-000140	FUS RESISTOR	2.2 5% 1/2W	
	R302	2001-001006	RESISTOR	82 5% 1/8W	
	R501L	2007-000102	CHIP RESISTOR	100K 1/16W	
	R501R	2007-000102	CHIP RESISTOR	100K 1/16W	
	R502L	2007-000074	CHIP RESISTOR	100 1/16W 1608	
	R502R	2007-000074	CHIP RESISTOR	100 1/16W 1608	
	R803	2001-000429	RESISTOR	1K 5% 1/8W	
	R804	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R805	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R806	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R807	2007-000084	CHIP RESISTOR	4.7K 1/16W 1608	
	R808	2007-000084	CHIP RESISTOR	4.7K 1/16W 1608	
	R809	2007-000084	CHIP RESISTOR	4.7K 1/16W 1608	
	R810	2001-000515	RESISTOR	220 5% 1/8W	
	R811	2007-000078	CHIP RESISTOR	1K 1/16W 1608	
	R813	2007-000097	CHIP RESISTOR	47K 1/16W 1608	
	X201	2802-000211	RESONATOR	16.93MHZ 0.5% TP	
	ZD301	0403-000344	ZENER DIODE	UZ3.9B 3.9V	
	ZD401	0403-000361	ZENER DIODE	UZ6.2BSB 6.2V	
	ZD402	0403-000352	ZENER DIODE	UZ4.7BM 4.7V	

< MEMO >

Packing materials and accessories parts list

Block No. M 3 M M

Block No. M 5 M M

EV version

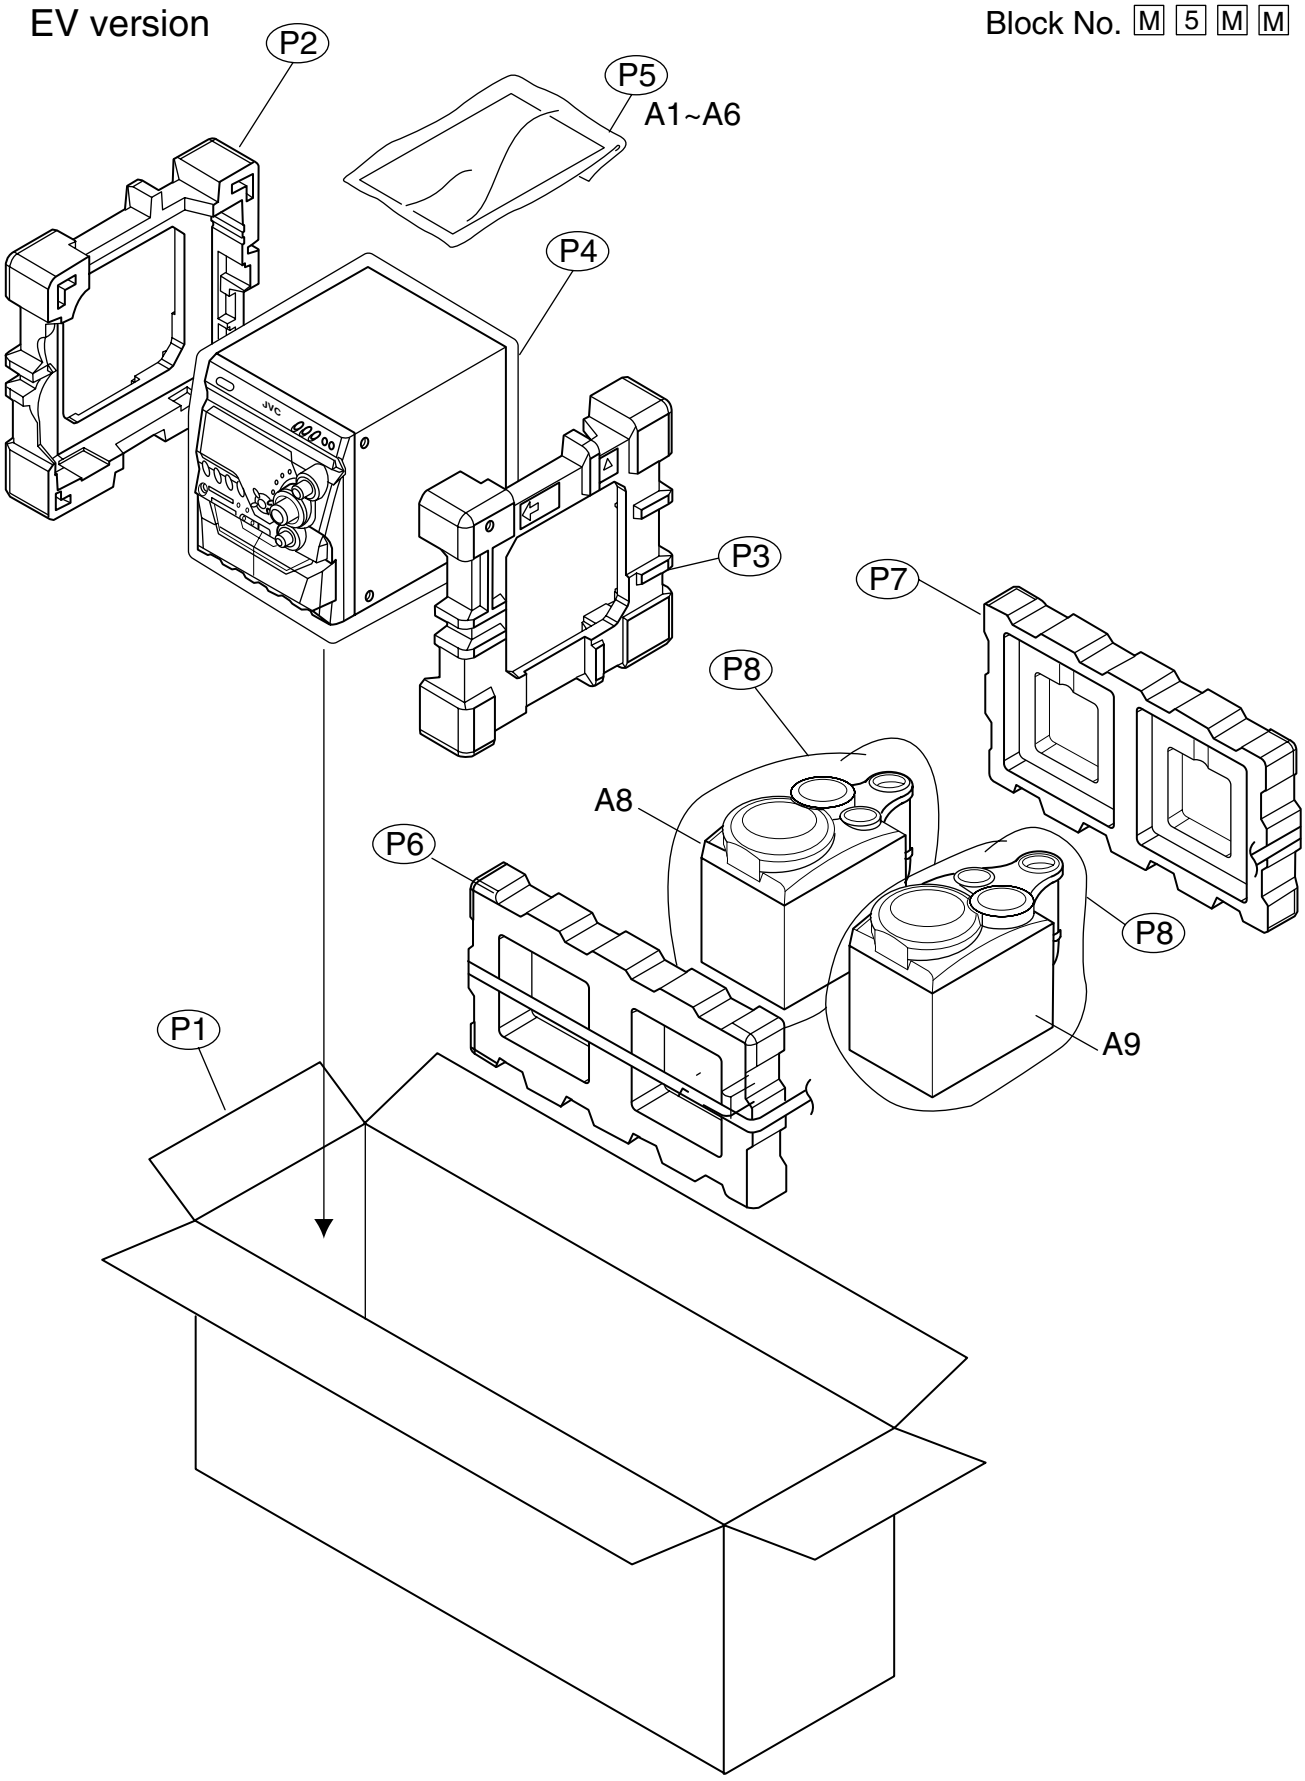

Packing materials and accessories parts list

Block No. M 3 M M
Block No. M 5 M M

B,E,EN version

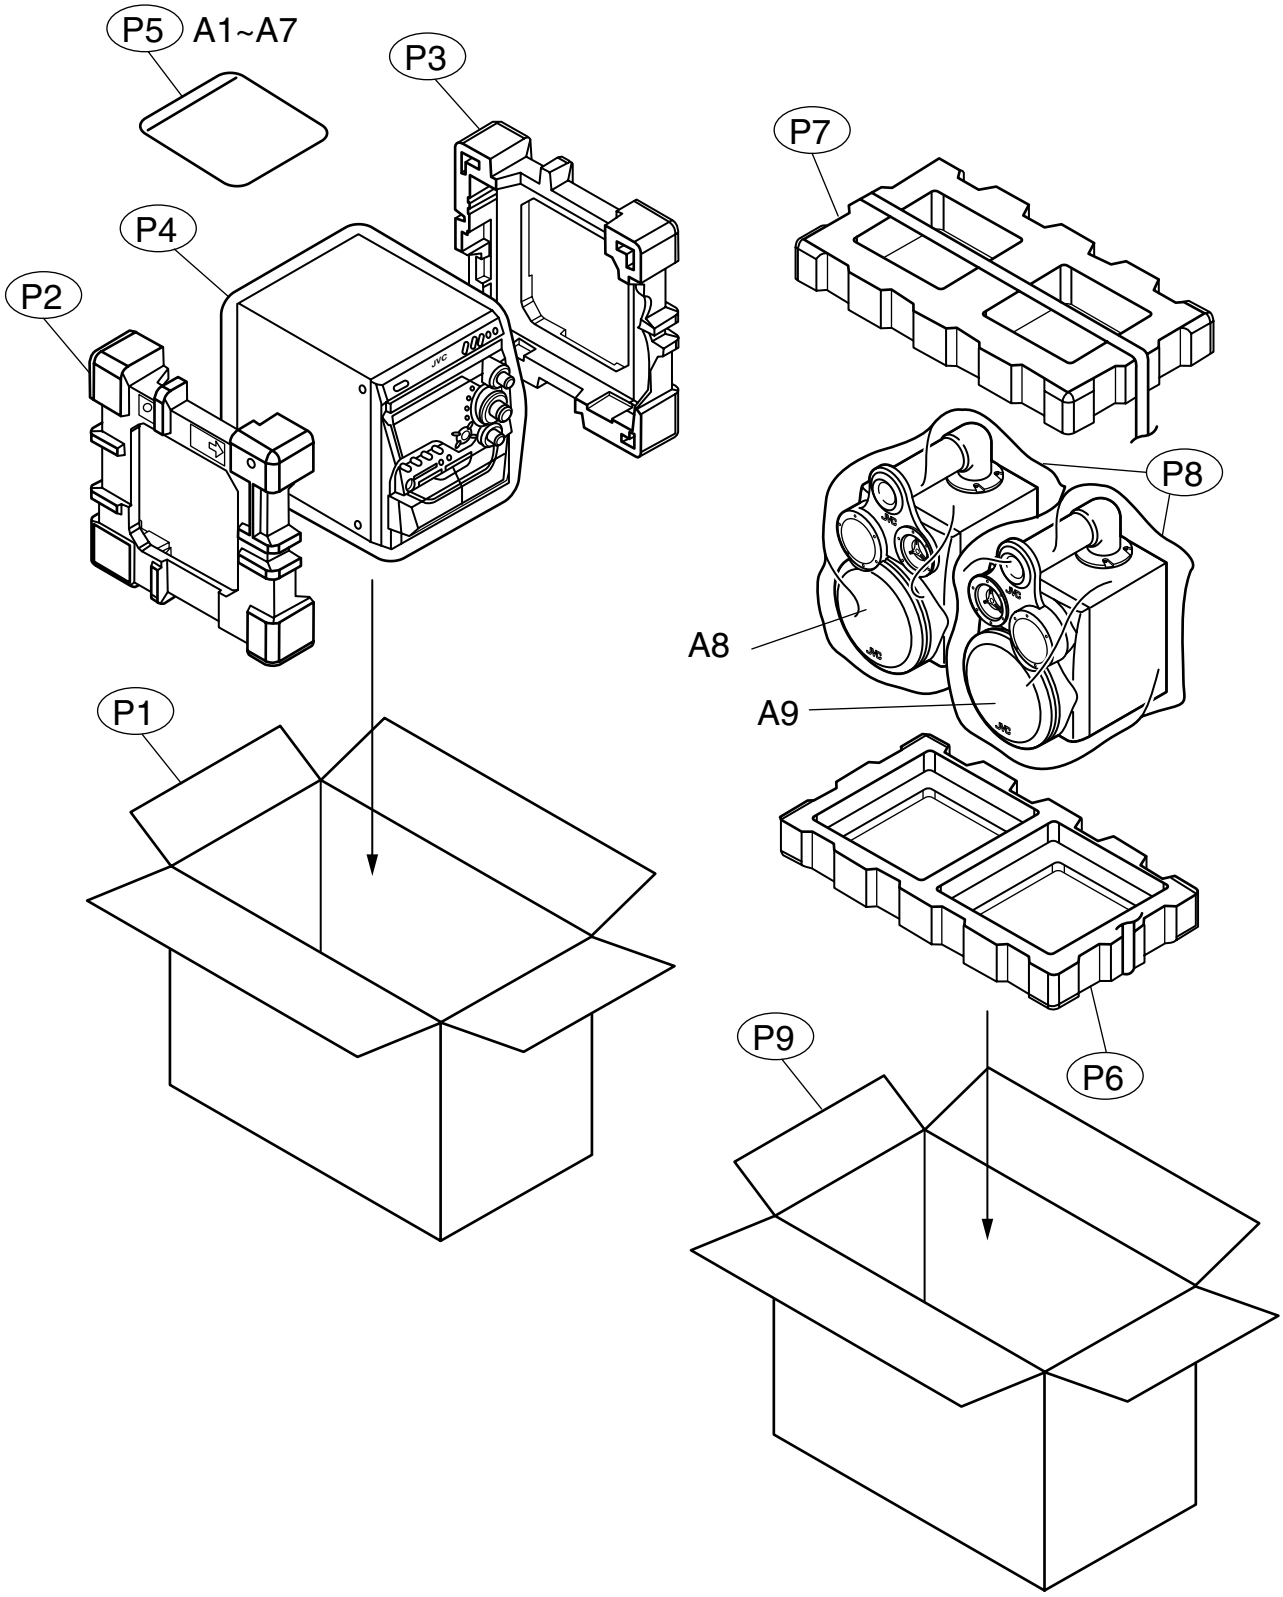

■ Parts list (Packing)

Block No. M3MM

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
	P 1	AH69-00657C	MASTER CARTON	1		EV
		AH69-00603E	PACKING CASE	1		B,E,EN
	P 2	AH69-00592A	CUSHION L	1	FOR SET	
	P 3	AH69-00593A	CUSHION R	1	FOR SET	
	P 4	AH69-30012T	POLY BAG	1	FOR SET	
	P 5	AH69-00525A	POLY BAG	1	FOR INSTRUCTIONS	
	P 6	AH81-00694M	CUSHION BOTTOM	1	FOR SPEAKER	
	P 7	AH81-00694L	CUSHION TOP	1	FOR SPEAKER	
	P 8	AH81-00694K	PE-BAG	2	FOR SPEAKER	
	P 9	AH81-00694N	PACKING CASE	1	FOR SPEAKER	B,E,EN

■ Parts list (Accessories)

Block No. M5MM

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
	A 1	AH68-01064D	INSTRUCTIONS	1	ENG	B
		AH68-01064E	INSTRUCTIONS	1	GER,FRE,DUT	E
		AH68-01064F	INSTRUCTIONS	1	GER,FRE,SPA,ITA	EN
		AH68-01064F	INSTRUCTIONS	1	SWE,FIN,DAN	EN
		AH68-01064G	INSTRUCTIONS	1	RUS,POL,CZE,HUN	EV
	A 2	AH59-01045F	REMOCON ASSY	1	RM-SMXG500R	
	A 3	AH38-10001A	FM-WIRE	1		
	A 4	AH42-20001P	ANT LOOP	1		
	A 5	----------	BATTERY	2		
	A 6	AH68-00415F	WARANTY CARD	1		EV
		AH68-00415D	WARANTY CARD	1		B,E,EN
	A 7	AH68-00415C	IMPORTANT CARD	1		B
	A 8	MXG700R-SPBOX-L	SPK.WITH BOX	1		
	A 9	MXG700R-SPBOX-R	SPK.WITH BOX	1		

JVC

SCHEMATIC DIAGRAMS

COMPACT COMPONENT SYSTEM

MX-G700R

CD-ROM No.SML200205

Area suffix

B ---------- U.K.
E ---- Continental Europe
EN ----- Northern Europe
EV ------- Eastern Europe

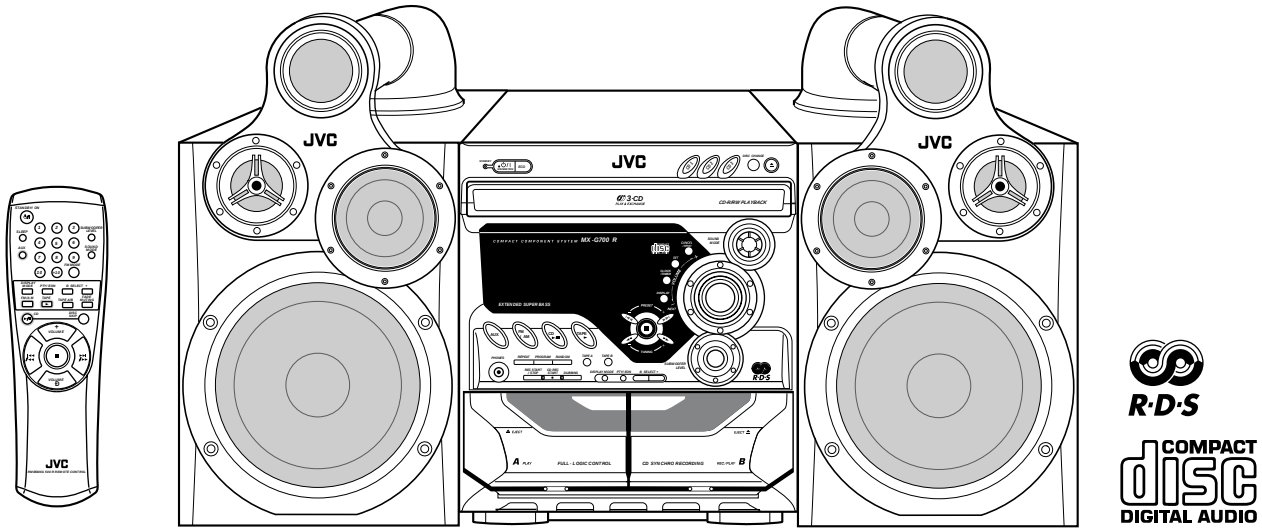

SP-MXGT700 **CA-MXG700R** **SP-MXGT700**

Contents

Block diagram ---------- 2-1
Standard schematic diagrams ---------- 2-2
Printed circuit boards ---------- 2-7~10

COPYRIGHT Ⓒ 2002 VICTOR COMPANY OF JAPAN, LTD.

No.21103SCH
May. 2002

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (▬), diode (▬) and ICP (●) or identified by the "⚠" mark nearby are critical for safety.

(This regulation does not correspond to J and C version.)

Block diagram

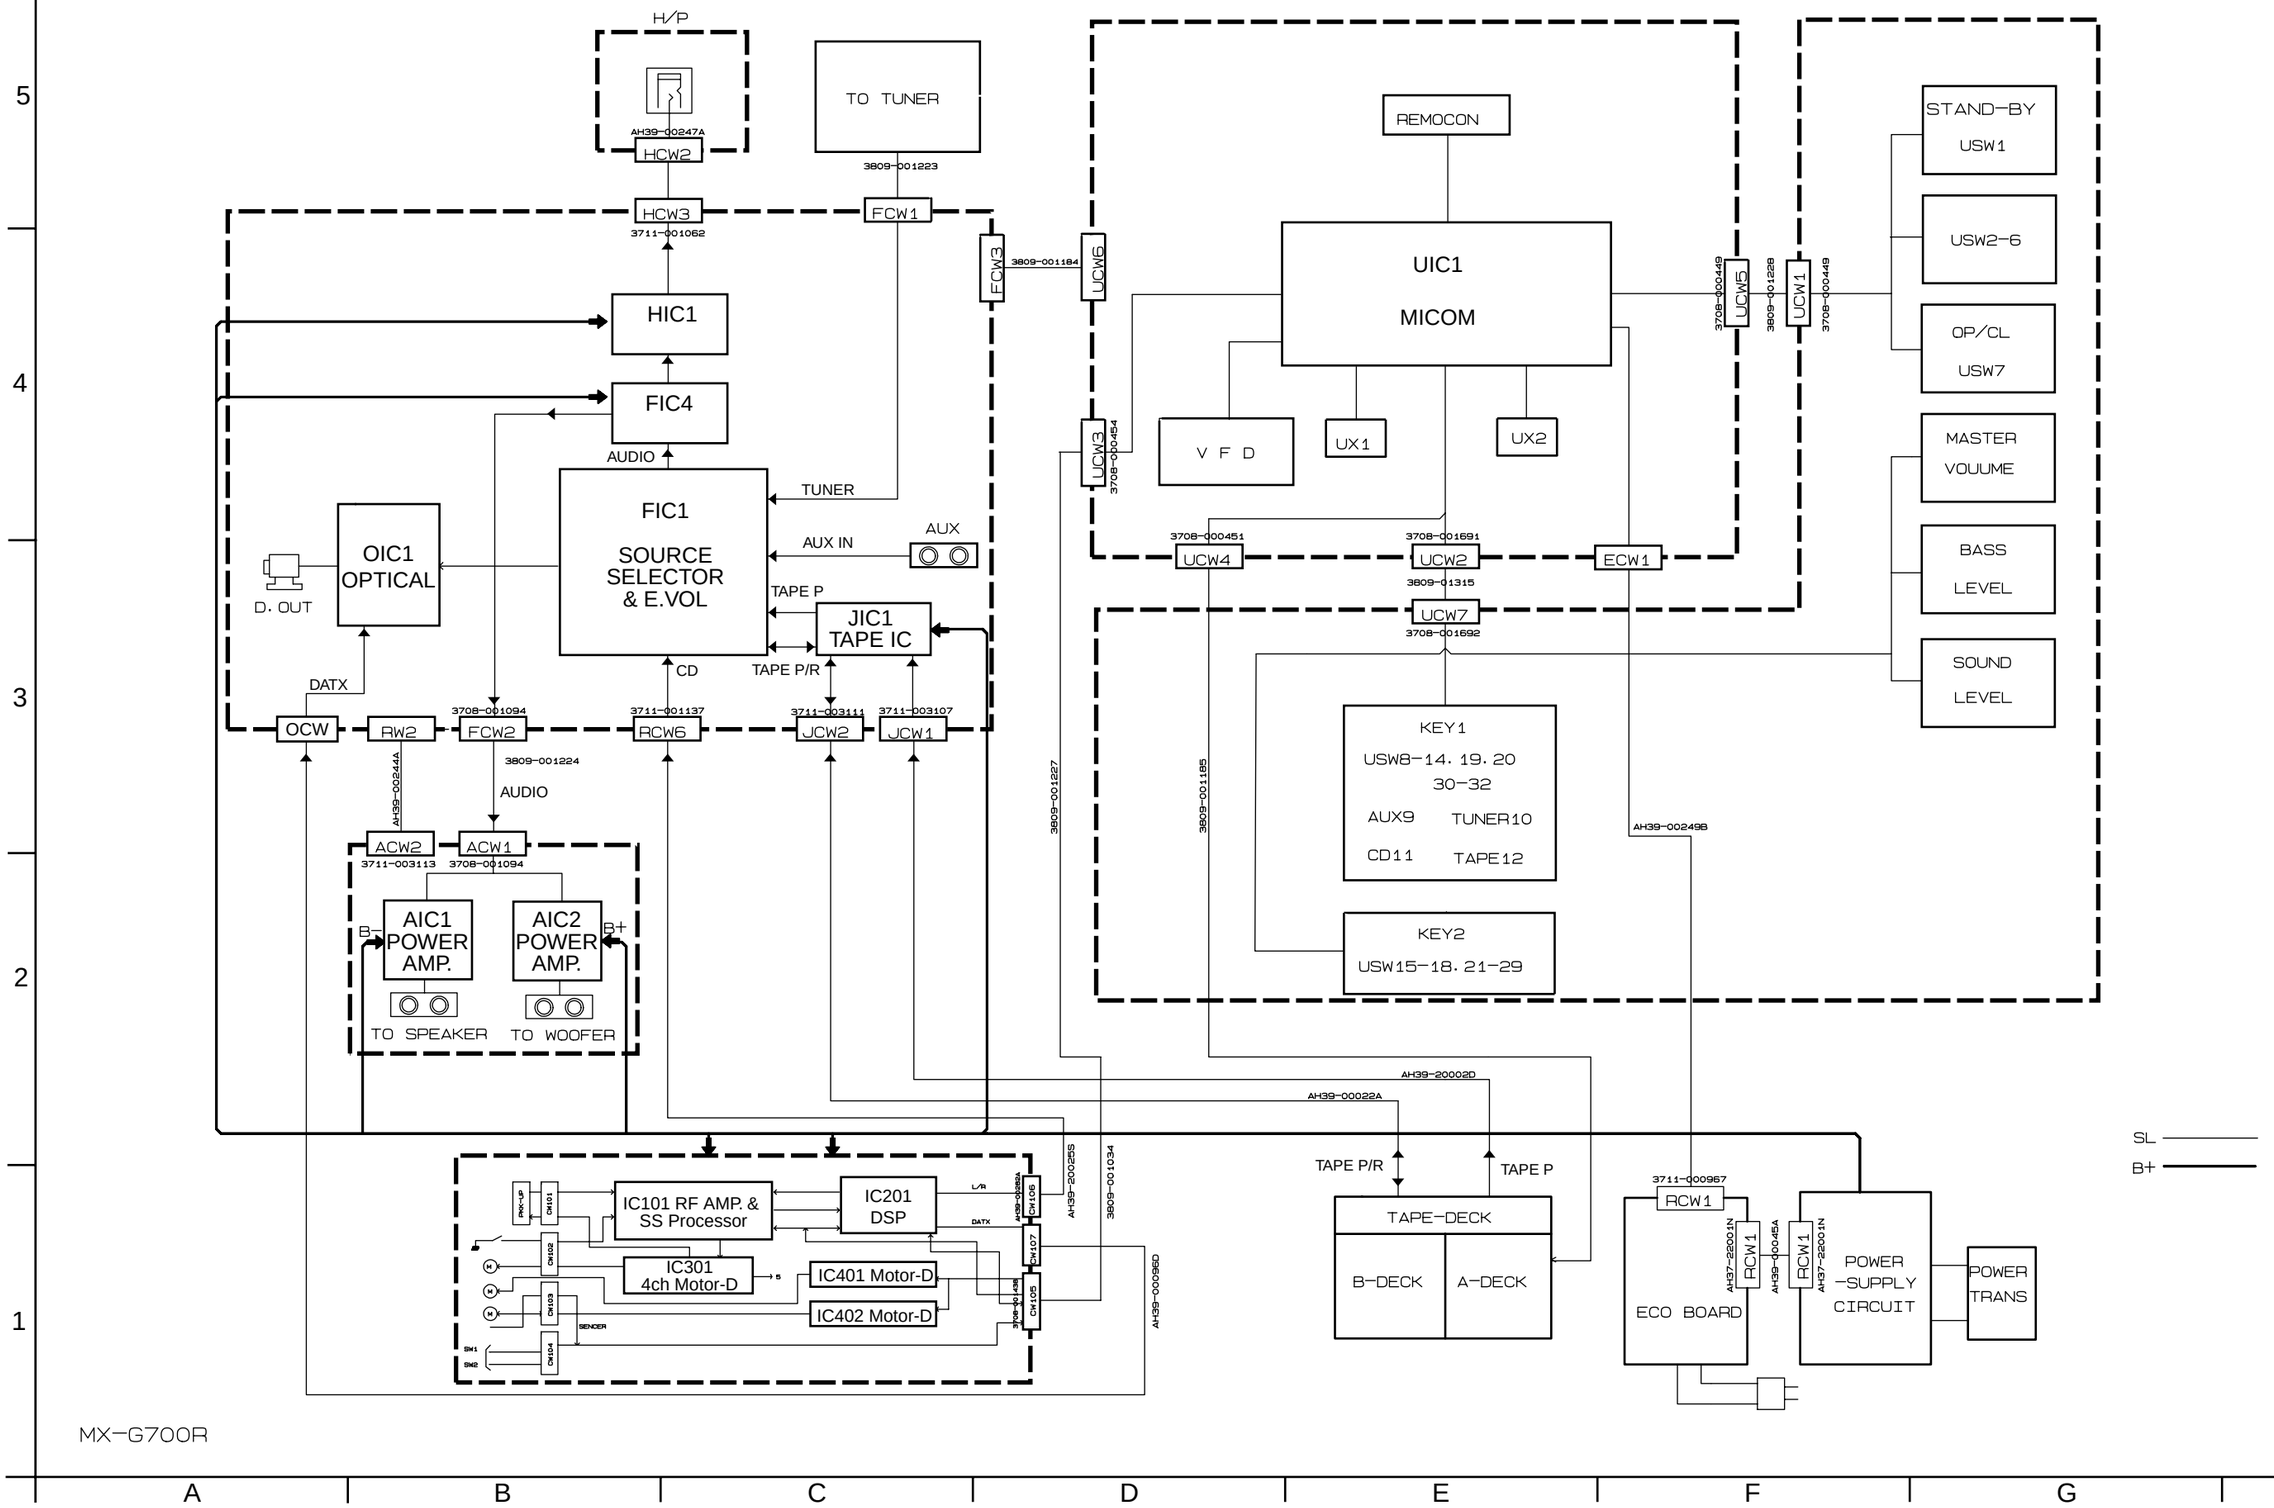

MX-G700R

Standard schematic diagrams

■ Main section

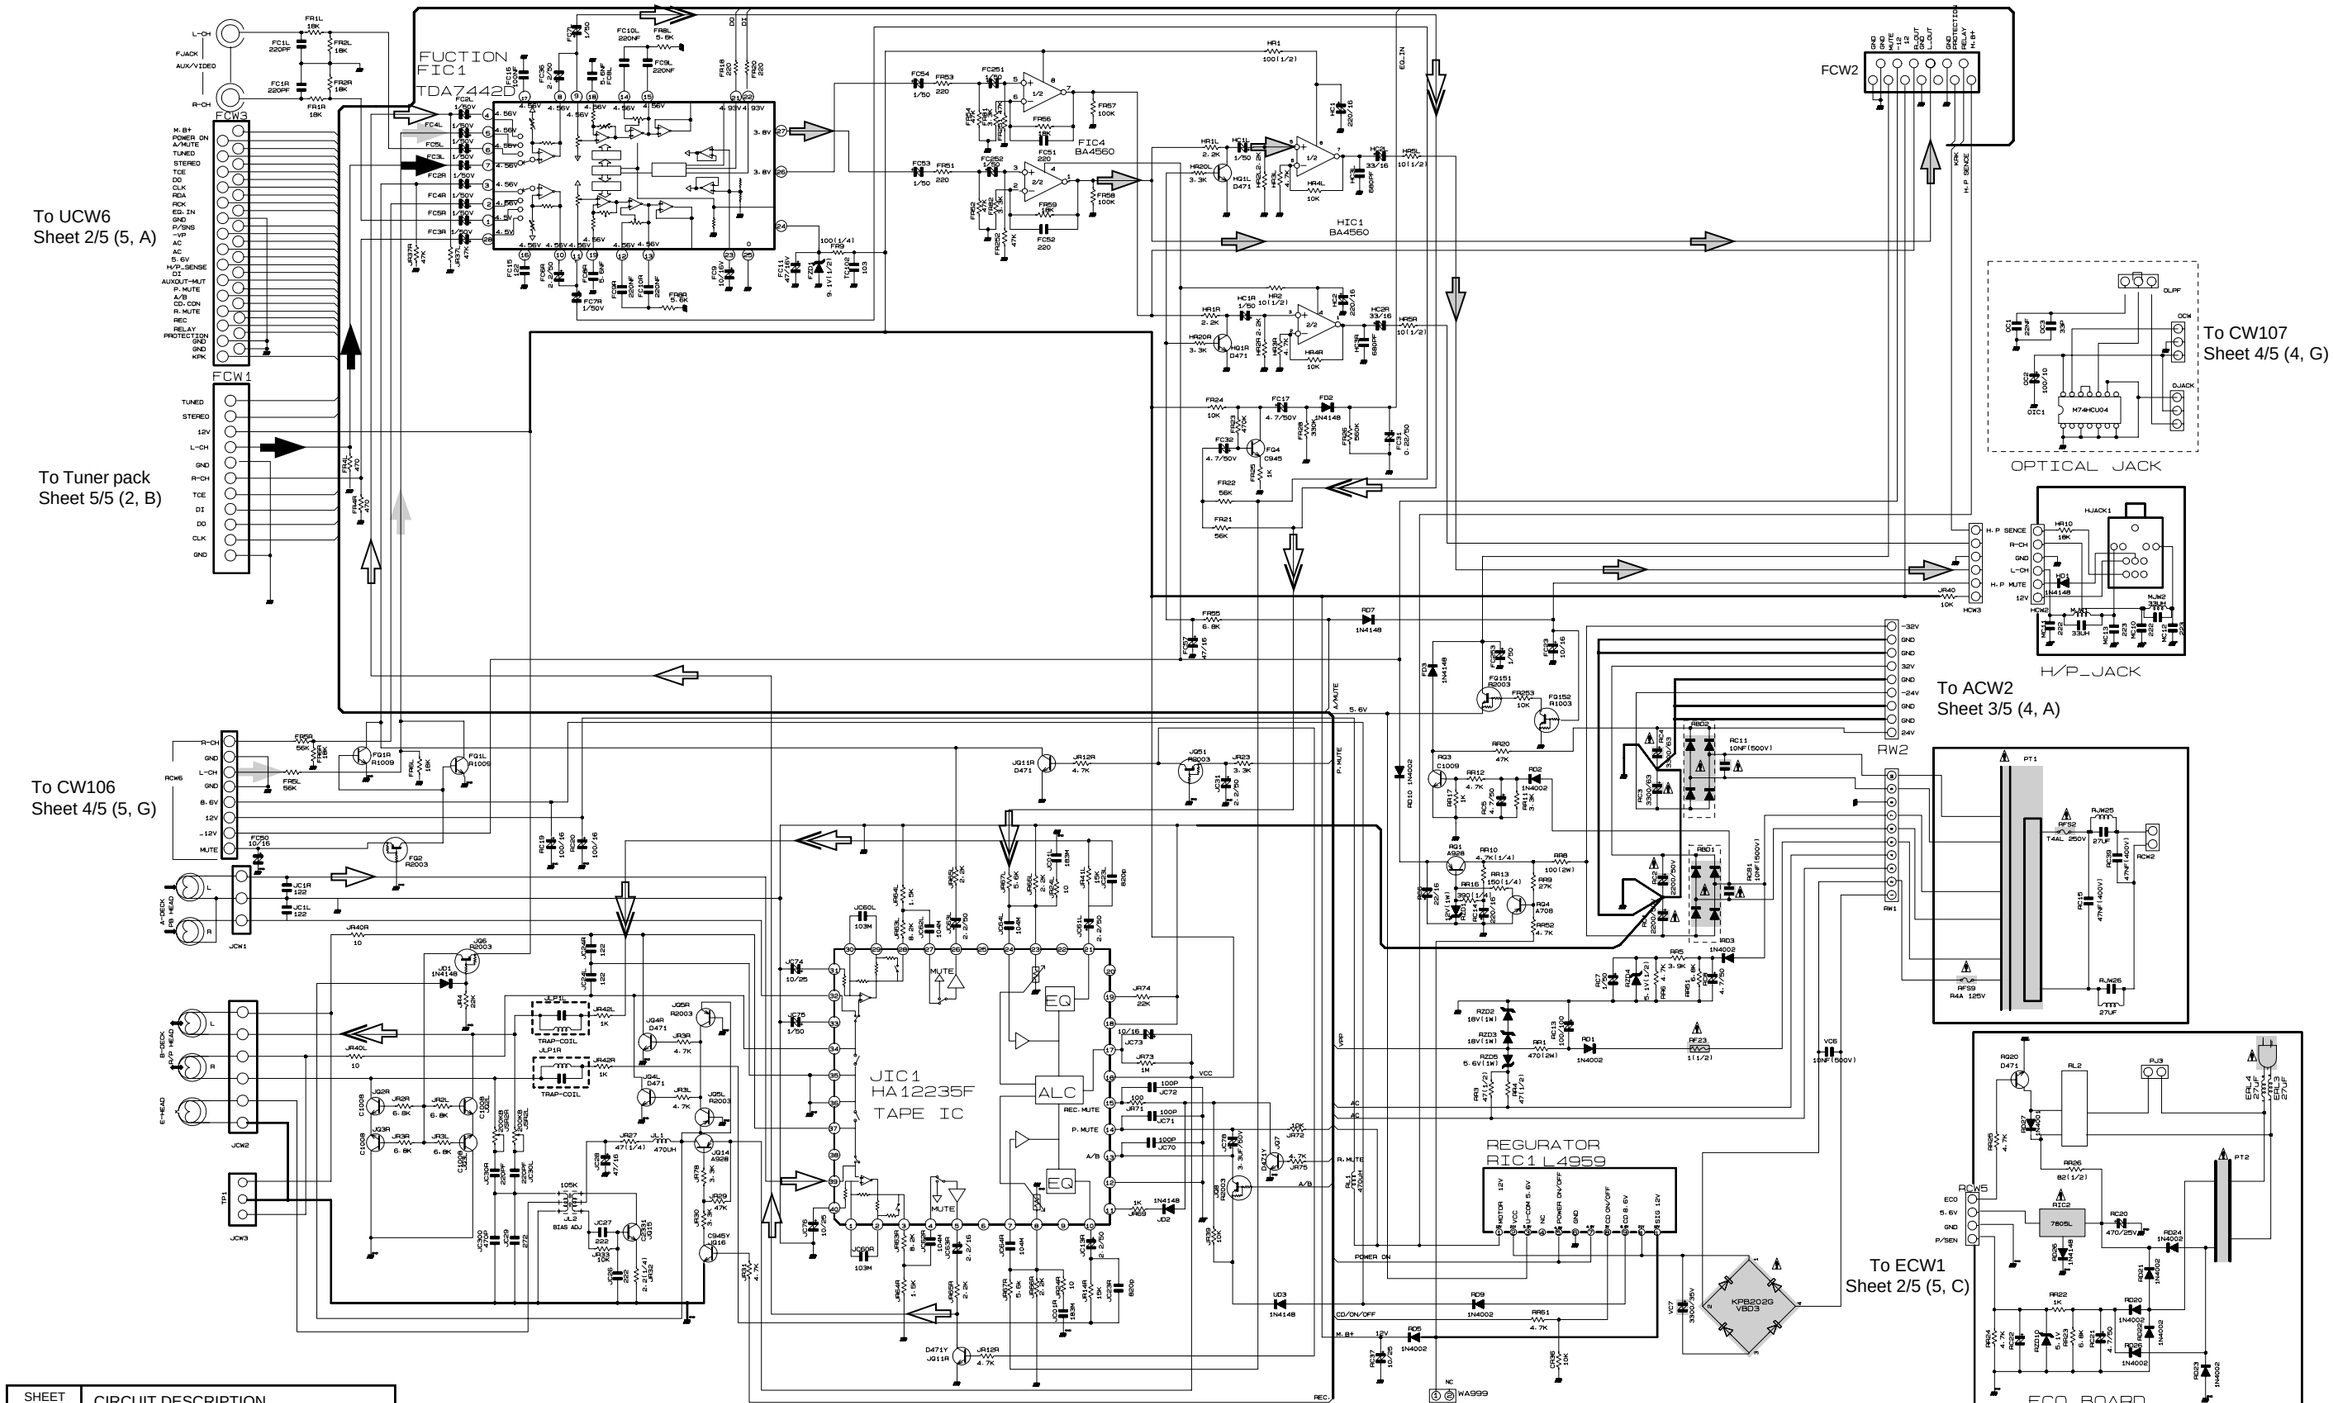

SHEET NUMBER	CIRCUIT DESCRIPTION
1/5	Main
2/5	FL display & System control
3/5	Amp.
4/5	CD
5/5	Tuner

MAIN signal
TUNER signal
CD signal
TAPE P.B. signal
TAPE REC. signal

⚠ Parts are safety assurance parts. When replacing those parts, make sure to use the specified parts.

■ FL display & System control section

To UCW7

To CW105
Sheet 4/5 (1, E)

To RCW5
Sheet 1/5 (1, G)

To FCW3
Sheet 1/5 (5, A)

To UCW2

To UCW5

To UCW1

SHEET 2/5

■ Amp. section

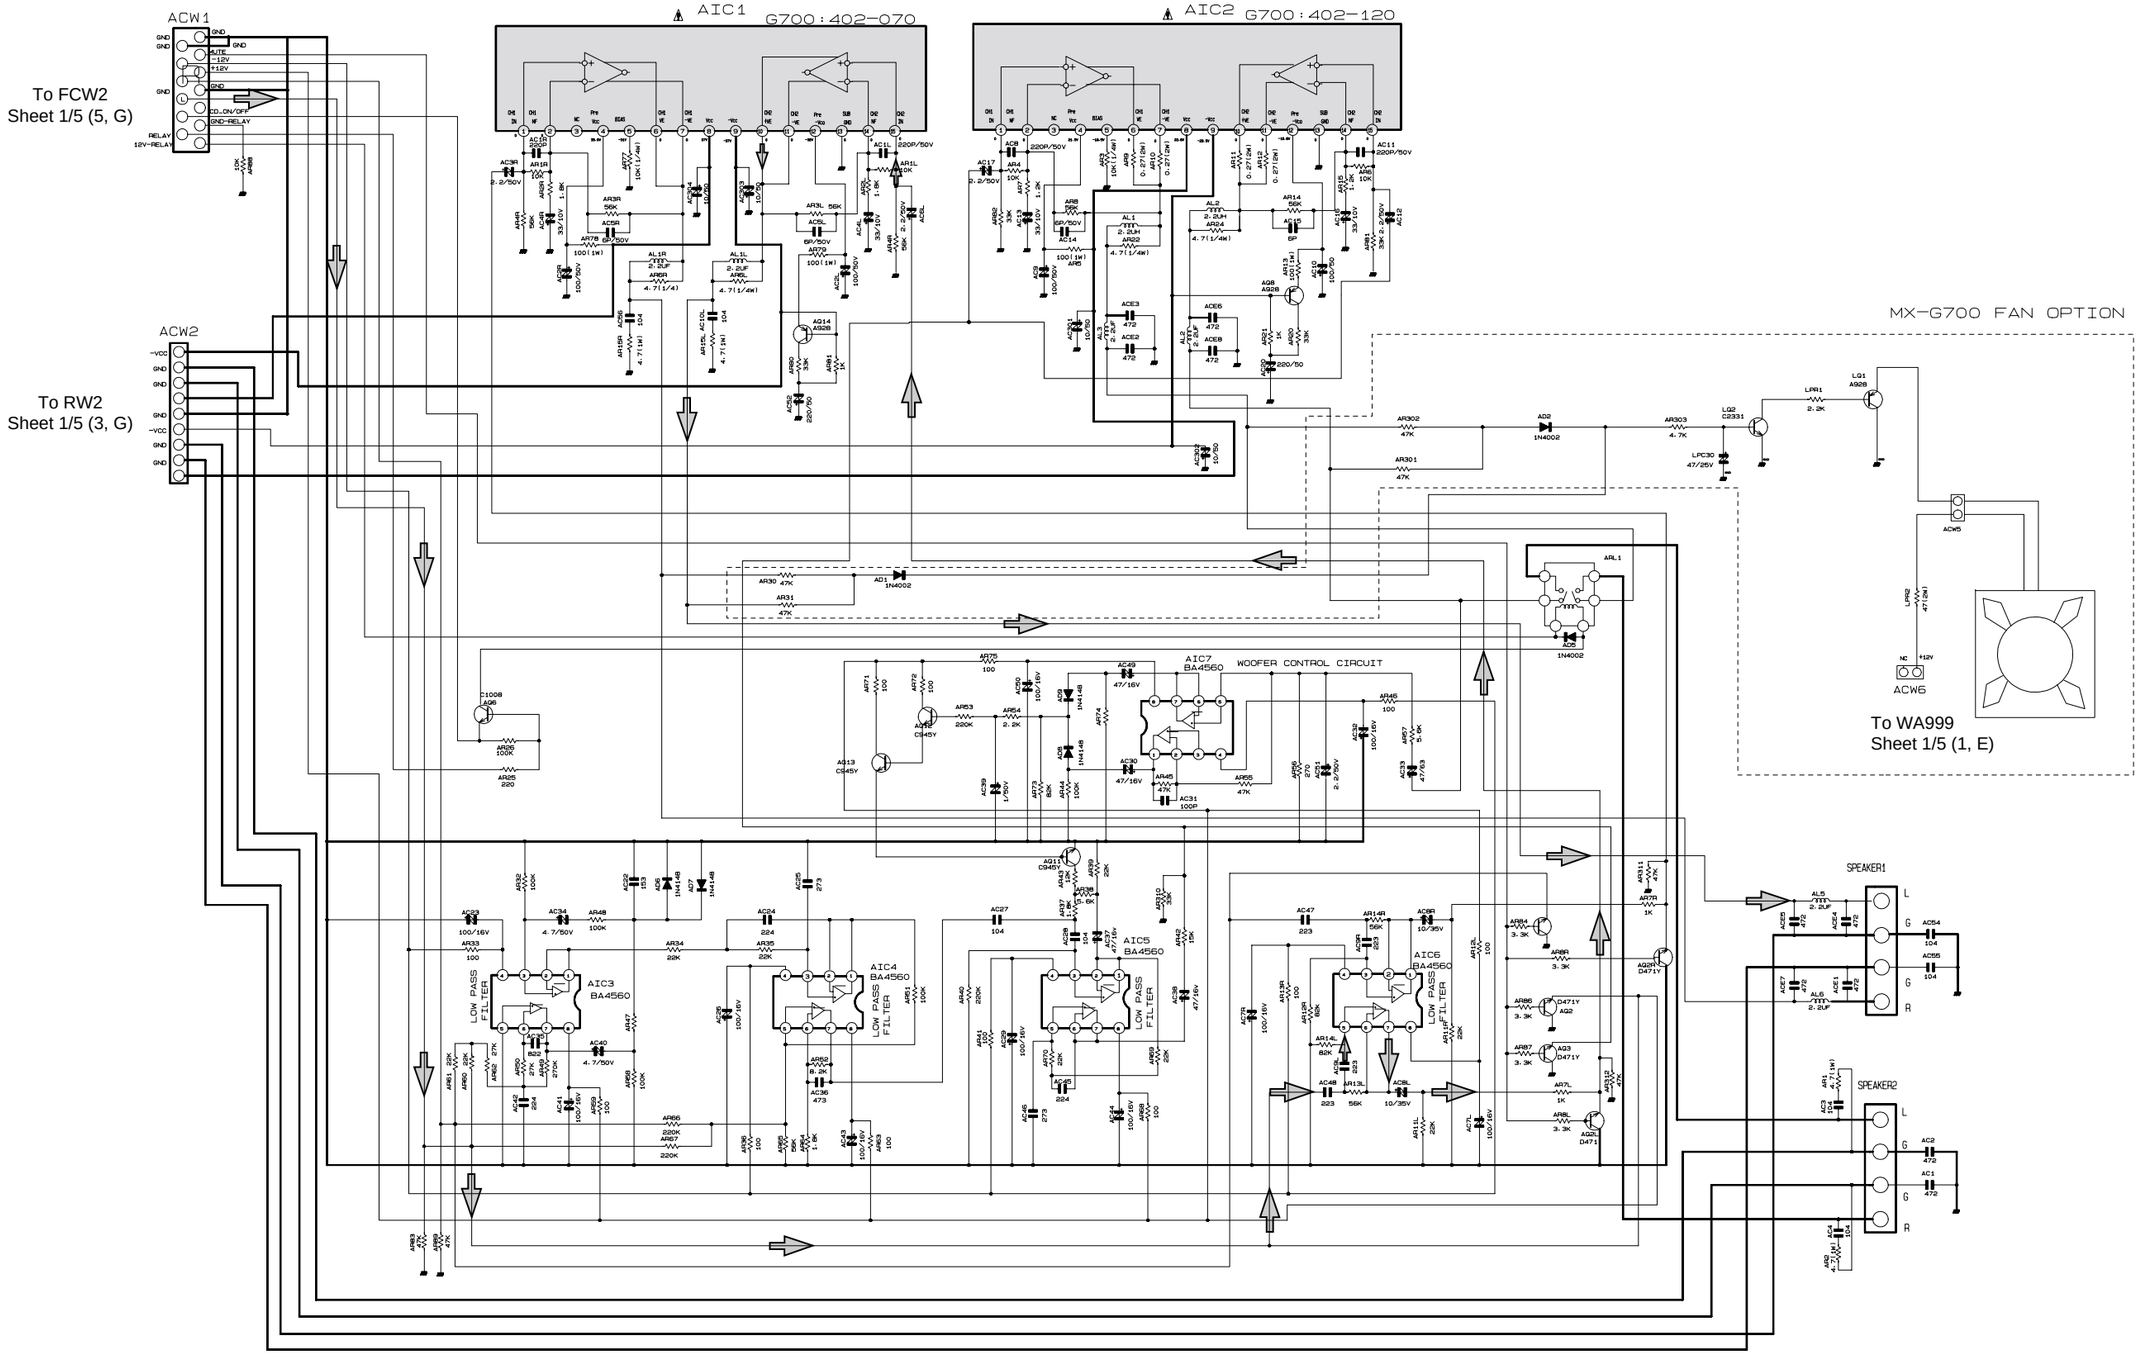

MAIN signal

⚠ Parts are safety assurance parts. When replacing those parts, make sure to use the specified parts.

■ CD section

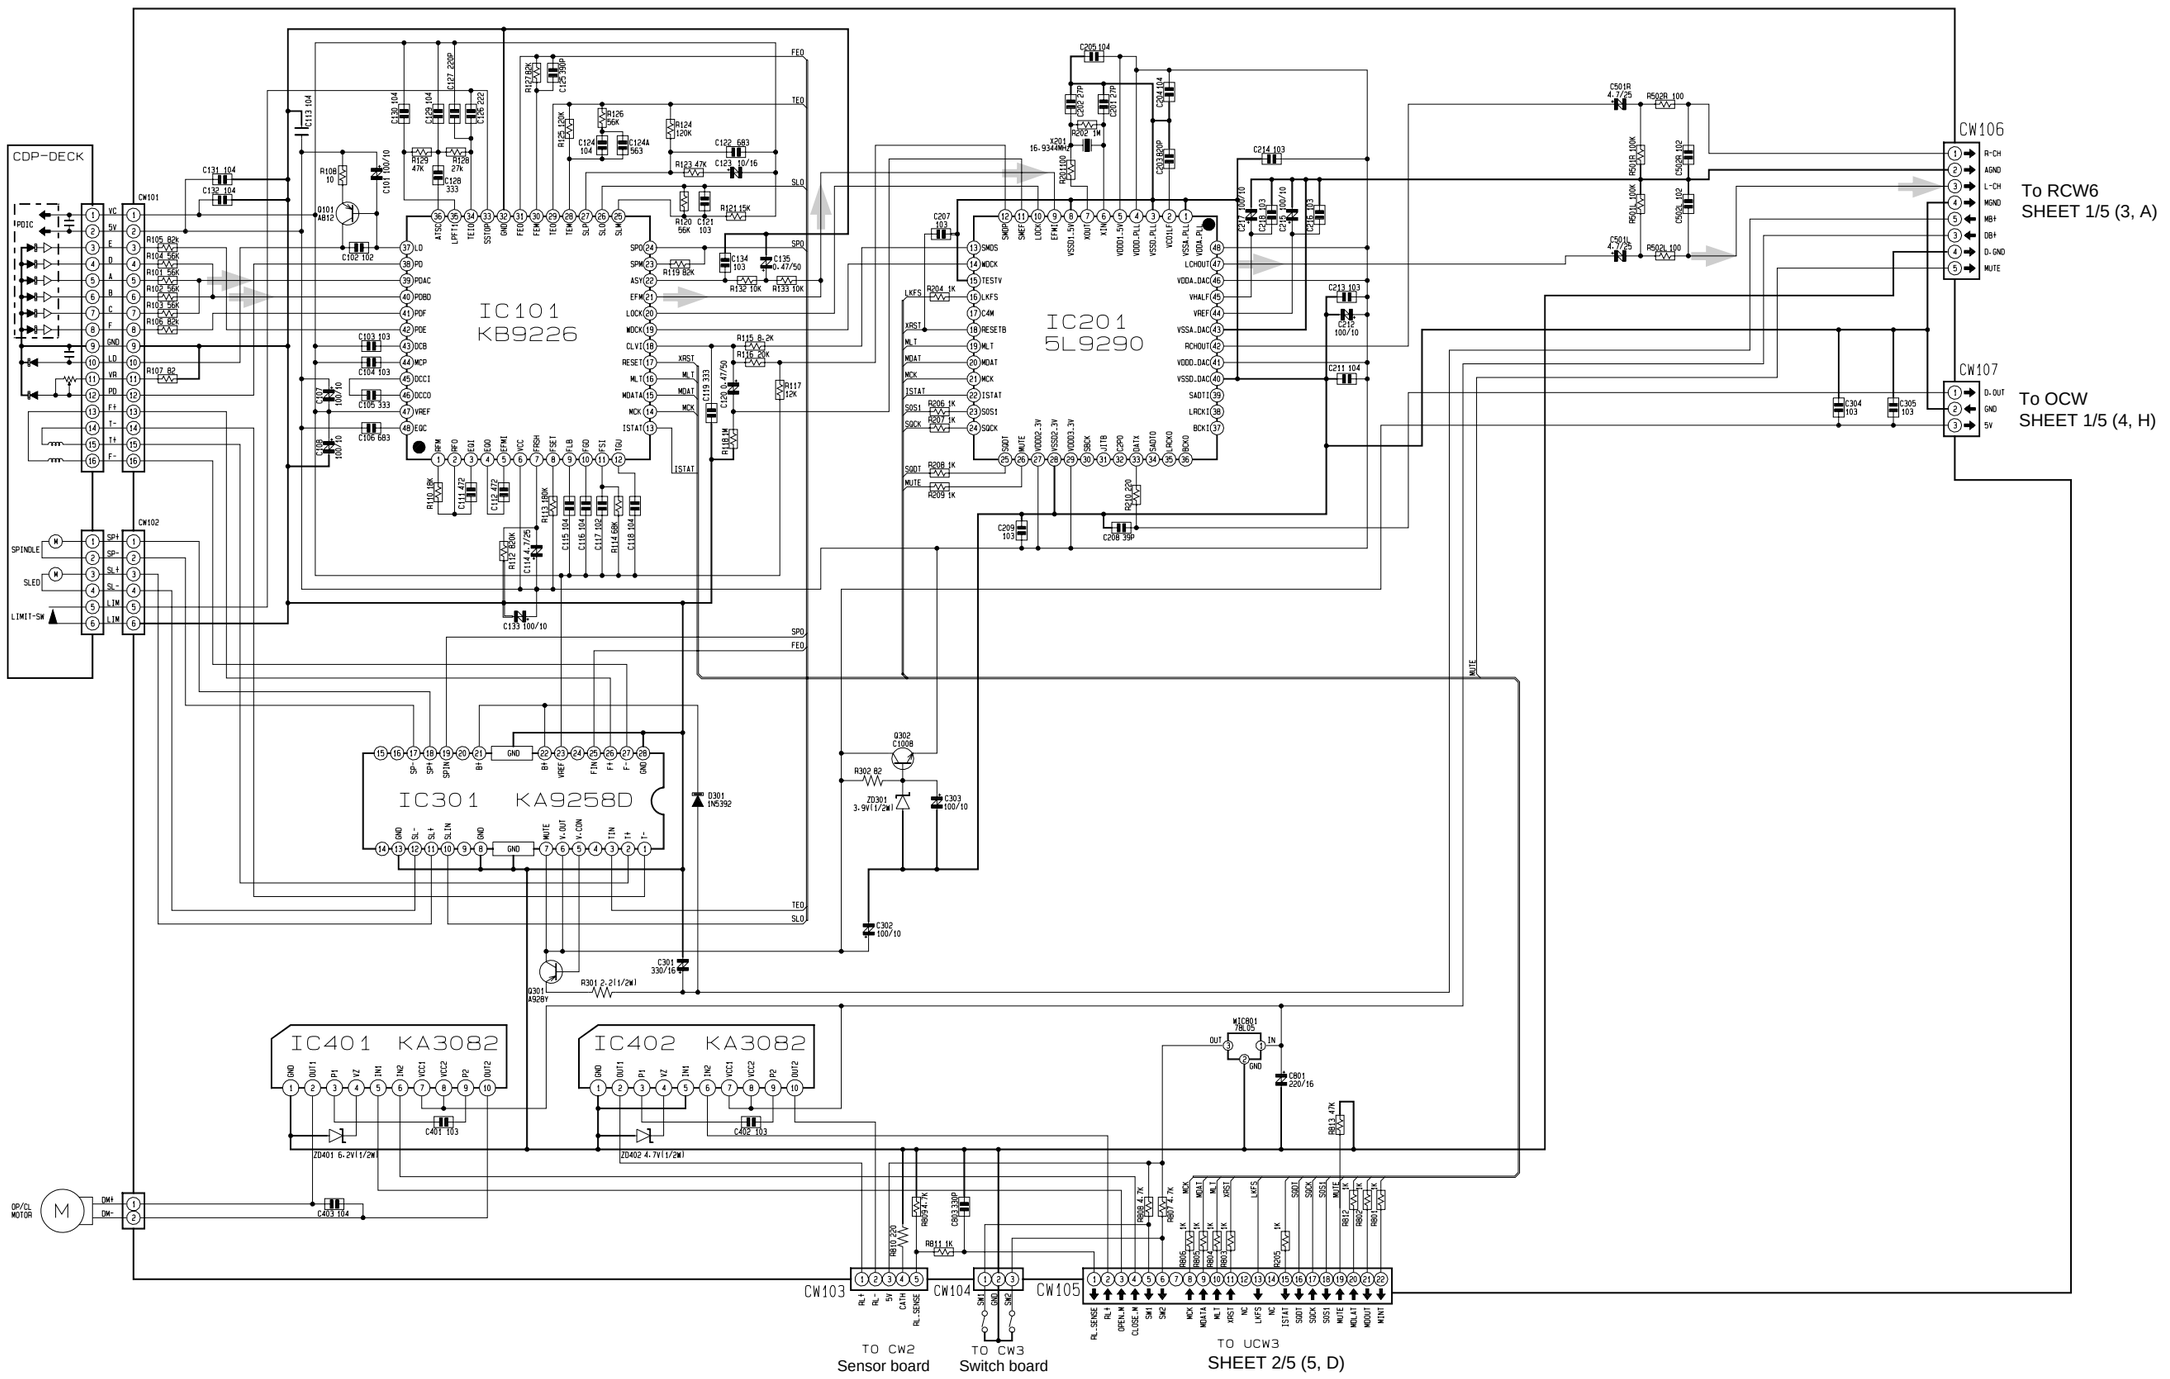

SHEET 4/5

■ Tuner section

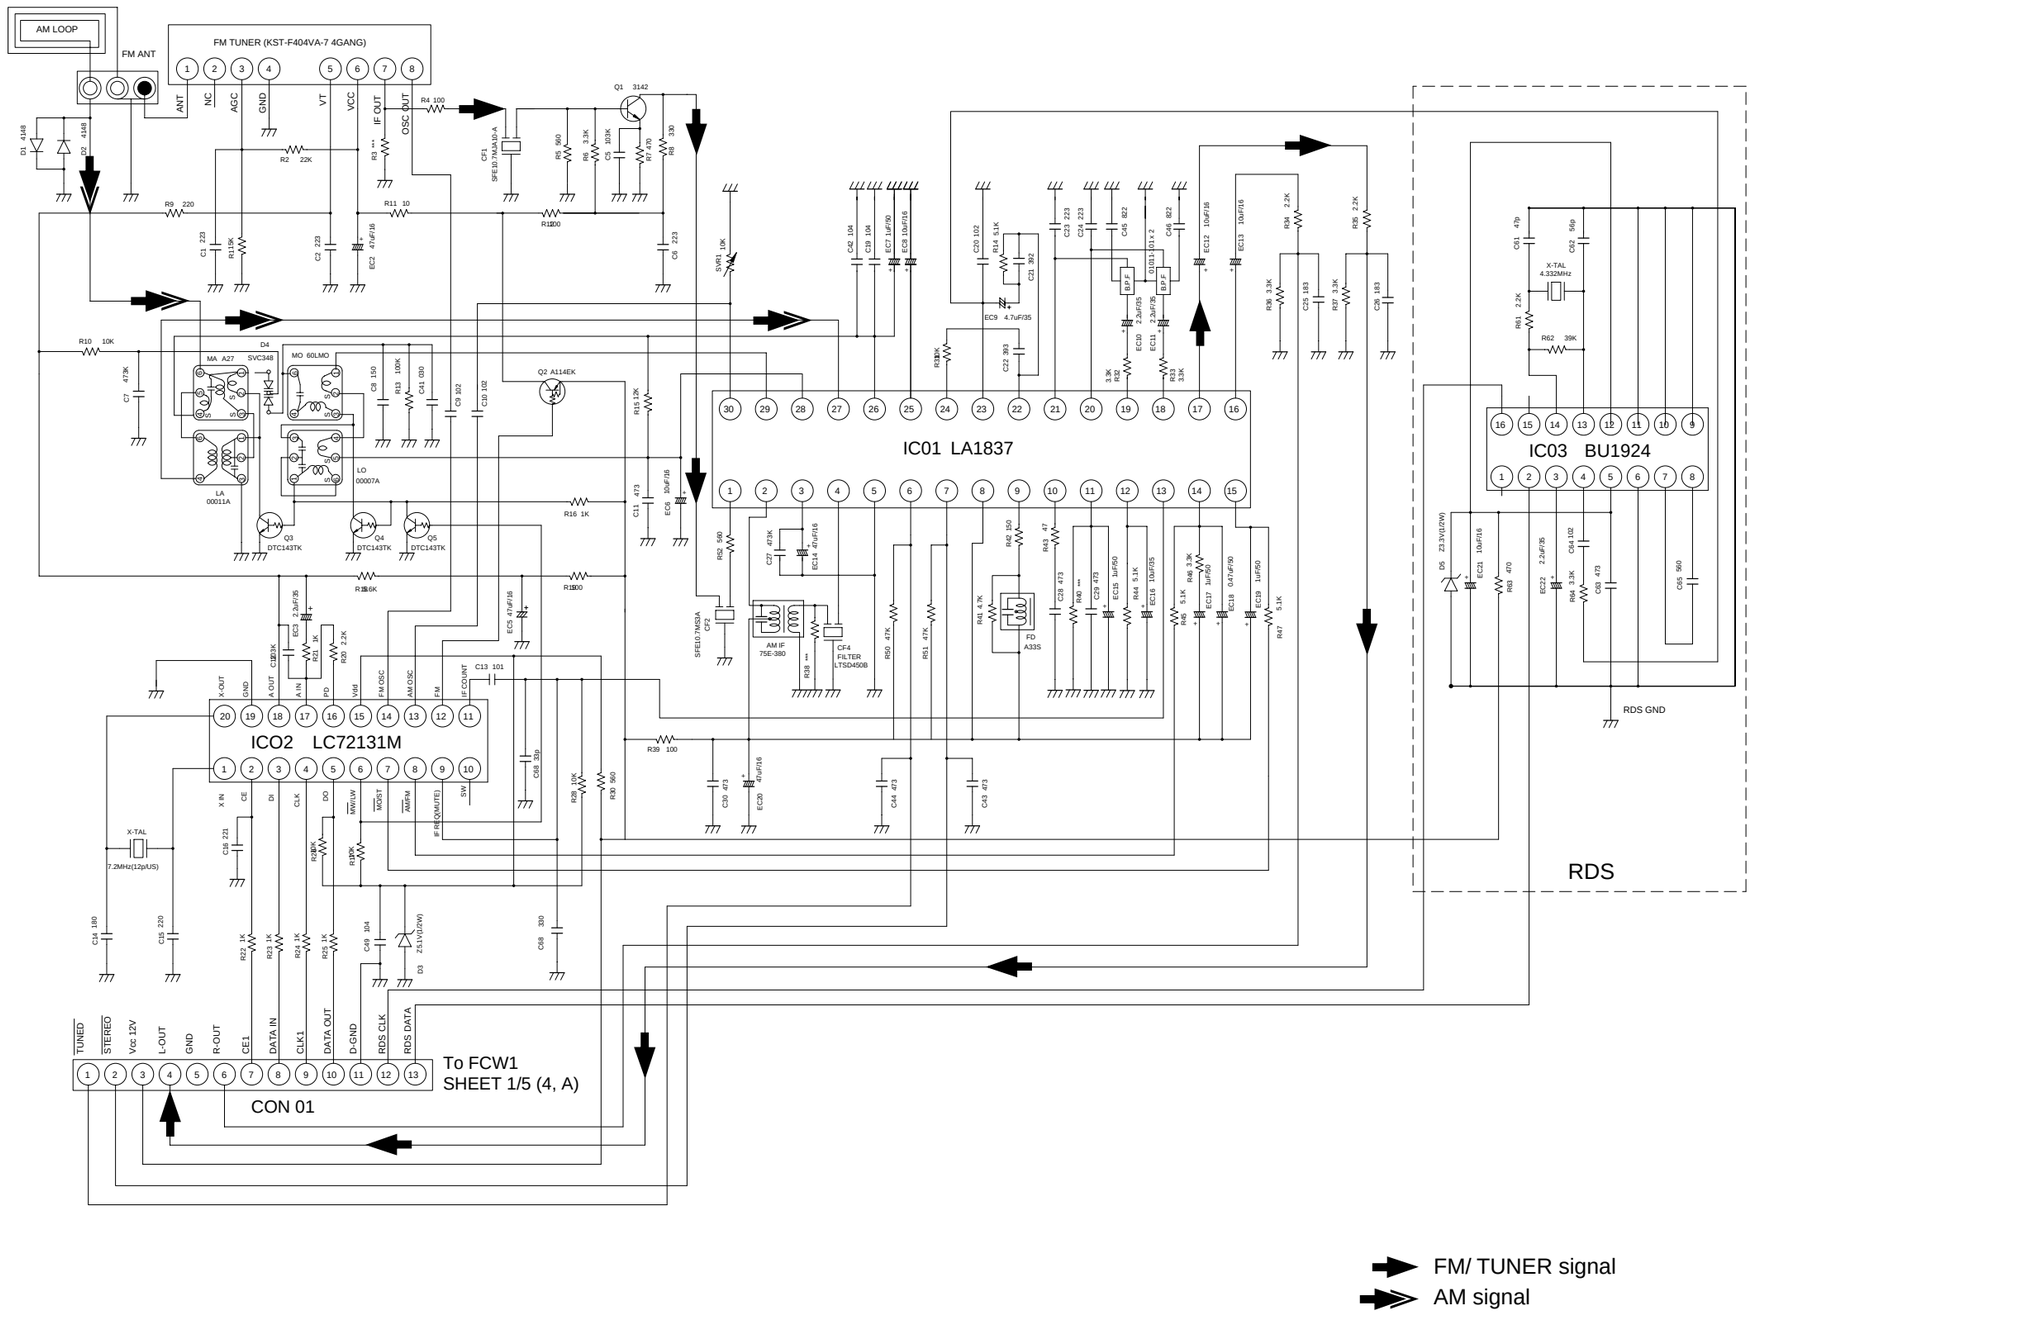

Printed circuit boards

■ Main board

Main board

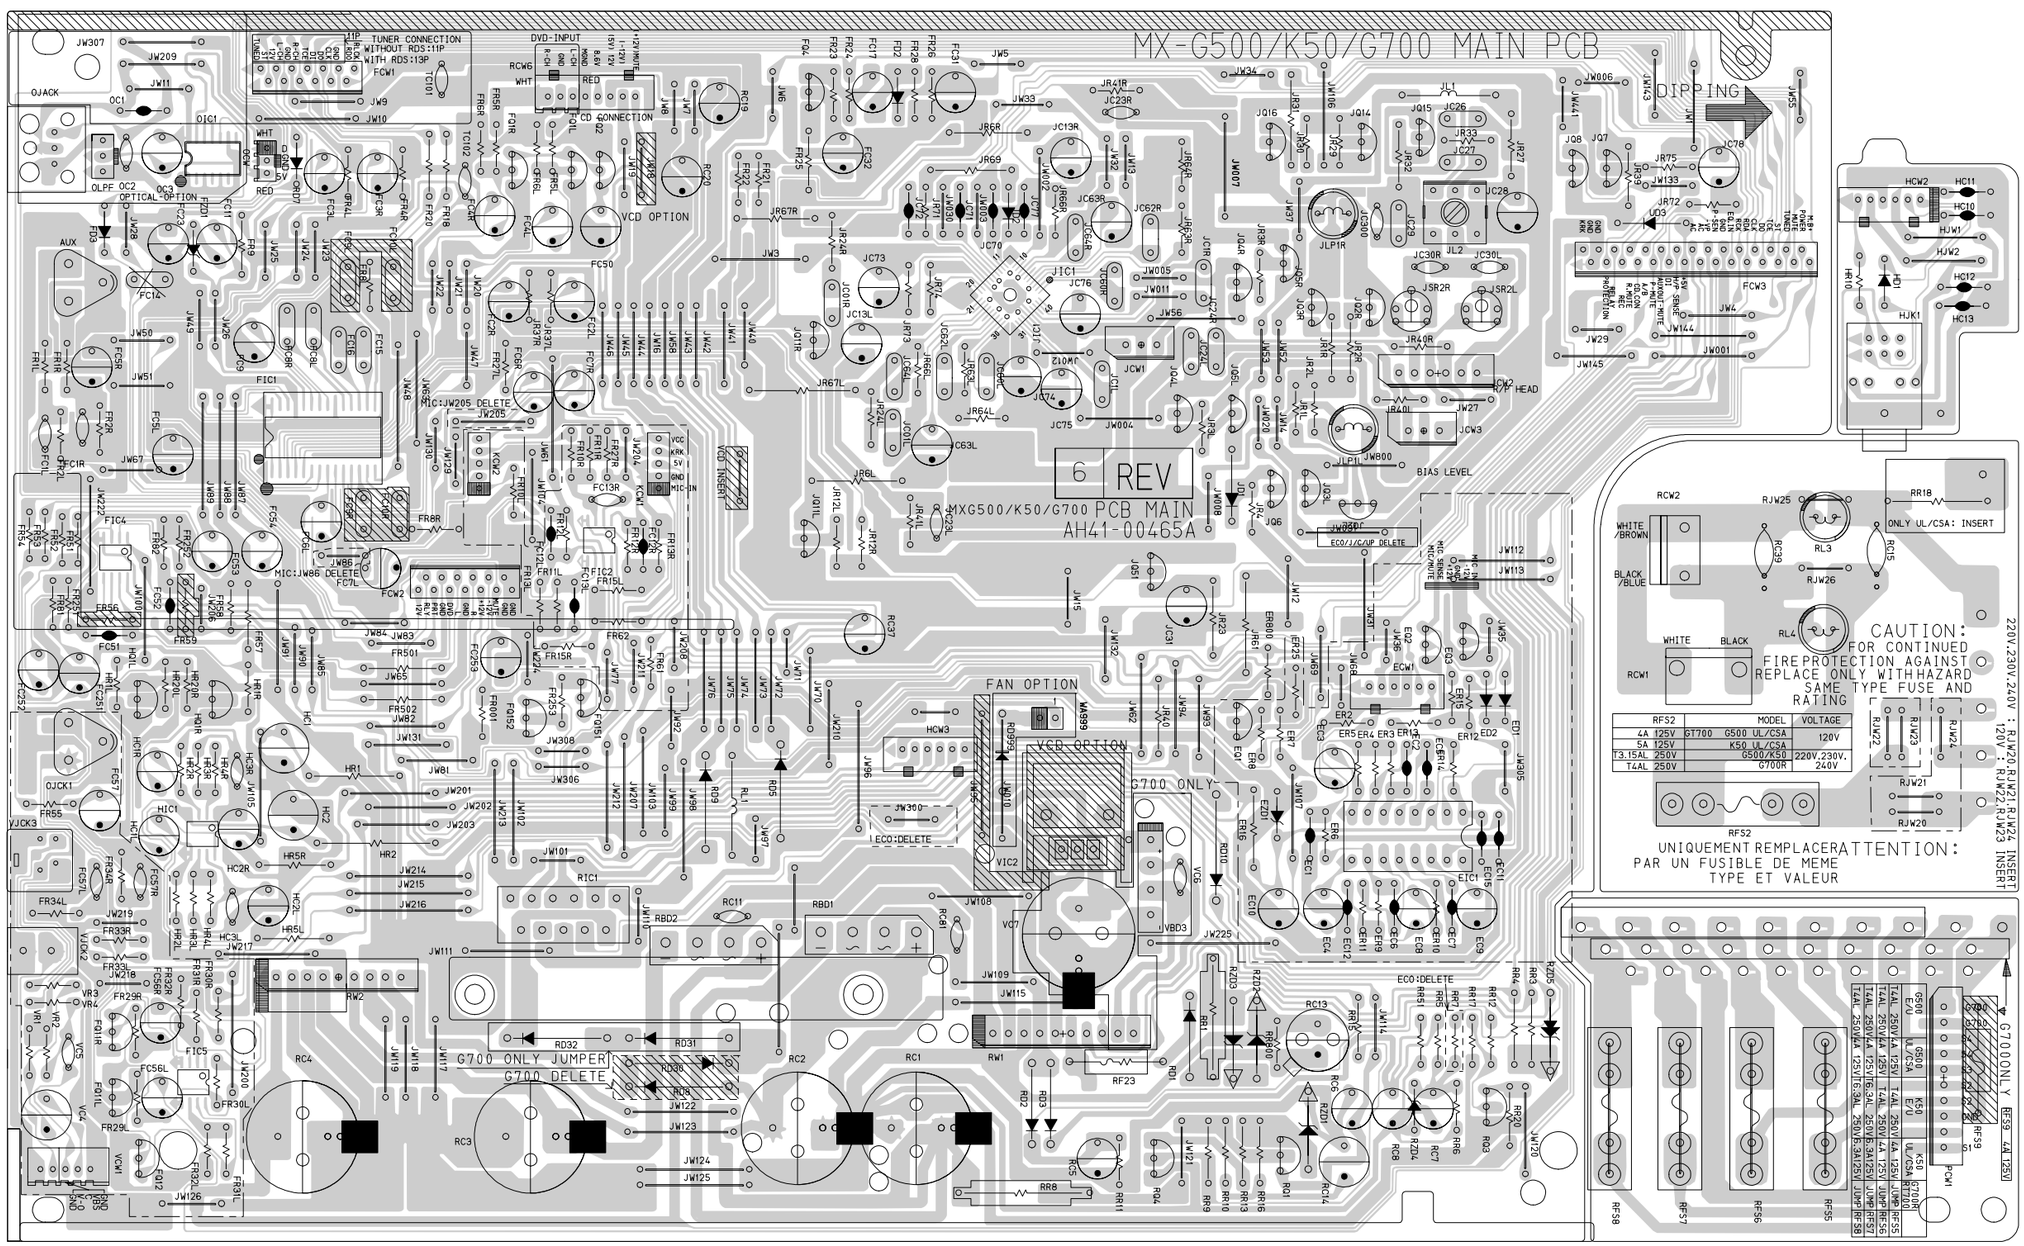

Headphone jack board

Trans. board

Fuse board

■ Front board

CD switch board

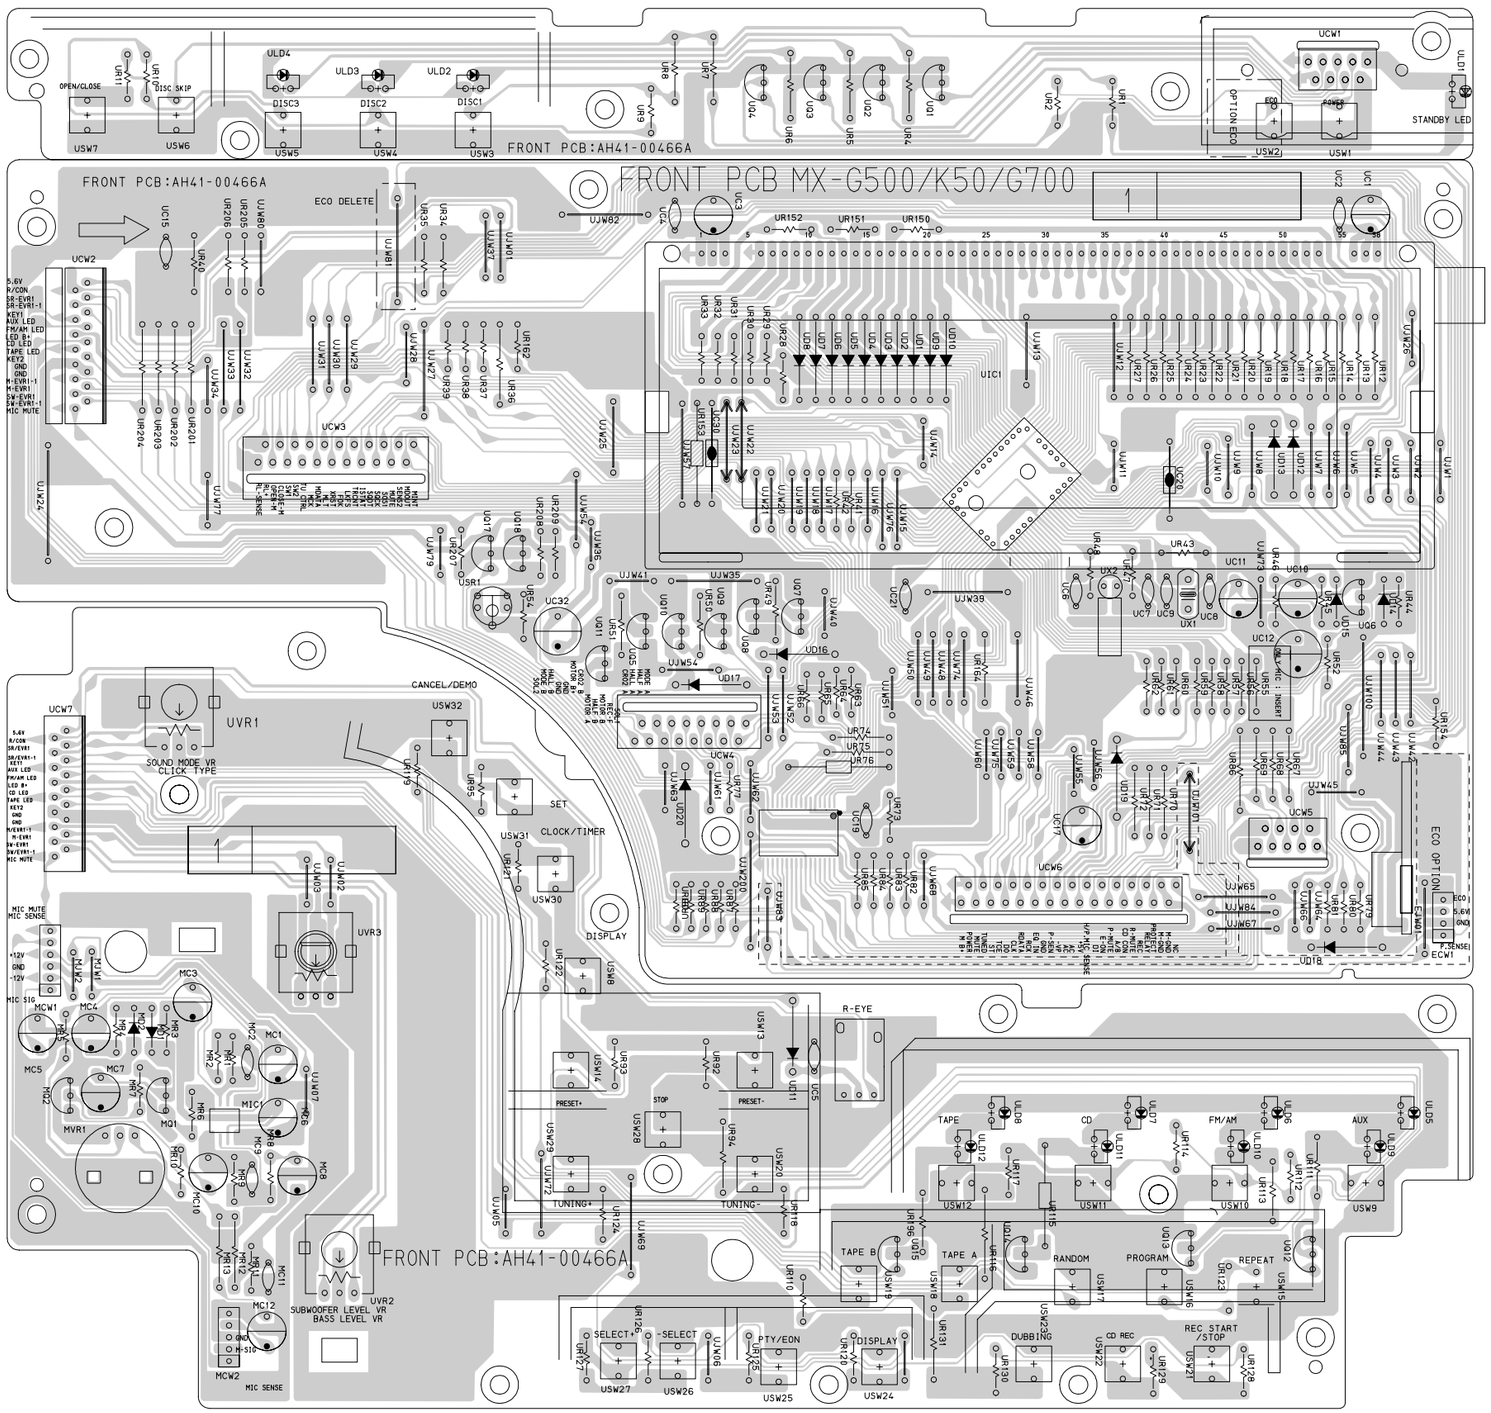

Front board

Front key board

■ Amp. board

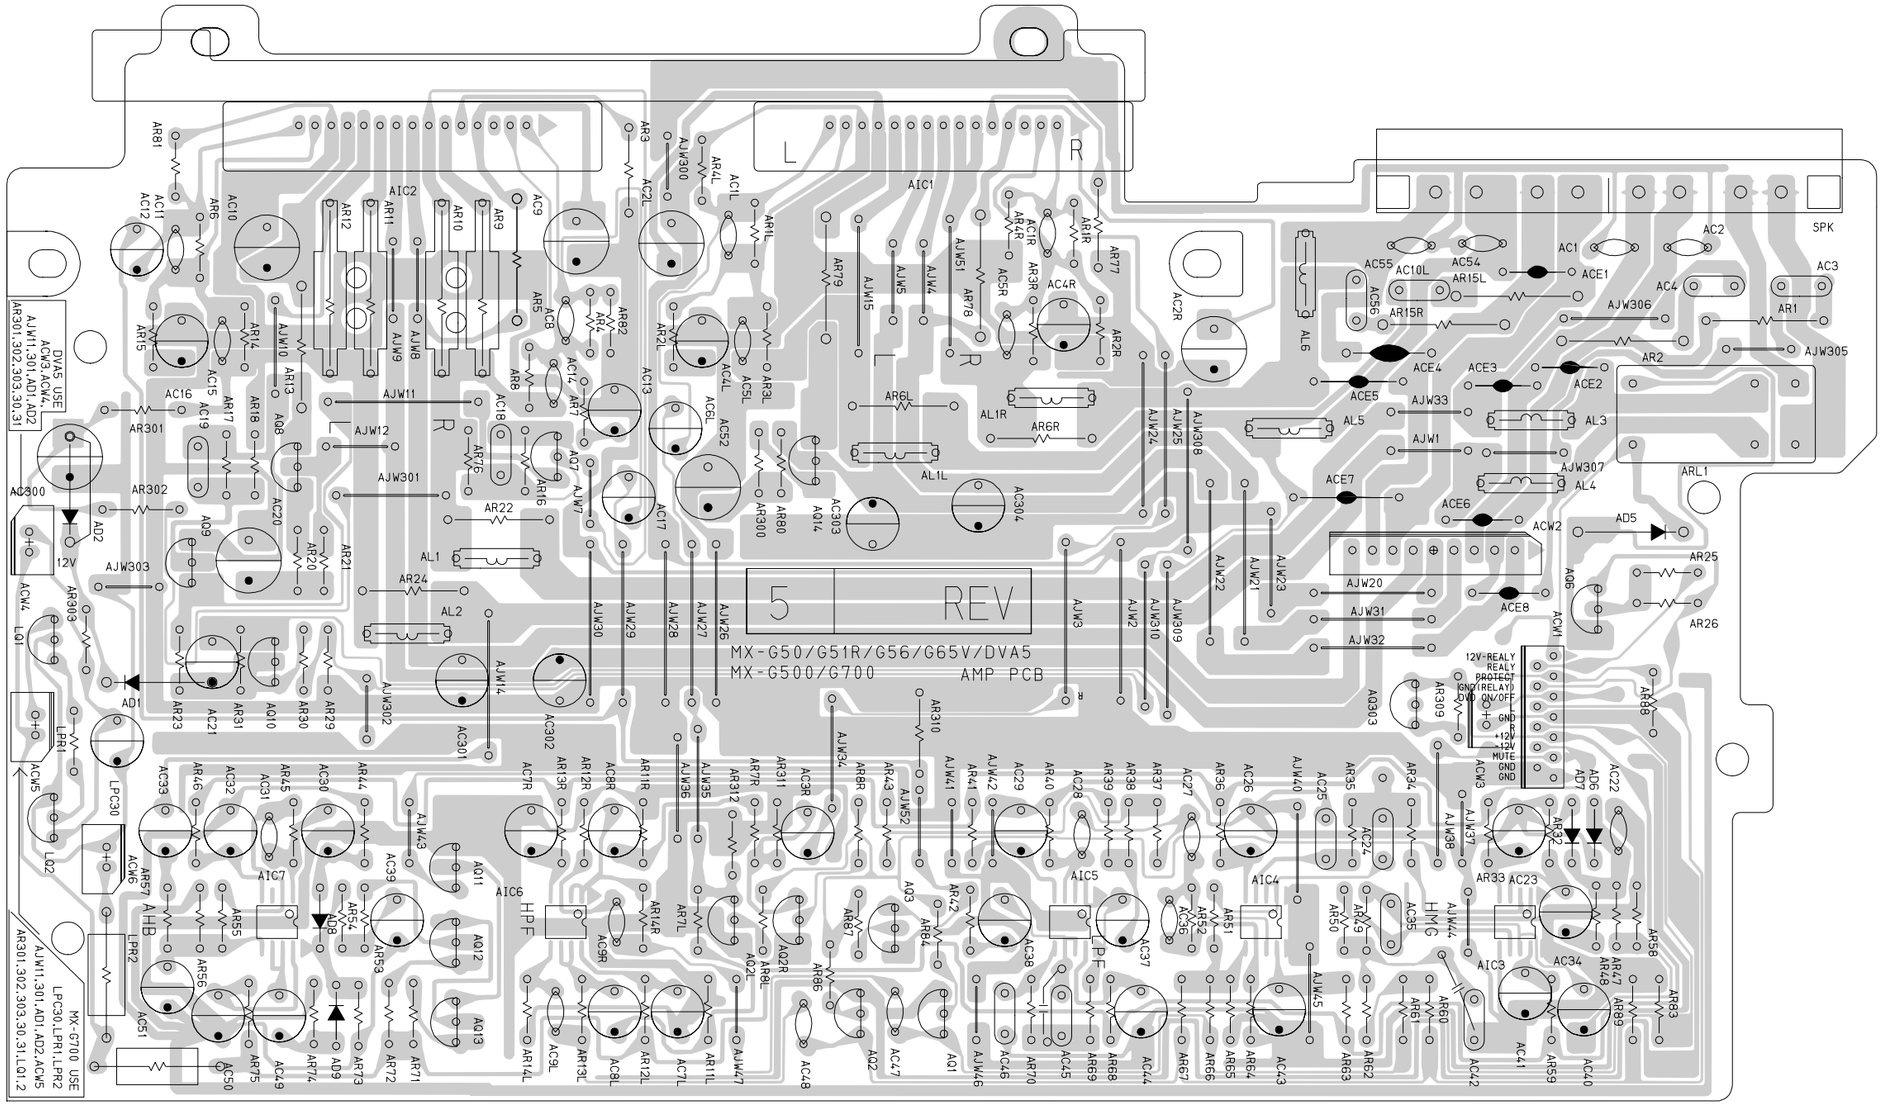
MX-G50/G51R/G56/G65V/DVA5
MX-G500/G700 AMP PCB
REV
5
L
R
SPK
HPF
LPF
HMC
AHB
12V
DVA5 USE
ACW3.ACW4.
AJW11.301.AD1.AD2
AR301.302.303.30.31
MX-G700 USE
LPC30.LPR1.LPR2
AJW11.301.AD1.AD2.ACW5
AR301.302.303.30.31.LQ1.2
12V-REALY
REALY
PROTECT
GND
RELAY
ON/OFF
GND
+12V
+12V
MUTE
GND
GND

■ CD board

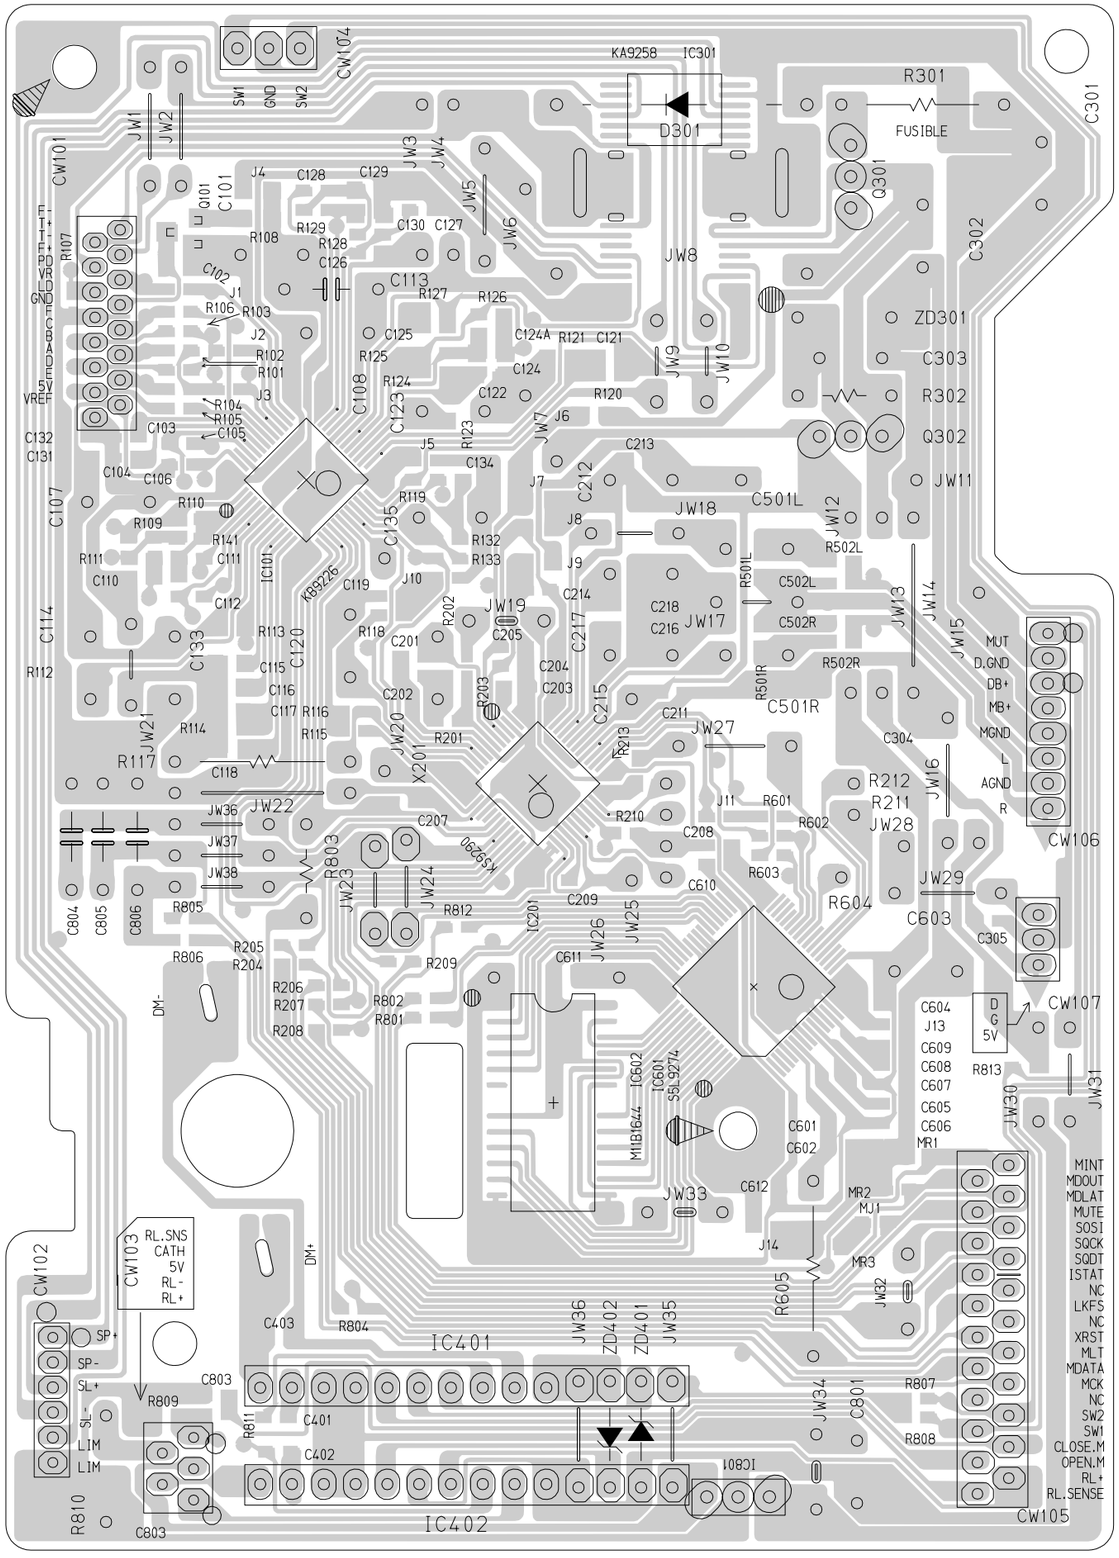

■ Tuner board

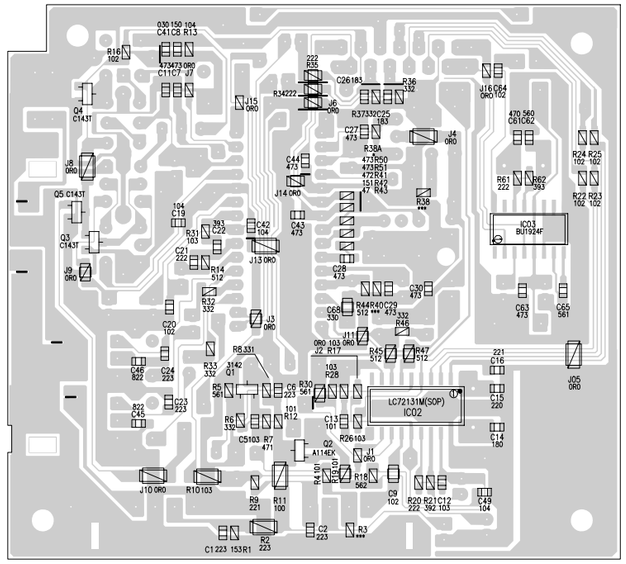

■ ECO board

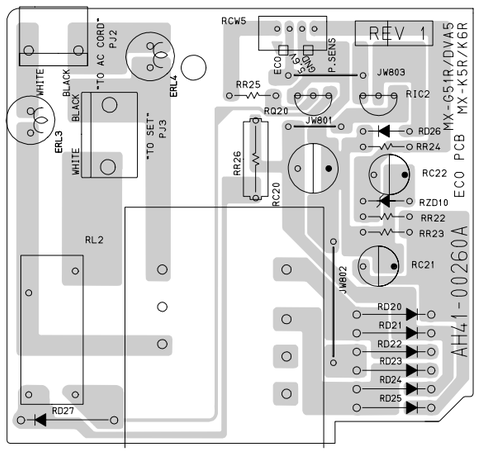

< MEMO >

MX-G700R

VICTOR COMPANY OF JAPAN, LIMITED
AUDIO & COMMUNICATION BUSINESS DIVISION
PERSONAL & MOBILE NETWORK BUSINESS UNIT. 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan

(No.21103SCH) 200205